

INSTRUCTION MANUAL

Power The Transmitter

At the back of the Transmitter, install 4 batteries type "AA" or equivalent (not included). Make sure the direction of the batteries is as shown above. Once the batteries are inserted, replace the battery cover. If the unit stops working, it's most likely that the batteries need replacing.

Note: Dispose of old batteries safely. Do not throw them in the fire. If you're not using the remote for a few weeks or more, remove the batteries.

Transmitter Operation

1. Connect the RCA cable to Audio Source.
(i.e. Stereo Receiver, TV, etc.) so that you can hear sound coming from the source.
2. Turn on the Transmitter unit to "ON" mode. Power LED will light up.
3. Turn on your Audio Source.
4. Adjust the Transmitter volume as desired.

WARNING: DO NOT connect the Dual RCA cable to a speaker output on the radio source. If you use the speaker output of an audio source to connect the transmitter, you will permanently damage the transmitter. It is only designed to work with RCA-type line/variable outputs or headphone outputs only.

Power The Speaker

At the back of the Speaker, install 6 batteries type "AA" or equivalent (not included). Make sure the direction of the batteries is as shown above. Once the batteries are inserted, replace the battery cover. If the unit stops working, it's most likely that the batteries need replacing.

Note: Dispose of old batteries safely. Do not throw them in the fire. If you're not using the remote for a few weeks or more, remove the batteries.

Speaker Operation

1. Turn on the Speaker Power On-Off/Volume Control Wheel to the "On" position (all the way clockwise). Power LED will light up.
2. Adjust the volume level as desired.
3. Adjust the Frequency Volume to best sound.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.