

RECEIVED 17 NOV 2000

C.C. America

KRM 11/10/00

3813

(14)



Ideas Inspired by Parents

Crisp & Clear Rechargeable 900MHz Monitor

Quick Start Instructions

(You'll find detailed instructions inside.)
Please read the safety instructions on page 2.

1. Set up the Parent's Unit

- Install the batteries supplied.
- Plug one of the two A/C adapters provided into the Parent's Unit, and charge unit for 10 to 16 hours (16 preferred).

Note: You may use the Monitor while it is being charged.
c. Once batteries are charged, unit can be used in portable mode (without the A/C adapter).

2. Set up the Child's Unit

 
- Place the unit near your child (within 6 feet, but well beyond child's reach).
- Position the antenna straight up.
- Plug in the second A/C adapter provided, and turn the unit on.

3. Use the Monitor

- Set both units to the same channel (A or B).
- Rotate the volume dial to turn the Parent's Unit on and set the volume.
- Keep the Parent's Unit with you, and keep it positioned upright.

WARNING:

- This product is not a substitute for adult supervision.
- This product is not a toy.
- This product is a monitoring device designed to assist in the monitoring of children, not as a prevention of injury or loss of child.
- Do not place Child's Unit in crib or attach to crib.

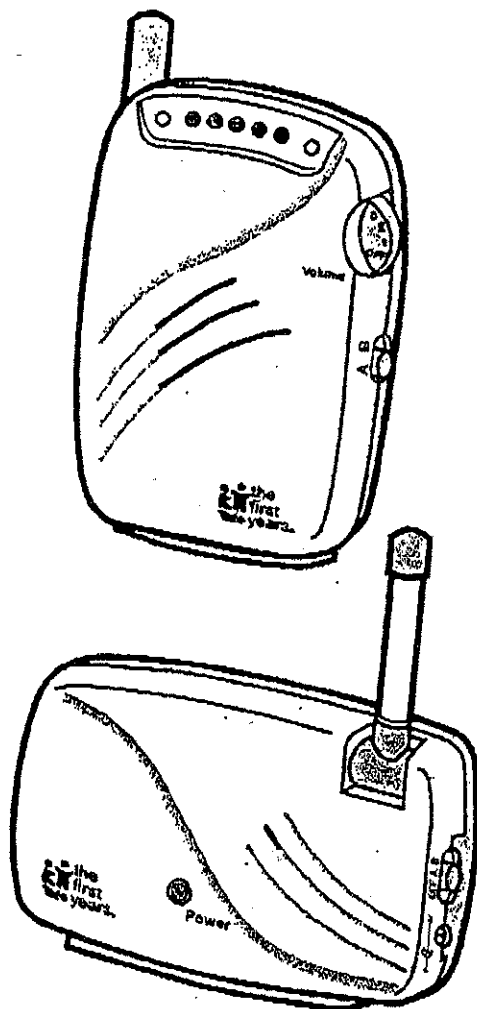

If you have questions about the use of your Crisp & Clear Rechargeable Monitor, please call us toll-free: 1-800-533-6708.

Safety Instructions

CAUTION

RISK OF ELECTRICAL SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE THE COVER OR BACK OF EITHER UNIT. THERE ARE NO USER-SERVICEABLE PARTS INSIDE.

REFER ALL SERVICING TO A QUALIFIED FIRST YEARS TECHNICIAN (see below for our toll-free number).

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO WATER OR MOISTURE.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This symbol is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

1. THE USER SHOULD NOT ATTEMPT TO SERVICE THIS PRODUCT. READ ALL SAFETY AND OPERATING INSTRUCTIONS BEFORE OPERATING THIS PRODUCT

2. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

3. OBSERVE ALL WARNINGS

4. FOLLOW ALL OPERATING INSTRUCTIONS

5. WATER AND MOISTURE

This product should not be used near water, for example, near a bathtub, or sink, in a wet basement or near a swimming pool.

6. VENTILATION

This product should be situated in such a way that it has proper ventilation. Do not place on a bed, sofa, rug, or similar surface that may block ventilation openings. Do not place in an enclosed area, such as a cabinet or book case that might impede the flow of air through the ventilation openings.

7. HEAT

This product should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.

8. POWER SOURCE

This product should be connected to a power supply only of the type described in these instructions or marked on the product itself.

IMPORTANT: The following applies only to **UL LISTED UNITS**. This product is being supplied with the required safety feature of a Polarized Plug. You will note that one prong is larger than the other so that the plug fits into the outlet only one way. **DO NOT TAMPER WITH THE PLUG** under any circumstances.

9. POWER CORD PROTECTION

The power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to the cord at the plug, at the convenience receptacle, and at the point it exits from the appliance.

10. CLEANING

Before cleaning, be sure to unplug. Clean only as recommended in these instructions.

11. NON-USE PERIODS

The power cord of the product should be unplugged from the outlet when the Monitor will be unused for a long period of time.

12. OBJECT AND LIQUID ENTRY

Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.

13. DAMAGE REQUIRING SERVICE

This product should be serviced by qualified service personnel (see below) when:

- a. The power supply cord or plug has been damaged; or
- b. Objects have fallen or liquid has been spilled into it; or
- c. The product has been exposed to rain; or
- d. The product does not appear to operate normally or exhibits a marked change in its performance; or
- e. The product has been dropped or the enclosure damaged.

14. WALL MOUNTING

 
The monitor should be mounted to a wall only as recommended in these instructions.

Service


If your Monitor is not working properly, please call The First Years at 1-800-533-6708. Often, we can explain how to get your unit working again. If the unit needs repair, you will be requested to pack it carefully and send it to:

The First Years/Service Department
One Kiddie Drive
Avon, MA 02322-1171

Parent's Unit (receiver)

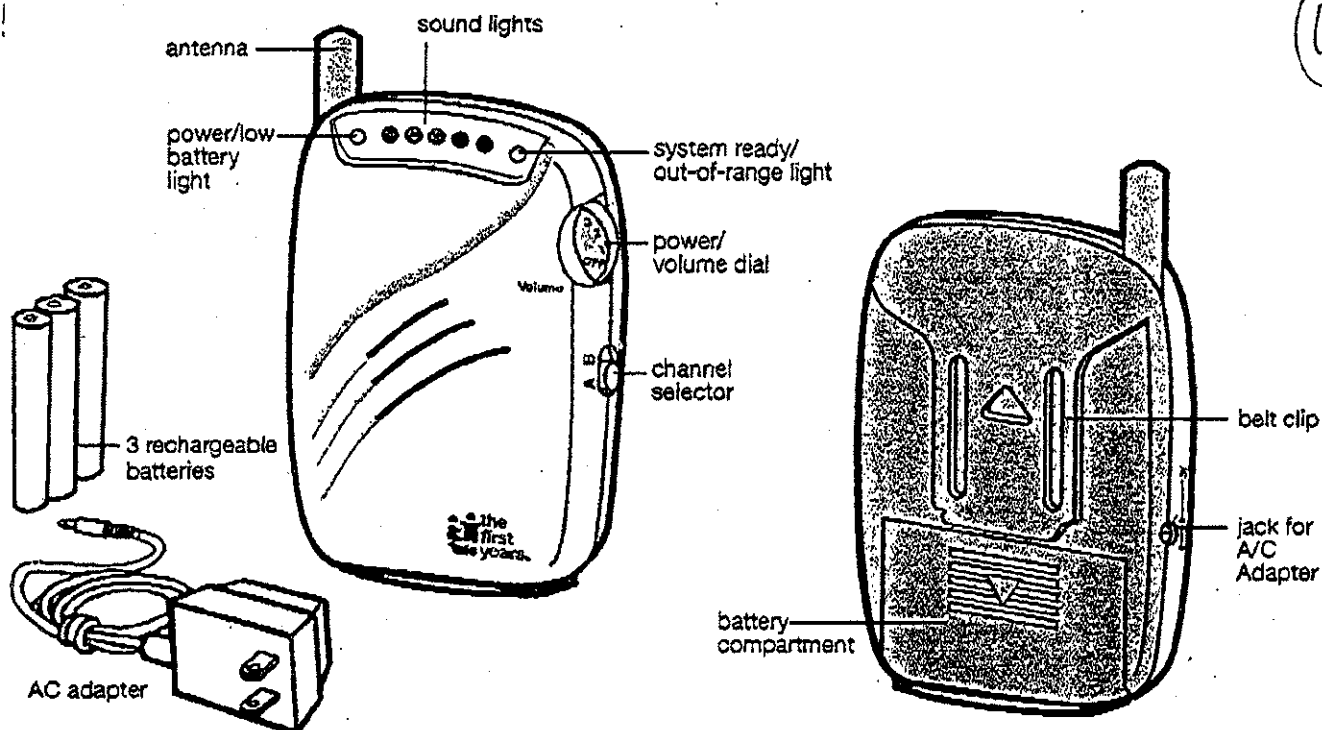

Child's Unit (transmitter)

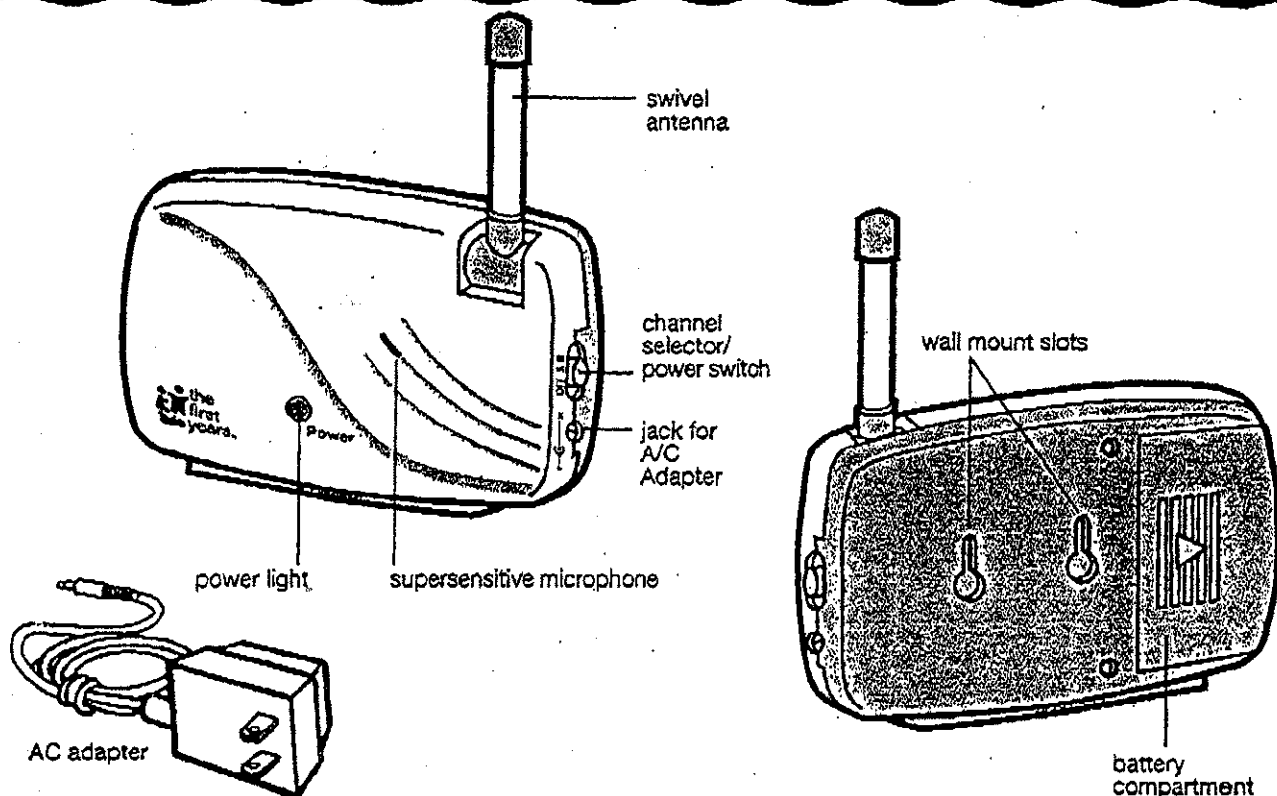 

1 To Set Up

Parent's Unit

1. Install the batteries

- Press on the indented finger grip to release, then slide and lift the battery compartment cover
- Insert the three AA rechargeable batteries supplied. Position them so the + and - contacts are aligned with the corresponding contacts on the battery clip.
- Lower the battery compartment cover, and slide it until it clicks into place.

When it's time to change these batteries:

 
 
Use the pull tab to release the old batteries. Remove them, and replace them with three AA nickel cadmium (NiCd) rechargeable batteries. **Do not install standard (non-rechargeable) batteries; doing so could result in damage to the unit, and warranty would become void.**

2. Charge the batteries.

- Batteries must be fully charged for optimum performance.
- Insert the AC adapter plug into the jack on the side of the unit, then plug the adapter into an electrical outlet.
 - Allow the batteries to charge for 10 to 16 hours (16 hours is recommended, as this is the maximum required to charge the batteries fully.) The power light will change from red to green when the battery is fully charged.

Note: You can use the Monitor while the Parent's Unit is being charged, or it can be charged with the unit off.

CAUTION: Always use the AC adapter(s) supplied with this product. Do not use any other adapter. Monitor could be damaged and warranty would become void.

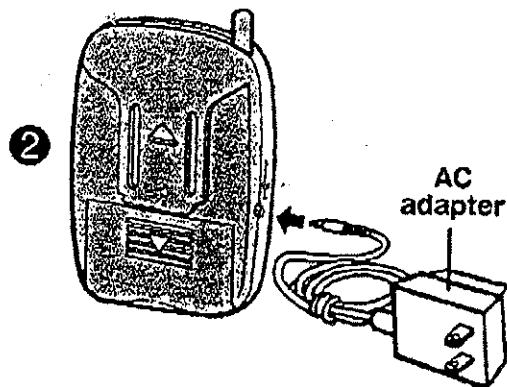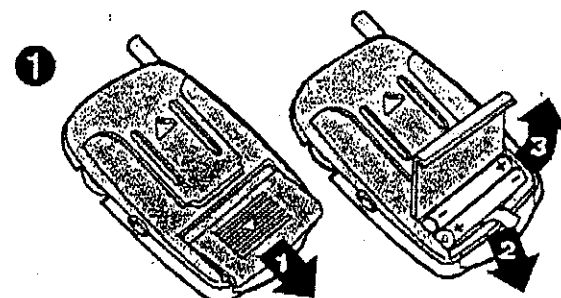

Child's Unit

- Position the Child's Unit within approximately 6 feet of your child, yet out of the child's reach.

CAUTION: Do not place Child's Unit in crib or attach to crib.

(To prevent heat build-up, place on an open surface away from heat sources; do not place in an enclosed space.)

 
- Position the antenna straight up, as shown, whether the unit is in the upright or flat position.
- Insert the A/C adapter plug into the jack on the side of the unit, then plug the adapter into an electrical outlet.

For battery operation (optional): Unplug the unit, and install three AA batteries. (See Care of Your Monitor).

Important: Do not plug in the AC adapter with batteries installed in the Child's Unit. Unit could be damaged.

For wall mounting (optional):

- Securely fasten two #6 flat head wood screws 1 5/8 inches apart on the wall so they will align with the screw head slots on the back of the unit. (For best results, use 3/4-inch screws; mount in a solid wood panel, or use screw anchors).
- Leave screw heads protruding from the wall by at least 1/8-inch.
- Fit the screw head slots (on the back of the unit) over the screw heads and slide the unit down to seat it firmly.
- To test that the unit is securely mounted, press on its edges.

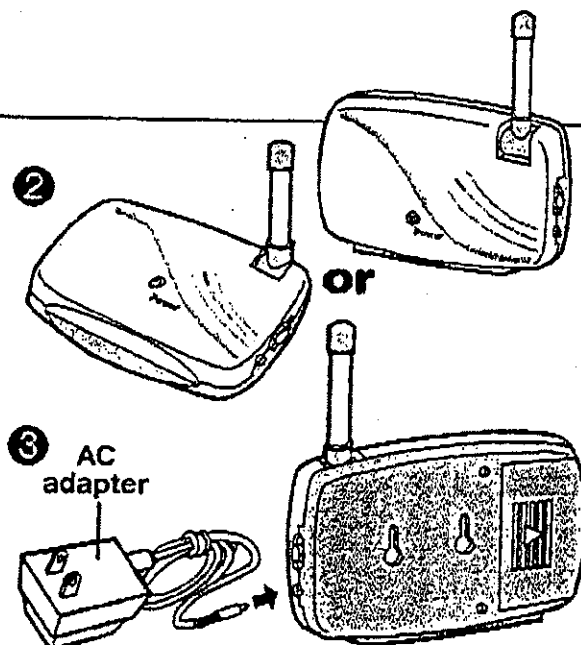

INSTRUCTION MANUAL

Warning : Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- ☐ Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.