

80 SERIES



QUICK USER GUIDE 4-BUTTON | 1-WAY

EXCALIBUR

REMOTE START & SECURITY PERFECTED

COMMON / GOOD-TO-KNOW FUNCTIONS

Function	Button(s)	Action	More Info		
Lock	🔒	Tap	Will arm the alarm if equipped..		
Unlock	🔓	Tap	Will disarm the alarm if equipped.		
Remote Start / Stop	🔊, 🔊	Tap within 5 sec.	System may also be configured for:	1 Tap	Hold for 2 sec.
Run Time Extend	🔊	Tap	Restarts engine run time. Can only be done once per start cycle.		
Trunk Release	🔗	Hold for 2 sec.	By default, the system will also disarm/unlock.		
Panic	🔒/🔓	Hold for 2 sec.	Will arm alarm if equipped.		
Lock w/o Arm	🔗, 🔒	Tap within 5 sec.	Anytime the alarm is undesired. Not available all models.		
Silent Lock Or Unlock	🔗, 🔒, (🔒 OR 🔓)	Tap within 5 sec.	Will arm alarm if equipped.		
Sensor Bypass	🔒, 🔒	Tap within 5 sec.	Alarm will ignore sensors until you arm the alarm again.		

TIP: Tap commands are sent when the button is released. 'Hold' commands transmit automatically after holding for 2 seconds.

REGISTER YOUR SYSTEM AT www.CARALARM.com
ACTIVATE YOUR WARRANTY & LEARN MORE ABOUT YOUR SYSTEM

MODEL / SERIAL



caralarm.com



[/c/omegard](https://www.youtube.com/c/omegard)



[/omegard](https://www.facebook.com/omegard)



[/omegaresearch](https://www.instagram.com/omegaresearch)

SIGN UP NOW!



EMERGENCY ALARM OVERRIDE

IMPORTANT: You will need to access your programming/valet button. It is built into your antenna or mounted in the dash. If you are unsure, contact your installer or Omega customer support. There is no way to disarm the alarm without this or a functioning remote.


STEPS

1. Enter the vehicle, the alarm will sound.

TIME RESTRICTION: Perform the following steps within 10 seconds

2. Turn the ignition ON with the key (do not start the engine).
3. Enter your override code by tapping the programming/valet button.
 - The default code is 01. It can be set for 01-99 (see feature programming guide or use LINKR-MOBILE app - additional parts required).
 - If your override code is 11-99, each digit is entered in 2 steps of 1-9 presses.
 - Enter the 1st digit. If correct, the alarm will pause and the siren/horn will chirp once.
 - Enter the 2nd digit. If correct, the alarm will disarm.

YOUR ANTENNA

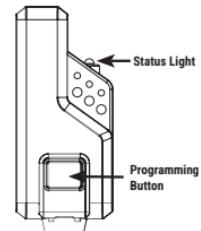

REPLACING YOUR 1-WAY REMOTE BATTERY - SCAN THE QR CODE FOR DETAILS, RECOMMENDATIONS, & VIDEOS

- Excalibur 1-way remote batteries typically last up to 2 years without needing replacement. This can vary greatly based on usage & battery quality.
- Note the remote part # and battery type listed on the back of your remote.
- Most remotes simply pop apart. Look for the notch near the keyring.

APP CONTROL, PROGRAMMING, SHARING!

- USES BLUETOOTH - ALWAYS WORKS!
- NO SUBSCRIPTION!
- CONTROL ALWAYS WORKS
- CONNECTS INLINE W/ ANTENNA
- SOLD SEPARATELY



LEARN MORE AT
LinkrMobile.com



WARRANTY
GUIDES
VIDEOS
SUPPORT

This device complies with FCC Rules part 15. Operation is subject to the following two conditions: 1) This device may not cause harmful interference &, 2) This device must accept any interference that may be received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement: 1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. 2. For portable operation, this device has been tested and meets FCC RF exposure guidelines. When used with an accessory that contains metal may not ensure compliance with FCC RF exposure guidelines.

© 2025 Omega Research & Development Technology LLC

QOM-1420-03_20250601