

 SOUND SENSITIVITY AND SOUND ACTIVATION

FOR VM5463-2 ONLY

STATUS CHECK - TWO BABY UNITS

If you are viewing baby unit ①, the POWER LED light of baby unit ② will turn on. As baby unit ② is not being viewed, its POWER LED light flashes.

NOTE

- If you are viewing only one baby unit, you may see the parent unit displaying ① and ②, and Press VIEW in Single-CAM or Parent mode to switch to the baby unit you have powered on.

Change different views - Single CAM

In Single CAM or Parent mode, press VIEW to switch between a single view of baby unit ① and ②.

Change different views - Single CAM

Press VIEW

Change different views - Parent

Press Parent

Change different views - Parent

Press Parent

Subject Split as your monitoring mode

Subject Split as your monitoring mode to view the images from both baby units at once.

Subject Split as your monitoring mode

Subject Split as your monitoring mode to view the images from both baby units at once.

STATUS CHECK - TWO BABY UNITS

If you are viewing baby unit ①, the POWER LED light of baby unit ② will turn on. As baby unit ② is not being viewed, its POWER LED light flashes.

NOTE

- If you are viewing only one baby unit, you may see the parent unit displaying ① and ②, and Press VIEW in Single-CAM or Parent mode to switch to the baby unit you have powered on.

Change different views - Single CAM

In Single CAM or Parent mode, press VIEW to switch between a single view of baby unit ① and ②.

Change different views - Single CAM

Press VIEW

Change different views - Parent

Press Parent

Change different views - Parent

Press Parent

Subject Split as your monitoring mode

Subject Split as your monitoring mode to view the images from both baby units at once.

Subject Split as your monitoring mode

Subject Split as your monitoring mode to view the images from both baby units at once.

LIMITED WARRANTY

[illegible]

LIMITED WARRANTY

[illegible]