 


Scan the QR code for support information



CS5319-X (US)

CS5319-X (CA)

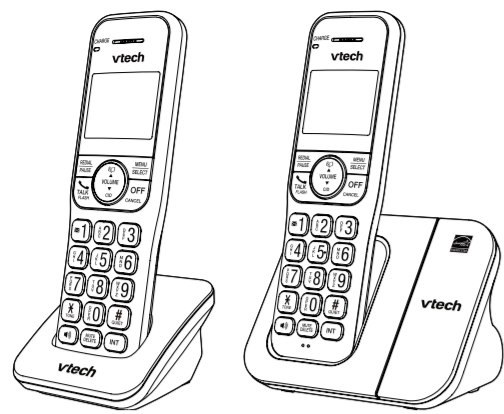


vtech®

Abridged user's manual

CS5319
CS5319-15
CS5319-2


WHAT'S IN THE BOX

 Your telephone package contains the following items. Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.

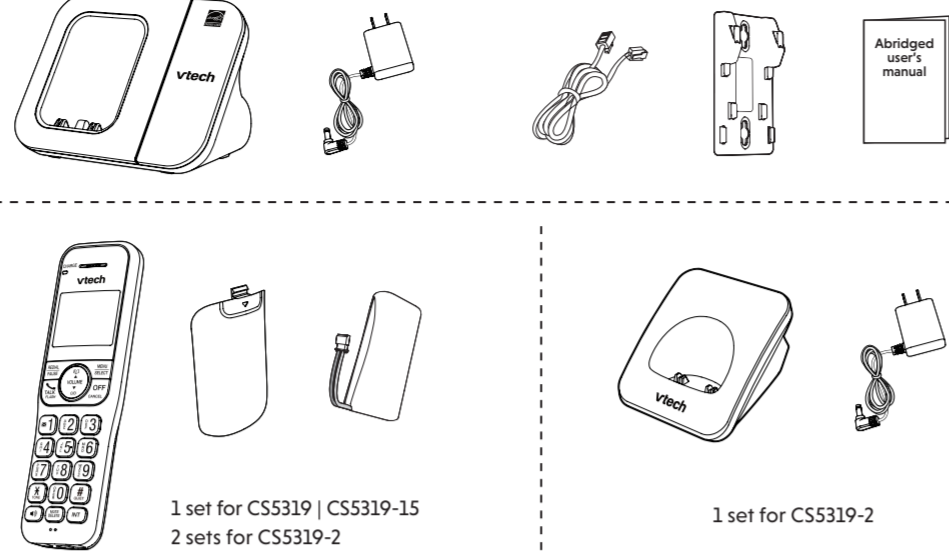


INSTALL AND CONNECT

 
Install the battery

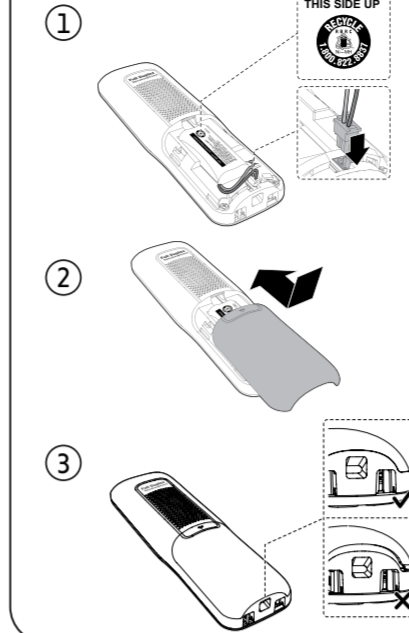

Connect and charge

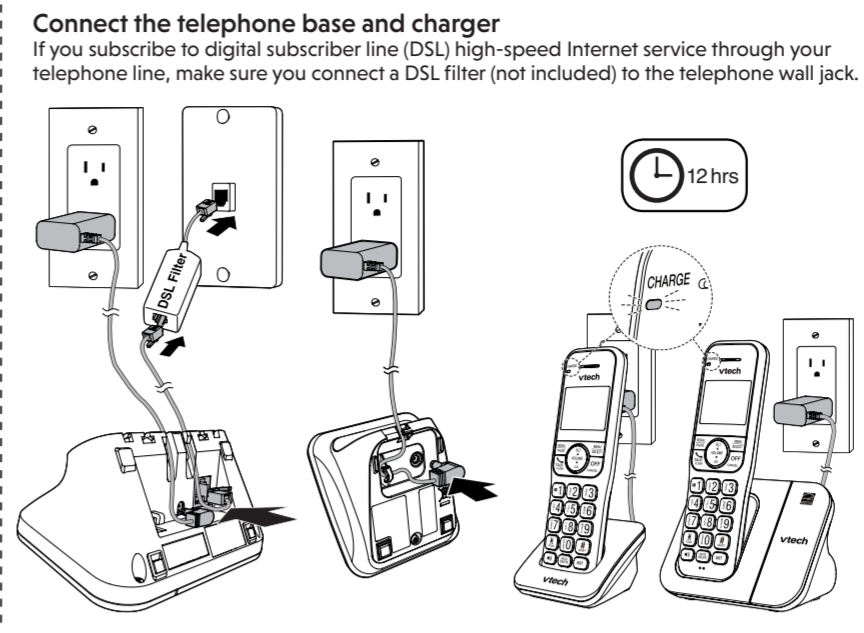 

Mount (optional)

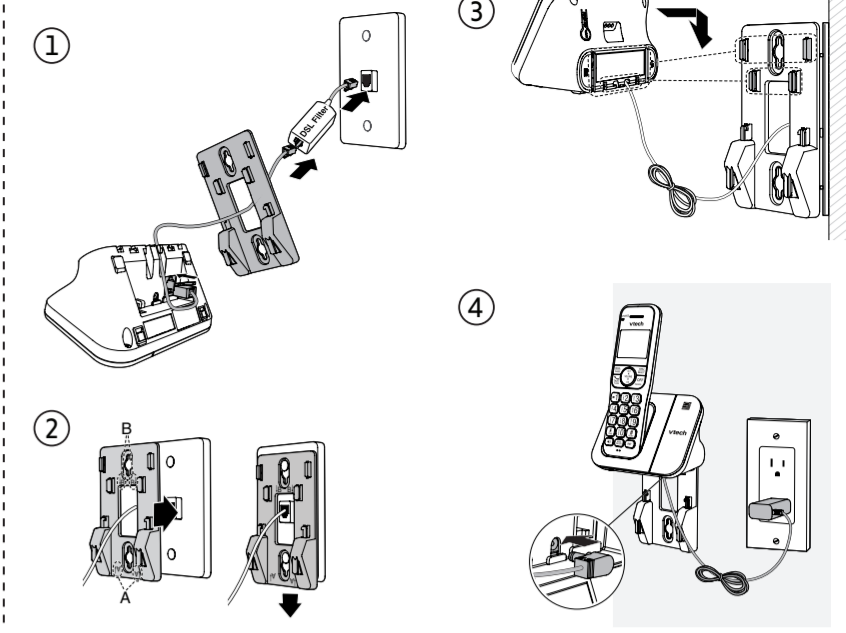 

IMPORTANT SAFETY INSTRUCTIONS

- When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:
 - Read and understand all instructions.
 - Follow all warnings and instructions marked on the product.
 - Use only with UL listed Bluetooth devices.
 - Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
 - CAUTION:** Do not install the telephone base at a height above 2 meters.
 - Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, or in a wet basement or shower.
 - Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
 - Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes.
 - Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
 - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
 - Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
 - Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
 - To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
 - Do not overload wall outlets and extension cords.
 - Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - If the product has been dropped and the telephone base and/or handset has been damaged.

- If the product exhibits a distinct change in performance.
- Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- Only put the handset of your telephone next to your ear when it is in normal talk mode.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries (BT162342/BT262342) for the handset. Do not dispose of batteries in a fire. They may explode. Disposed of used batteries according to the instruction.
 - Do not use the battery in following conditions:
 - High or low extreme temperature during use, storage or transportation.
 - Replacement of a battery with an incorrect type that can defeat a safeguard.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.
- Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
- The applied nameplate is located at the bottom or rear of the product.

SAVE THESE INSTRUCTIONS

- Use only the battery provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to phones.vtechcanada.com or call 1 (800) 267-7377.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.

Join a call in progress

- You can use up to two handsets at a time on an outside call.
- When a handset is already on a call, press **TALK** or **FLASH** on another handset to join the call.
 - To exit the call, press **OFF** on the handset or place it in the telephone base or charger. The call continues until all handsets hang up.

Call waiting

 
- When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are already on a call.
- Press **FLASH** to put the current call on hold and take the new call.
 - Press **FLASH** at any time to switch back and forth between calls.

Find handset

Use this feature to find the system handset.

To start paging:

- Press **FIND HS** at the back of the telephone base when not in use. All idle handsets ring and display **** Paging ****.

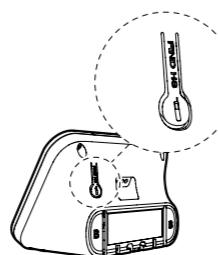

SETUP

After the telephone is installed or power returns following a power outage and battery depletion, the handset will prompt you to set the date and time.

Date and time

When the handset prompts, follow the steps below to set the date and time.

- Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.
- Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press **▼** or **▲** to choose **AM** or **PM**.
- Press **SELECT** to save.

NOTE: If you have skipped the prompt, you can set up again by pressing **MENU**. Scroll to select **Set date/time**, and then press **SELECT**. Then follow the steps above.

Change LCD language settings

You can select English, French, or Spanish to be used in all screen displays:

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to scroll to **Settings** and then press **SELECT**.
- Press **SELECT** again to choose **LCD language**.
- Press **▼** or **▲** to choose **English, Français or Español**, and then press **SELECT** to save.

NOTE: If you accidentally set the LCD language to Spanish or French, press **MENU** and then enter **X364#** to change the handset LCD language back to English while the handset is not in use.

To end paging:

- Press **FIND HS** again.
- OR - Press **TALK**, **OFF/CANCEL** or any dialing keys on the handset.

NOTE: Do not press and hold **FIND HS** for more than 4 seconds. It may lead to handset deregistration.

BLUETOOTH®

Your telephone system is enhanced with Bluetooth feature. You can pair a Bluetooth headset to your telephone system and answer calls with your Bluetooth headset.

NOTES:

 
Before you begin, make sure that your Bluetooth enabled headset is not connected to any other Bluetooth device. If you have trouble pairing your Bluetooth headset to your CS5319/CS5319-15/CS5319-2 telephone system, try turning off the Bluetooth feature of the nearby devices that your Bluetooth headset has previously paired.

Bluetooth wireless technology operates within a short range (a maximum of approximately 15 feet) from the telephone base. Keep connected headset within this range.

For more details about the Bluetooth feature, read the online Complete user's manual.


OVERVIEW

Telephone base

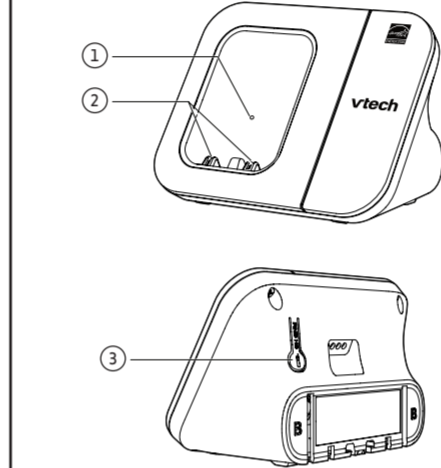

- Bluetooth LED**
 - Flashes quickly when pairing.
 - Steady on when paired and connected to a Bluetooth headset or when the connected Bluetooth headset is in use.
 - Off when no Bluetooth headset is paired.
- Charging pole**
- FIND HS**
 - Page all system handsets.
 - Press and hold for 4 seconds to pair a Bluetooth headset after pressing **TALK** or **FLASH** on the handset to get a dial tone.

 Handset

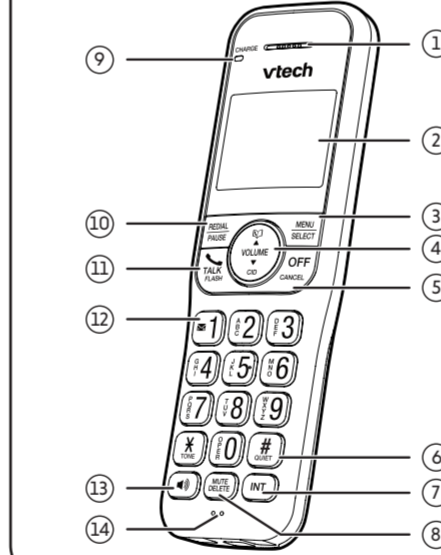

Pair and connect a Bluetooth headset

- Set your Bluetooth headset to pairing mode. Refer to your Bluetooth headset user's manual to learn how.
- Press **TALK** or **FLASH** on the handset.
- Press and hold **FIND HS** at the back of the telephone base for 4 seconds.
 - The telephone then enters pairing mode.
 - The Bluetooth LED on the telephone base flashes.
 - To cancel pairing, press **FIND HS** at the back of the telephone base.
- Press **OFF** on handset or place the handset in the telephone base or charger after pairing.

Bluetooth headset connection status:

- Pairing** - while pairing to a Bluetooth headset, the Bluetooth LED flashes quickly.
- Connected** - when successfully paired and connected to a Bluetooth headset, the Bluetooth LED becomes steady on.
- Bluetooth headset in use** - when the connected Bluetooth headset is in use, the Bluetooth LED becomes steady on.
- No connection** - the Bluetooth LED turns off.

1 - Earpiece

2 - LCD display

3 - MENU/SELECT

- Show the menu.
- While in a menu, press to select an item, or save an entry or setting.
- VOLUME ▲**
 - Review the directory when the phone is not in use.
 - Scroll up while in a menu, or in the directory, caller ID log or redial list.
 - Move the cursor to the right when entering numbers or names.
 - Increase the listening volume during a call.

CID / VOLUME ▼

- Review the caller ID log when the telephone is not in use.
- Scroll down while in a menu, or in the directory, caller ID log or redial list.
- Move the cursor to the left when entering numbers or names.
- Decrease the listening volume during a call.

5 - OFF / CANCEL

- Hang up a call.
- Return to the previous menu or exit completely without making changes.
- Delete digits while predialing.
- Silence the handset ringer temporarily while the phone is ringing.
- Press and hold to erase the missed call indicator while the handset is not in use.

6 - QUIET

- Press and hold to set and turn on the **QUIET** mode, or turn it off.
- Show other dialing options when reviewing a caller ID log entry.

7 - INT

- Press to initiate an intercom conversation or transfer a call.

8 - MUTE/DELETE

- When the telephone is ringing, press to mute the ringer temporarily.
- Mute the microphone during a call.
- Delete the displayed entry while reviewing the directory, caller ID log or redial list.
- Delete digits or characters when entering numbers or names.

9 - CHARGE light

- On when the handset is charging in the telephone base or charger.

10 - REDIAL/PAUSE

- Review the redial list.
- Press and hold to insert a dialing pause while dialing or entering numbers into the directory.

11 - TALK/FLASH

- Make or answer a call.

 
- Answer an incoming call when you receive a call waiting alert.
- Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the directory.
- Press and hold to set or dial your voicemail number.

12 - 1

- Make or answer a call using the handset speakerphone.
- During a call, press to switch between the speakerphone and the handset earpiece.

14 - Microphone

Charger

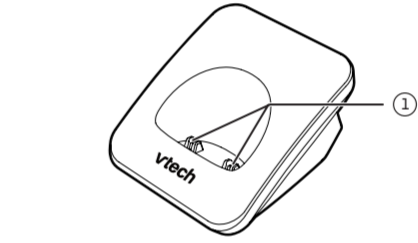

1 - Charging pole

Display icons

	The battery icon flashes when the battery is low and needs charging.
	The battery icon animates when the battery is charging.
	The battery icon becomes solid when the battery is fully charged.
ECO	The ECO mode activates automatically to reduce power consumption when the handset is within range of the telephone base.
	The handset ringer is turned off.
	There are new voicemail received from your telephone service provider.
NEW	The entry you are reviewing is new in the caller ID log.

- Press **TALK** or **FLASH** to dial.

Delete a redial list entry

- Search for or review the redial list entries (see **Review and dial a redial list entry**).
- When the desired redial entry displays, press **DELETE**.

INTERCOM

Use the intercom features for conversations between two handsets.

 
- Press **INT** on your handset when not in use. Use the dialing keys to enter a destination handset number if necessary.
- To answer the intercom call, press **TALK**, **INT** or any dialing key on the destination handset. You can now have a private conversation before transferring the call.
- From this intercom call, you have the following options:
 - You can let the destination handset join you on the outside call in a three-way conversation. Press and hold **INT** on the originating handset.
 - You can transfer the call. Press **OFF**, or place your handset back in the telephone base or charger. The destination handset is then connected to the outside call.
 - You can press **INT** to switch between the outside call (**Outside call** displays) and the intercom call (**Intercom** displays).
 - The destination handset can end the intercom call by pressing **OFF**, or by placing the handset back in the telephone base or charger. The outside call continues with the original system handset.

Answer an incoming call during an intercom call

If you receive an incoming call during an intercom call, there is an alert tone.

- To answer the outside call, press **TALK**. The intercom call ends automatically.
- To end the intercom call without answering the outside call, press **OFF**. The telephone continues to ring.

TELEPHONE OPERATIONS

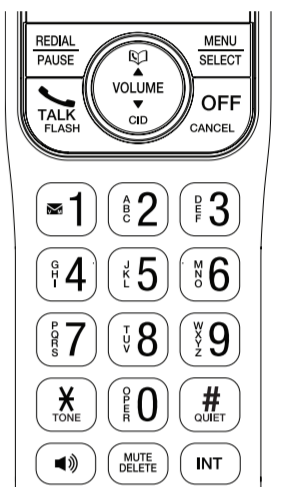

Use the handset menu

- Press **MENU** when the phone is not in use.
- Press **▼** or **▲** until the screen displays the desired feature menu.
- Press **SELECT**.
 - To return to the previous menu, press **CANCEL**.
 - To exit completely, press and hold **CANCEL**.

Make a call

- Press **TALK** or **FLASH**, and then dial the telephone number.

Answer a call

- Press **TALK**, **INT** or any dialing keys.

End a call

- Press **OFF** or put the handset back in the telephone base or charger.

Speakerphone

- During a call, press **INT** on the handset to switch between speakerphone and handset earpiece.

Volume

- During a call, press **VOLUME ▲** and **VOLUME ▼** to adjust the listening volume.

Mute

The mute function allows you to hear the other party but the other party cannot hear you.

- During a call, press **MUTE**. The handset displays **Muted**.
- Press **MUTE** again to resume the conversation. The handset displays **Microphone** on briefly.


Call transfer using intercom

While on an outside call, you can use the intercom feature to transfer the call from one handset to another.

- Press **INT** on your handset during a call. The current call is put on hold. Use the dialing keys to enter a destination handset number if necessary.
- To answer the intercom call on the destination handset, press **TALK**, **INT** or any dialing key on the destination handset. You can now have a private conversation before transferring the call.
- From this intercom call, you have the following options:
 - You can let the destination handset join you on the outside call in a three-way conversation. Press and hold **INT** on the originating handset.
 - You can transfer the call. Press **OFF**, or place your handset back in the telephone base or charger. The destination handset is then connected to the outside call.
 - You can press **INT** to switch between the outside call (**Outside call** displays) and the intercom call (**Intercom** displays).
 - The destination handset can end the intercom call by pressing **OFF**, or by placing the handset back in the telephone base or charger. The outside call continues with the original system handset.



 SS5319-GB-585585V-CB-BEKEN-BT_Y
CS5319-X-US-CAN-AC18_V1
© 2024 Vtech Technologies Canada Ltd.
© 2024 Vtech Communications, Inc.
Specifications are subject to change without notice.



Go to phones.vtechcanada.com (Canada) for the latest Vtech product news.

Go to www.vtechphones.com (US) to register your product for enhanced warranty support and latest Vtech product news.

