

INFORMATION FOR GENERAL TELEPHONES

1. This equipment complies with Part 68 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.
2. The applicable registration jack (connector) USOC-RJ11C is used for this equipment.
3. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68 compliant. The FCC compliant telephone cord and modular plug is provided with this equipment.
4. The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the REN's should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.
5. If your equipment (SPP-900) causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
6. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
7. If trouble is experienced with this equipment (SPP-900), for repair or warranty information, please contact Sony Direct Response Center, Tel 1-800-222-7669. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
8. All repairs will be performed by an authorized Sony service station.
9. This equipment cannot be used to party lines or coin lines.
10. This equipment is hearing aid compatible.

If your telephone is equipped with automatic dialers

When programming emergency numbers and (or) making test calls to emergency numbers:

1. Remain on the line and briefly explain to the dispatcher the reason for the call.
2. Perform such activities in the off-peak hours, such as early morning or late evenings.

Caution

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Setting up the phone

Choose the best location

Where you place the base unit affects the reception quality of the handset.

To obtain the best performance: 5.5m battery
Do not place the handset on the base unit after each of the handset is returned to the base unit after two or three leave the handset on the base unit for a long period of completely discharge the battery pack.

If the handset battery becomes weak

When not conversing with an outside caller, the TALK/BATT lamp flashes if the handset is not placed on the base to the base unit to recharge the battery for more than 1.

When you purchase a new battery pack

If the battery lasts only a few minutes even after 10 h life of the battery has expired and needs replacement, authorized dealer or service center, and ask for a Sony battery pack.

Note

Battery life may vary depending on usage condition and anti

Making and receiving c

Making calls



Receiving calls

- 1 When you hear the phone ring:
 - Press **TALK/FLASH** (or any key except C or
 - Pick up the handset from the base unit w

The **TALK/BATT LOW** lamp lights up at th
 - 2 When you're done talking, press **OFF** or n
- The **TALK/BATT LOW** and **LINE** lamps go

Additional tasks

| To | Do this |
|-------------------|---|
| Select a loc | Press CHANSEL . |
| Adjust the volume | Set the VOL switch to H (high). |
| Switch to u | Press CHARGE while using the |
| Switch to a | Press TALK/FLASH to answer th |
| Switch to a | Press TALK/FLASH again to ret |
| Contact | or telephone company to subscribe to this ser |

Notes

- Before d
- When th
- When th
- If the ha
- You hear

JAN 25 '99 11:06AM VTECH.COM LTD 852-26881628
Owner's Record

The model and the serial numbers are located at the bottom of the unit. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. SPP-900 Serial No. _____

For the customers in the USA

IMPORTANT SAFETY INSTRUCTIONS


When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service personnel when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operation instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

CAUTION:

- To reduce the risk of fire or injury to persons by battery, read and follow these instructions.
1. Use only the following type and size battery pack: Sony BP-T23.
 2. Do not dispose of the battery pack in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
 3. Do not open or mutilate the battery pack. Released electrolyte is caustic and may cause damage to the eyes or skin. It may be toxic if swallowed.
 4. Exercise care in handling battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
 5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the instruction manual provided for this product.
 6. Observe proper polarity orientation between the battery pack and battery charger.

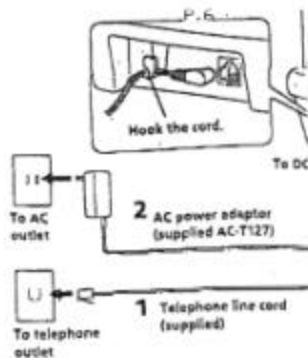

- 1 Connect the telephone line cord to the outlet.
- 2 Connect the AC power adaptor to the outlet.
- 3 Raise the antenna vertically.

Notes


- Use only the supplied AC-T127 AC power adaptor. Do not use any other AC power adaptor.
- Connect the AC power adaptor to a continuous line.
- Place the base unit close to the AC outlet so that the AC power adaptor easily.

Tips

- If your telephone outlet is not modular, contact service company for assistance.
- If you have two phone lines on a single jack wall line connected in a center pair of wires, and you use the second phone line (outer pair of wires), contact telephone company for rewiring.

Choose the dialing mode

For the telephone to work properly, select a pulse.

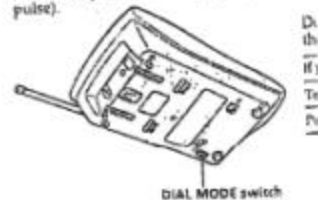

If you aren't sure of your dialing system, make a trial call with the DIAL MODE switch. Leave the switch as is; otherwise, set to PULS.

Charge the battery pack

Charge the battery pack for more than 10 hours.

- 1 Slide open the handset.
- 2 Insert the battery pack (batteries) into the handset.
- 3 Replace the handset.
- 4 Place the handset on the charging base. The CHAR indicator lamp will light when the battery pack is fully charged.