



at&t

User's manual

**TL74108/TL74208/TL74258/
TL74358/TL74458**

**5.8 GHz corded/cordless
telephone/answering
system with caller ID/
call waiting**



Congratulations

on purchasing your
new AT&T product.

Before using this AT&T product, please
read the **Important safety instructions**
on pages 57-59 of this manual.

Please thoroughly read the user's
manual for all the feature operations
and troubleshooting information necessary to install
and operate your new
AT&T product. You can also visit our
website at **www.telephones.att.com**
or call **1 (800) 222-3111**.

In Canada, dial **1 (866) 288-4268**.

Model # TL74108/TL74208/TL74258/TL74358/TL74458
Product name: 5.8GHz corded/cordless telephone/answering system
Serial # _____
 (found on the bottom of the telephone base)
Purchase date: _____
Place of purchase: _____



The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

You must install and charge the battery before using the telephone.



See page 7
for easy instructions.

For customer service or product information, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**.

In Canada, dial **1 (866) 288-4268**.

Add new handsets to make your telephone more versatile (see page xx)

Your telephone can accommodate up to four cordless handsets. You can add new handsets (model TL77008, sold separately) anytime, but each must be registered with the telephone base before use.

The handset provided with your TL74108 is automatically registered as handset 1. Additional handsets will be assigned numbers in the order they are registered (handset 2, handset 3, or handset 4). You can register a maximum of 4 handsets.

The TL74208 has two handsets automatically registered as handsets 1 and 2. You can register two additional handsets, which will then be assigned numbers 3 and 4.



Handset 1



Handset 2



Handset 3



Handset 4



NOTE: All four handsets can be used simultaneously, however only two can be used on one type of call at a time. For example, two handsets can be used on an outside call, while the other two handsets can be used on an intercom call at the same time.

User's manual
**TL74108/TL74208/
TL74258/TL74358/TL74458**
**5.8 GHz corded/cordless
telephone/answering
system with caller ID/
call waiting**



Table of contents

Getting started

Quick reference guide..... 2
Parts checklist..... 4
Telephone base installation 5
Battery installation & charging... 7
Wall mounting..... 8
Belt clip & optional headset..... 9

Telephone operation

Handset settings..... 10
Base settings 13
Basic cordless handset operation...15
Basic base operation 16
Options while on calls 17
Call transfer..... 19
Intercom calls..... 20

Directories

Directories..... 23
Speed dialing..... 24
New directory entries..... 26
Directory search..... 28
To dial or change an entry 29

Caller ID summary

Caller ID summary 30
Caller ID memory 33
Call waiting..... 37

Answering system operation

Answering system operation 38
Day & time announcements..... 39
Outgoing announcements..... 40
Changing feature options..... 41
Message playback 42
Recording and playing memos... 43
Message counter displays 44
Answering system mode..... 45
Remote access..... 46

Appendix

Display screen messages lights... 47
Indicator lights & alert tones..... 49
Troubleshooting 50
Important safety instructions ... 57
FCC part 68 & ACTA..... 60
FCC part 15 62
Limited warranty 63
Technical specifications..... 66
Index 67
Remote access wallet card..... 68

Quick reference guide

Cordless handset

MENU/SELECT

Press to store a programming option (pages 10-12), or to create a directory entry in memory (page 26). During a call, press to transfer a call between cordless handsets (page 19).

▼CID/-VOLUME

When phone is idle, press ▼CID to display caller ID information (pages 30-32). While entering names or numbers, press to move the cursor to the left. While programming, press to change menu item or value (pages 10-12). During a call, press ▼CID to adjust listening volume.

PHONE/FLASH

Press to make or answer a call (page 15). During a call, press to receive an incoming call if call waiting is activated (page 17).

🔊SPEAKER

Press to activate handset speakerphone. Press again to resume normal handset use (page xx).

DIR▲/VOLUME+

When phone is idle (not in use), press DIR▲ to display directory entries (page 29). While entering letters in names, press to advance or press twice to enter space. While programming, press to change menu item or value (pages 10-12). During a call, press DIR▲ to adjust listening volume.

🔌OFF/CLEAR

During a call, press to hang up. While using menus, press to cancel an operation, or exit the menu display.

INT

While phone is idle, press to page base (page 20) or press and hold to delete all caller ID entries (page 36). While a caller ID entry is displayed, press to delete displayed entry (page 35).

 
REDIAL/PAUSE

Before dialing, press to display the last number called (page 15). While dialing or entering numbers into your directory, press to insert a four-second dialing pause (page 27).

MENU/CHAN

While on a call, press to mute microphone. Press again to resume (page xx).

Feature menu

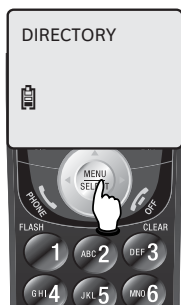

Feature menu

DIRECTORY	Page 23
SPEED DIAL	Page 24
RINGER	Page 12
DATE/TIME	Page 11
LANGUAGE	Page 10

Using menus

Press ▼CID/-VOLUME or DIR▲/VOLUME+ to scroll through menu items.

Press SELECT/TRANSFER to select or modify a highlighted item.

Press OFF/CLEAR to cancel an operation, or exit the menu display.

Quick reference guide

Telephone base

- **HANDSET LOCATOR / INTERCOM:** Press to delete displayed caller ID entry (page XX). While phone is idle, press to page handset (page XX), or press and hold to delete all caller ID entries (page XX).

- **FLASH:** During a call, press to receive an incoming call if call waiting is activated (page XX).

- **CLOCK:** Press to review or set clock (page XX).
- **SETUP:** Press repeatedly to hear setup options (page XX).
- **ANNC.:** Press to review or record announcement; press again to quit (page XX).
- **RECORD:** Press to record a memo (page XX) or after pressing **ANNC.** to record an outgoing announcement (page XX).

- **▶/STOP:** Press to start or stop message playback (page XX).
- **DELETE:** Press to delete message currently playing, hold to delete all old messages (page XX).
- **ANSWER ON:** Press to turn answering system on or off (page XX).
- **◀REPEAT:** Press to repeat message, press **twice** to play previous message (page XX).
- **▶SKIP:** Press to skip message (page XX).



- **CLEAR:** While using menus, press to cancel an operation, or exit the menu display.

- **▼CID:** Press when phone is idle to display caller ID information (page XX). While entering numbers or letters, press to move the cursor to the left.

- **MENU/SELECT:** Press to store a programming option (page XX), or to create a directory entry in memory (page XX).

- **DIR▲:** Press when phone is idle to display directory entries. While entering or modifying names, press to advance cursor.

- **DISP DIAL:** Press to dial number currently displayed.

- **▶SPEAKER:** Press to activate the ClearSpeak™ dial-in-base speakerphone. The ClearSpeak™ speakerphone allows clear, hands-free communications when you are positioned near the telephone base.

- **REDIAL/PAUSE:** Before dialing any numbers, press to display the last number called (page XX).

While dialing or entering numbers into your directory, press to insert a four-second dialing pause (page XX).

- **HOLD:** Press to place call on hold. Press again to resume call (page XX).

 
- **▲VOLUME:** During a call, press ▲ or ▼ to adjust listening volume (page XX).

- **MUTE:** Press to silence microphone, press again to resume your conversation (page XX).

Parts checklist

Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.

Check to make sure the telephone package includes the following. The model number of your telephone can be found on the label located on the bottom of the telephone base.

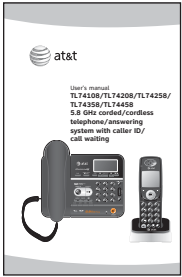

User's manual



Quick start guide



 
Cordless Handset
(1 for TL74108)
(2 for TL74208)



Telephone base



Base handset



Handset cord



Charger for cordless handset
(1 for TL74108)
(2 for TL74208)



Battery for cordless handset
(1 for TL74108)
(2 for TL74208)



Battery compartment cover
(1 for TL74108)
(2 for TL74208)



 
Power adapter for telephone base



Power adapter for handset charger
(1 for TL74108)
(2 for TL74208)



Belt clip for cordless handset
(1 for TL74108)
(2 for TL74208)

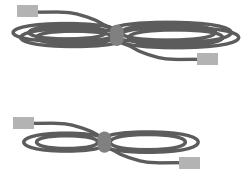

Telephone line cord
(1 long, 1 short)

Telephone base installation

Choose a central location close to a telephone jack and a power outlet not controlled by a wall switch. The telephone base can be placed on a flat surface or mounted on a standard wall plate. For optimum range and better reception, place the telephone base in a high and open location.

Avoid placing the telephone base too close to:

- Communication devices such as: personal computers, computer routers, television sets, VCRs, wireless routers (wireless broadband, wi-fi, or 802.11) or other cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting.
- Excessive dust sources such as a workshop or garage.
- Excessive moisture.
- Extremely low temperature.
- Mechanical vibration or shock such as on top of the washing machine or work bench.

Telephone base installation


1. Plug the small end of the larger power adapter into the power jack at the bottom of the telephone base.

 
2. Plug one end of the telephone line cord into the telephone jack at the bottom of the telephone base.

3. Route cords through slots.

4. Plug the large end of the larger power adapter into an electrical outlet not controlled by a wall switch.

5. Plug the other end of the telephone line cord into a telephone jack.

6. Plug one end of the coiled handset cord into the  jack at the bottom of the telephone base. Plug the other end of the coiled cord into the base handset.

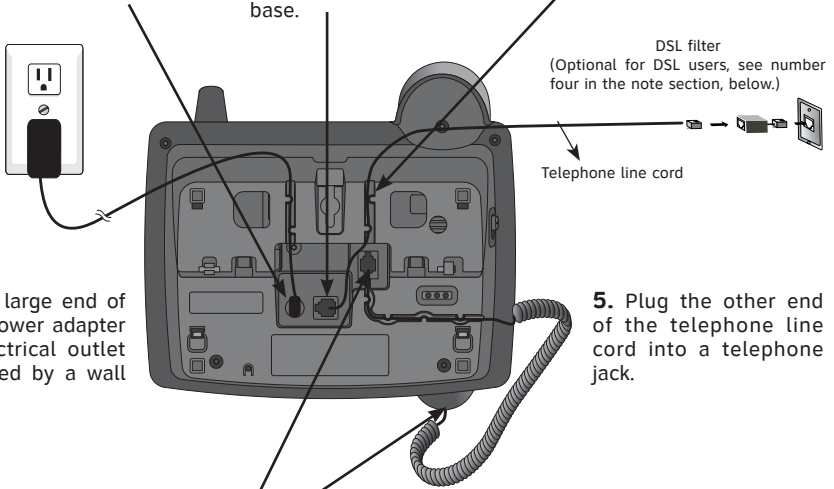

NOTES:

 
1. Use only the power adapter supplied with this product or equivalent. To order a replacement power adapter, visit our website at **www.telephones.att.com**, or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.
2. Be sure to use an electrical outlet not controlled by a wall switch.
3. This power adapter is intended to be correctly oriented in a vertical or floor mount position.
4. If you receive high speed internet through your telephone line (commonly referred to as DSL), and you are experiencing interference during telephone conversations and/or your caller ID features are not functioning properly, install a DSL filter to the telephone line between the telephone base and the telephone wall jack. Contact your DSL service provider for a DSL filter.

Battery installation & charging

After installing the battery, you may be able to make or receive short calls. For best performance, place the handset in charger to charge for 16 hours before use.

You can keep the battery charged by returning the handset to charger after use. When the battery is fully depleted, a recharge takes about 12 hours. The average talk time on a fully charged battery is about five hours, and the standby time is approximately six days. Actual battery life depends on usage conditions and age of battery.

1. Plug the small end of the smaller power adapter into the jack on the underside of the charger, then route the cord through the slot as shown.
2. Plug the large end of the smaller power adapter into an electrical outlet not controlled by a wall switch.

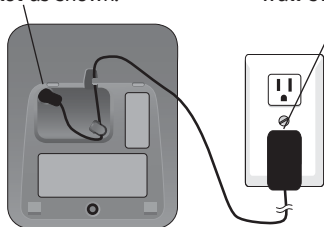

3. Insert the plug as indicated. Be sure to securely insert the plug, making sure that it matches the color-coded label inside the battery compartment.
4. Place the battery and wires inside the compartment.
5. Slide the battery compartment cover up until it clicks.

6. You may be able to make or receive short calls. For best performance, place the handset in charger to charge for at least 16 hours before first use.



then



Battery low indicator

Return the handset to the charger to recharge when this symbol flashes and the handset beeps or when the handset screen displays **NEEDS RECHARGING**.



To replace the battery, press in and downward on the tab of the battery compartment to open the battery compartment cover. Lift out the old battery and disconnect it from the handset. Follow the instructions on this page to install and charge the new battery.



NOTE: Under normal conditions, the battery should last approximately one year. This may vary depending on usage.

⚠ Caution: Use only the supplied rechargeable battery or replacement battery (AT&T model 27910, part number 89-0099-00-00) or equivalent. To order a replacement battery, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.