

Congratulations

on purchasing your new VTech product.
Before using this telephone, please read the
Important safety instructions
on page 92 of this manual.

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech telephone. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product. For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com. In Canada, please visit www.vtechcanada.com.

Table of contents

Before you begin	1	Service provider voicemail.	19
Minimum requirements	1	Initial registraion process	20
Parts checklist	2	Setup	20
Getting to know the ip8300	3	Network address book.	21
Telephone base layout.	3	Find an address book entry	21
Status of indication light	4	Default User	21
Handset status icons.	6	Dial an address book entry	22
Using the handset	7	Add an new address book entry	23
Softkeys	7	Accessing Basic Content	24
Basic navigation	7	Weather	25
Entering text	7	Yellow page	25
Text entry tips	7	Settings	26
Configure your Yahoo! account	8	Web portal code	26
Installation and configuration	8	Phone Menu	27
Prepare the handset	9	Software Version.	27
Handset charger installation	9	Call history	27
Install handset battery	10	Missed calls	28
Charge handset battery	11	Delete a missed call entry	29
Telephone base installation	13	Main Menu	29
Setup for data	15	Delete all missed call entries	30
Making calls	16	Received calls	30
Basic operation	16	Dial a received call entry.	31
Caller ID	17	Delete a received call entry	32
Call waiting.	17	Delete all received call entries.	32
Speakerphone operation.	18	Dialed number	33
Mute	18	Dial a dial call entry	33
Call volume.	18	Delete a dial call entry	34
Redial	19	Delete all dial call entries	34

Table of contents

Sound album(Ring tones)	35	Swap internal and external calls	54
Play ring tones in sound album	35	Answer an incoming call during an intercom call	55
Set ring tone in sound album	36	Conference call	55
Wallpapers	37	Intercom calling	55
Phone settings	38	Web Portal	56
Ringer volume	38	Info	57
Keypad tone	38	Edit an exiting profile.	58
Color themes.	39	Login on handset.	61
Handset name	40	Contacts (Online address book)	61
Set contrast	40	View a person contacts	62
Reset settings	41	Search a person on the contract list	62
Handset registraion	41	Edit a person contacts	63
Handset settings	42	Add a new entry in the contact list.	64
Base settings.	42	Add a new user on the handset	65
Change system PIN	42	I2S Explained	65
De-register handset	43	E-mail	66
Date and time	44	View a new e-mail	66
Set the time	45	Delete a new e-mail	66
Hide/Show the time	46	Reply a new e-mail.	67
Set the date	46	Info	67
Hide/Show the date	47	Instant message (IM)	68
Set alarm.	47	Chat	68
Set alarm volume	48	Choose your IM status	68
Set alarm tone	49	Send out instant message	69
Reset alarm	50	Check for received instant message	69
Disable alarm	51	Peer-to-Peer calling	70
Registration process.	51	Make a peer-to-peer call	70
Adding accessory handsets	53	Receive a peer-to-peer call	70

Directory Search	71
Handset screen display message	75
Handset and base indicators	77
Handset indicator lights	77
Telephone base lights	77
Troubleshooting.	80
Operating range.	87
Maintenance.	87
About cordless telephones	88
Warranty	88
Important safety instructions	90
FCC, ACTA and IC regulations.	91
The RBRC® Seal	92
Technical specifications	95
Index	96

Before you begin

Minimum requirements

Confirm that you meet the following minimum requirements:

- Yahoo!! e-mail account*
- PC with an up-to-date web browser
- Broadband Internet access (Cable/DSL)
- Broadband router with an available LAN port

* In order to access e-mail and instant messaging with the ip8300, you must have an account with Yahoo!! If you don't already have a Yahoo!! account, you may sign up for one for free at <http://yahoo.com>.


Before you begin

Parts checklist

Check to make sure the package includes the following:

1. Quick start guide
2. Telephone base
3. Handset
4. Handset charger
5. Yellow ethernet cable
6. Telephone line cord
7. Battery
8. Battery compartment cover
9. Handset charger power adapter
10. Telephone base power adapter

Remember to save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.

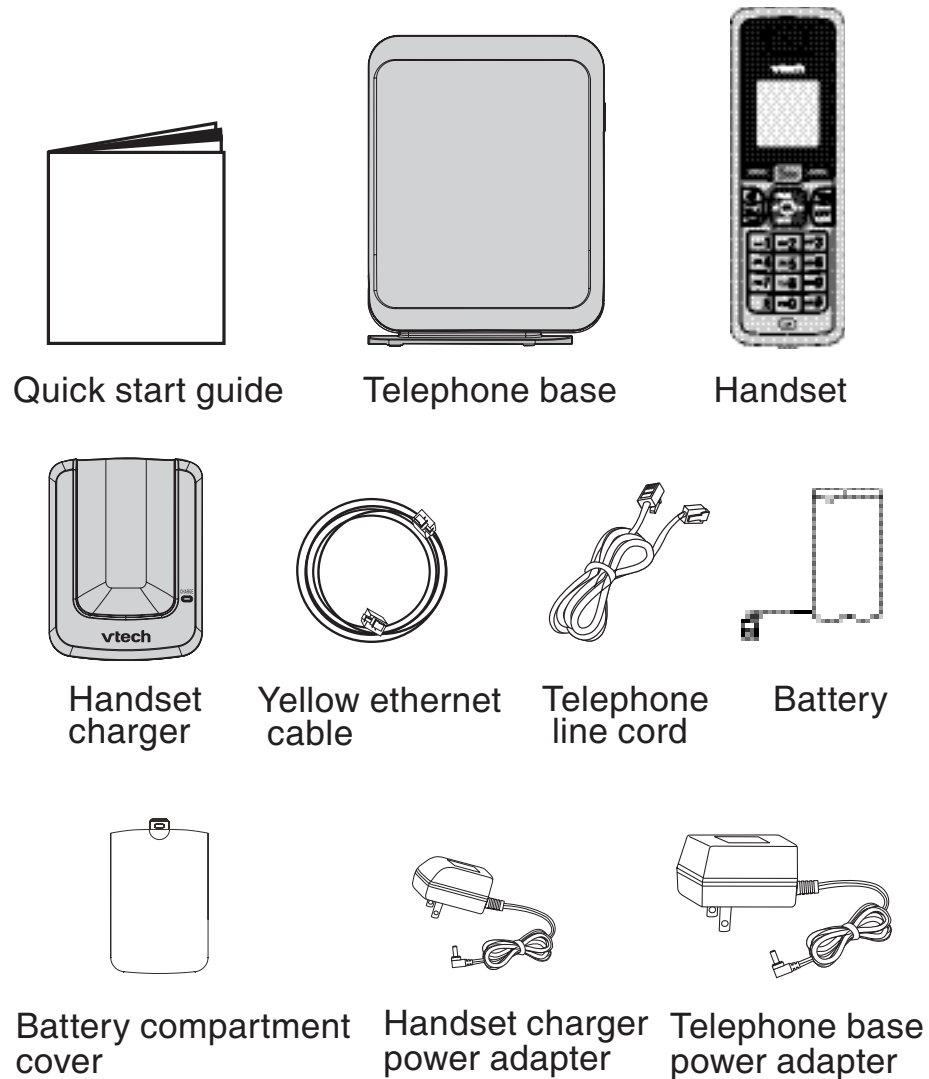

note

- To purchase a new battery pack, visit us on the web at www.vtechphones.com or call VTech Communications, Inc. at 1 (800) 595-9511) in the United States. In Canada, go to www.vtechcanada.com. or call 1 (800) 267-7377.

Getting to know the ip8300

Telephone base layout

1. FIND HANDSET

This button can be used to locate misplaced handsets. When the button is pressed, the handset will ring to help you track it down. To stop the tone, press **OFF** on the handset, or press **FIND HANDSET** on the telephone base again.

2. POWER

A steady red light indicates the device is powered on.

3. VMWI

A blinking orange light indicates that there are new voicemail messages. If the light is off, there are no new voicemail messages.

4. LINE IN USE

A blinking orange light indicates that there is an incoming call. A steady orange light indicates that the telephone line is in use. If the light is off, the telephone line is not in use.

5. INFO


A blinking orange light indicates that the telephone has an IP address from the broadband router, but cannot communicate with the Internet. A steady orange light indicates that the device is communicating with the Internet and is ready to be used. If the light is off, the device failed to obtain an IP address.

6. INTERNET

A blinking orange light indicates a good connection and activity on the ethernet port. A steady orange light indicates a good connection to the broadband router. If the light is off, check the physical connections for the ethernet port.

7. RESET

Press the reset while the telephone base is powered on to reboot the system. Press and hold the reset button while the telephone base is powered on to reset all configurable parameters back to factory default settings except the handset registration parameters and perform a software reboot.

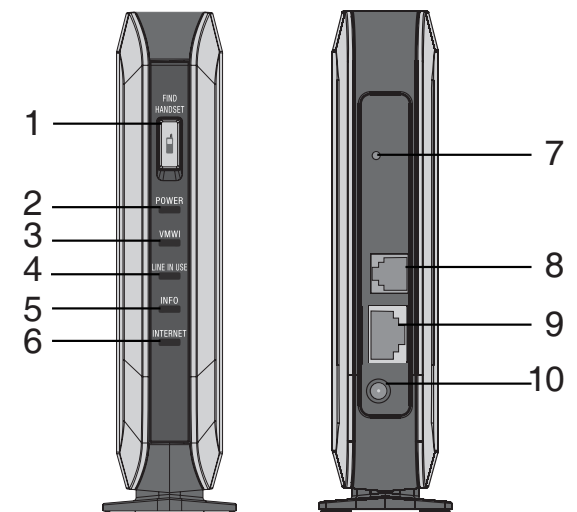

8. TEL LINE JACK

Connects to your home telephone line for making and receiving calls.

9. ETHERNET

Connects to your broadband enabled router to access the Internet.

10. POWER PORT

Connects to the telephone base power adapter, and the telephone base power adapter connect to an electrical outlet to provide power to the unit.

Getting to know the ip8300

Status of indication light

Name	Color	Indication light status	Description
POWER	Red	Steady on	Power on.
VMWI	Orange	Off	There is no new voicemail.
		Blinking	There is new voicemail.
Line In Use	Orange	Off	Telephone line is not in use.
		Blinking	Telephone is ringing.
		Steady on	Telephon line is in use.
Info	Orange	Off	Unable to obtain an IP address; DHCP failed.
		Blinking	Obtained IP but unable to register with server.
		Steady on	Registration successful. Device ready to use.
Internet	Orange	Off	No ethernet connection.
		Blinking	Data transmit/receive.
		Steady on	Ethernet cable connected.

Getting to know the ip8300

Handset layout

1. Earpiece

Audio output for telephone calls.

2. Info key

Press this key to access online content.

3. Left Softkey

Press this key to select the action shown on the bottom left of the screen.

4. (speaker)

Press this key to activate/deactivate the speakerphone. You can also use this key to place a call in speakerphone mode after pre-dialing a number.

5. /FLASH

Press this key to get a dial tone. After pre-dialing a number, press this key to make a call.

While there is a call waiting, press **FLASH** to answer the call.

6. Keypad

These keys are used for dialing phone numbers, or entering text.

7. Microphone

Audio input for telephone calls.

8. Right Softkey

Press this key to select the action shown on the bottom right of the screen.

9. REDIAL

Press this key to bring up a list of recently dialed numbers.

10. OFF



Press this key to end a call. Press this key from any menu, or submenu to return to the idle screen.

11. NavKey (Navigation Key)

Use this key for navigating menu screens and for positioning the cursor when editing text.


When the telephone is in use, use the up or down NavKey to adjust the listening volume.


Press the center NavKey **SEL** to select the highlighted item.

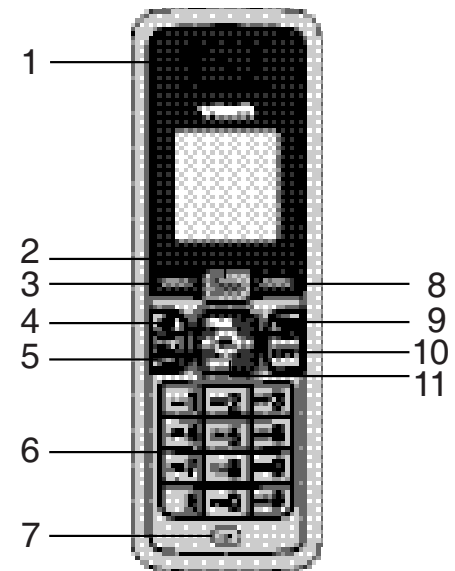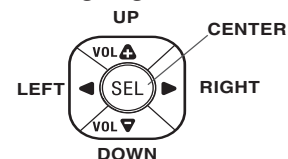



Getting to know the ip8300


Handset status icons


1. 


No connection to the telephone base. Make sure the telephone base is powered on and the telephone is within its range.
2. 

Not subscribed to any telephone base. See Registration process (page xx) for information on registering handsets to a telephone base.
3. 

Handset has signal and is communicating with the telephone base.
4. 

There are new voicemail messages.
5. 

The handset alarm is set.
6. 

The telephone line is in use.
7. 

Battery indicator. An animated battery icon is displayed when the battery is charging.




Getting to know the ip8300

Using the handset

Softkeys

The handset has two softkeys that serve multiple functions. The text shown above the softkey indicates the current function of the key. If no text is shown, then the key has no function.


Basic navigation


- Use the navigation key to move around the menu screens.
- Press the center NavKey **SEL**  to select a given option.
- Return to idle screen at anytime by pressing **OFF**.
- Use the **info** key to access online content. See the section on **Info** for more information on info functions.

Entering text

Use the dial pad to enter characters while in a text entry field. The first key press will display the first character presented on the key. Pressing the key repeatedly will cycle through the characters on the key.

Text entry tips

- Press **1** to enter a space. If the # key was used to enable numeric mode, then it will enter a 1.
- Press the left NavKey  to to move the cursor back one space and delete text.
- Pressing the # key in text entry mode alternates between lower case mode, upper case mode, and numeric mode. The upper right corner of the screen will display which mode is activated.
- Pressing the * key in text entry mode will present a chart of different symbols that you can select from. Use the navigation key to scroll though the options and press the Select softkey to insert the symbol.

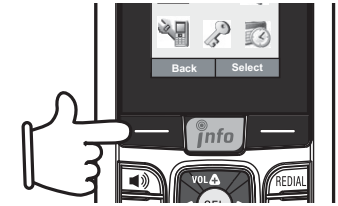

<# Key IMAGE here>

<* Key IMAGE here>

Installation and configuration

Configure your Yahoo! account

A Yahoo! account is required for accessing email, Instant Messaging, and your online address book with the ip8300. If you don't already have a Yahoo! account, visit <http://www.yahoo.com> to sign up for free.

note

- Use only the AC power adapter supplied with this telephone.
- This power unit is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.


Installation and configuration

Prepare the handset

Handset charger installation

Plug the handset charger power adapter into the power port located at the bottom of the charger and the other end into the electrical outlet as shown below. Make sure the electrical outlet is not controlled by a wall switch.


The power adapters for the handset charger and the telephone base are different. The power adapter for the handset charger is the smaller adapter.

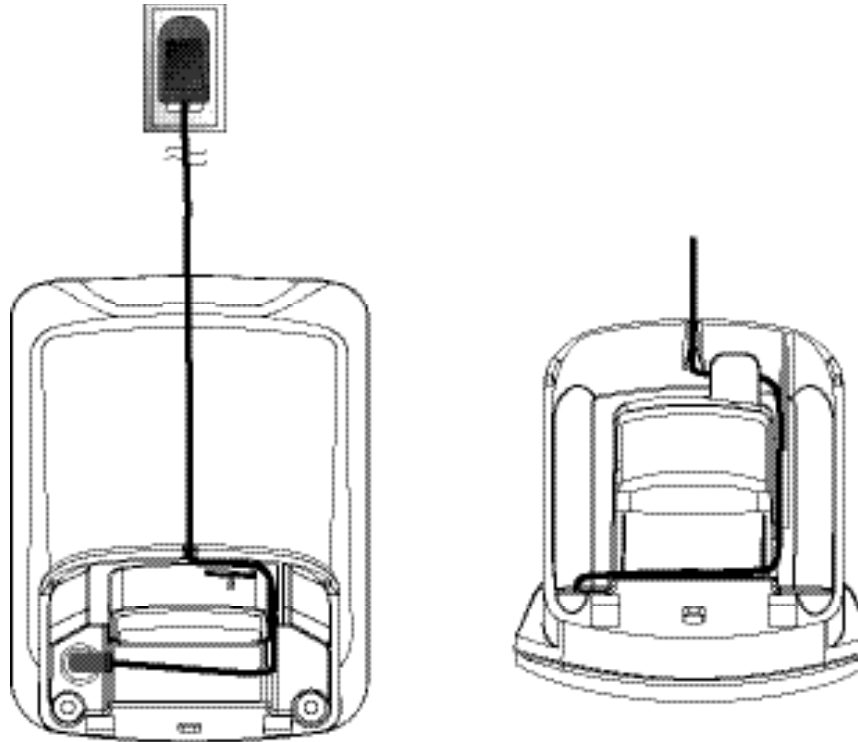

Installation and configuration

Install handset battery

- Align the two holes of the battery plug with the socket pins in the handset battery compartment, matching the red and black wires of the color-coded label.
- Place the battery in the compartment with the wires in the bottom right corner.
- Position the battery compartment cover and slide it towards the unit until it clicks into place.

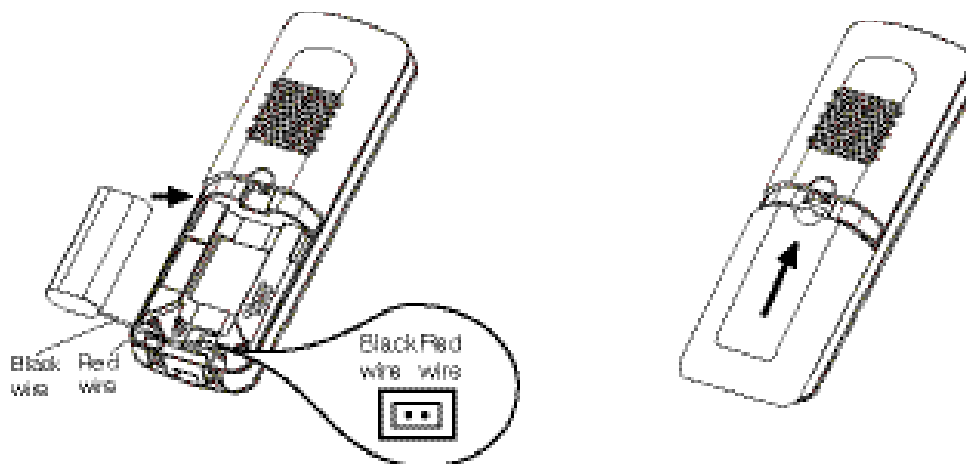

note

- To purchase replacement batteries, visit us on the web at www.vtechphones.com or call VTech Communications, Inc. at 1 (800) 595-9511 in the United States. In Canada, go to www.vtechcanada.com. or call 1 (800) 267-7377.
- It is recommended to use the telephone on-hook while you are surfing through **Info** functions due to high power consumption.

Installation and configuration

Charge handset battery

After battery installation, there may be enough power for short calls. For optimal performance, we recommend that you place the handset in the charger and allow the battery to charge for 16 hours before use. The Charge light on the handset charger will illuminate to indicate that the handset is charging. You can keep the battery charged by returning the handset to the charger after each use. When the battery power is completely depleted, a full recharge takes about 16 hours. If the handset will not be used for a long period, remove the battery to prevent possible leakage.

After the battery is fully charged, you can expect the following performance:

Operation	Operating time
While in use (talking)	2 hours
While not in use (standby*)	96 hours (4 days)

*Handset is off the telephone base but not in use.

The battery needs charging when:

- A new battery is installed in the handset.
- The battery indicator on the handset display is empty.

CAUTION:

To reduce the risk of fire or injury to persons, read and follow these instructions:

1. Use only the battery(ies) provided or their equivalent.
2. Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.

Installation and configuration

4. Exercise care in handling battery(ies) in order not to create a short circuit with conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
5. Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.


Installation and configuration

Telephone base installation

Do not turn on the telephone base until you are instructed to do so.

Before connecting the telephone base to the broadband router, make sure the router's DHCP server is enabled. Typically, the DHCP server is enabled by default, refer to the router's documentation for details on configuring this feature.

To install the telephone base, follow the steps below:

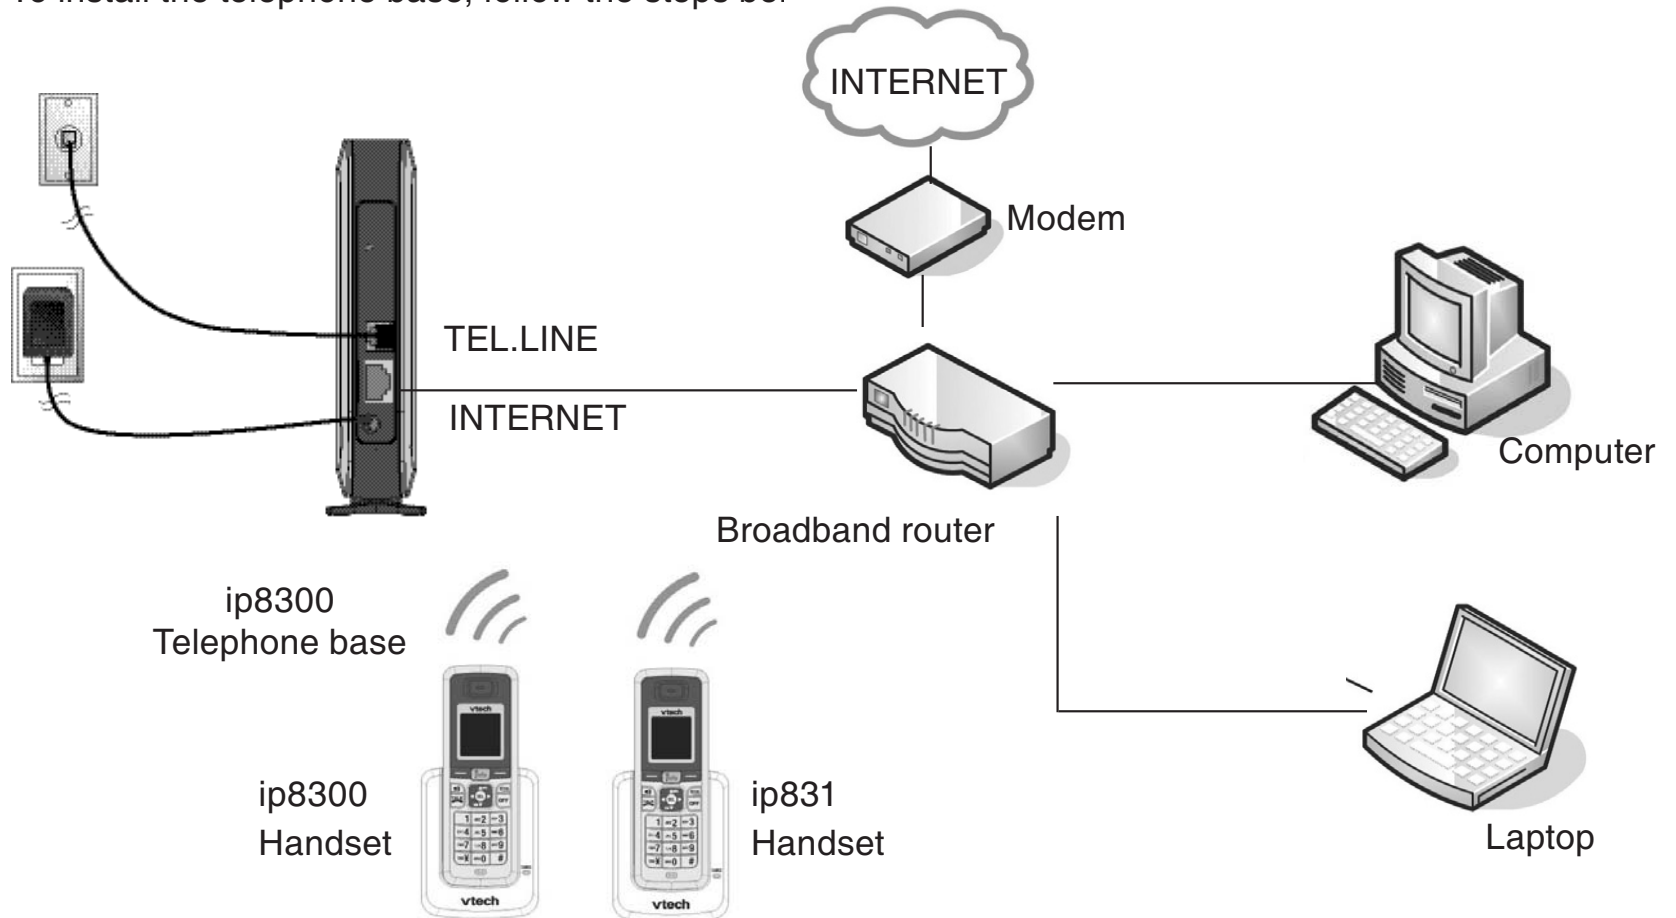

Installation and configuration

STEP 1: Install telephone line

Plug one end of the telephone line cord into the telephone line jack on the back of the telephone base. Then plug the other end of the cord into the modular wall telephone outlet.

STEP 2: Install DSL filter (optional)

If there is interference during telephone conversations and/or your caller ID features are not functioning properly, install a DSL filter to the telephone line between the telephone base and the telephone wall jack. Most DSL providers recommend installing a DSL filter in every telephone jack. Contact your DSL service provider for more information on DSL filters and telephone line interference.

STEP 3: Install ethernet cable

Using the yellow ethernet cable provided, connect one end into the yellow port labelled INTERNET, located on the back of the telephone base and connect the other end into an available LAN port on your broadband router.


STEP 4: Power on

Plug the telephone base power adapter into the power port located on the back of the ip8300 telephone base and the other end into the electrical outlet. This turns the telephone on. Do **NOT** interrupt the telephone installation process by unplugging the power or by using the handsets until the **POWER**, **INFO** and **INTERNET** indicator lights on the front of telephone base have change to steady.

STEP 5: Check diagnostic LEDs

Refer to the **Status of indication light** section on page 4 for more information on the diagnostic LEDs.

- The **POWER** light should be steady on.
- The **INTERNET** light should be steady on indicating a good physical connection from the telephone base to your router.

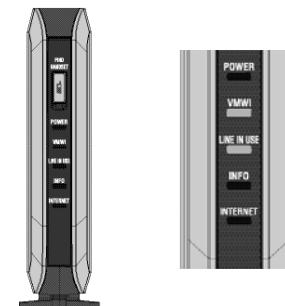

note

- This power unit is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.
- Use only the power adapter provided in this package; using any other power adapter could damage the telephone.

Installation and configuration

- The **INFO** light should be steady on indicating that the telephone system is able to access data services on the internet.

If you have problems getting the ip8300 installed properly, first verify that you have the device physically installed properly. Then try rebooting the base. Some routers require modifications to their firewall settings to allow the ip8300 to access internet content. In this case, we recommend that you forward TCP port 5060 to the IP address of the ip8300, or configure it as the DMZ host. To find the IP address of the ip8300, check the DHCP log for your router. For detailed information on checking DHCP logs, setting up port forwarding, or DMZ host configuration, refer to your router's documentation. If you continue to have problems, refer to the Troubleshooting section for additional information related to setup.

Installation and configuration

Setup for data

After installing the telephone base and cordless handset you will be able to make and receive standard telephone calls and access basic content from the Internet. For more information on standard calling, refer to **Basic operation** section on page XX. To access content from the Internet, complete the following steps:

Step 1: Press the **Info**  on the handset to display the activation screen.



Step 2: Press the **Start** softkey and then enter your ZIP code. Press the **Enter** softkey when you are finished.

If the ZIP code was entered properly, a registration successful screen will be displayed.

You will also be provided with an activation code and instructions for further personalizing the Internet content delivered to the ip8300. Refer to **Info** section on page XX for more details on configuring a personalized user profile.


If the ZIP code was entered improperly, you will be prompted to enter a valid US zip code. Press the **Back** softkey to return to the previous screen and try again.


After configuring your ZIP code, the default info screen will be displayed. The default info screen provides weather forecasts and access to Yahoo! Local search for your area. For further details on the info screen, refer to **Accessing basic content** section on pageXX.

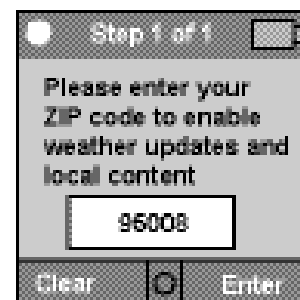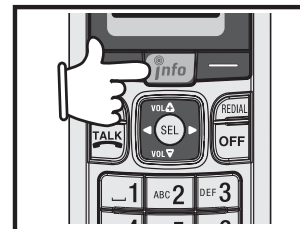



Basic operation

Making calls

Before a call is made, make sure you are within a network coverage. Check the signal icon  at the left top corner of the screen of handset, refer to **Handset status icons** section on page 6 for details. If there is no network coverage, **Low signal range** will be displayed on the screen. Move to somewhere until the signal shows you are under a strong network coverage.


To make a call, press **TALK** / **FLASH** or , then dial a number. Press **OFF** to exit.

To preview numbers before dialing, enter numbers first, then press **TALK** / **FLASH**, or , or the Call softkey to dial. Press the left NavKey  at any time to make correction as you entering numbers. Press **OFF** or the **Back** softkey to exit.





When the call is connected, the screen displays the elapsed time as you talk (in hours, minutes and seconds) and the telephone number you dial.

If the telephone number you are calling is busy, **Line Busy** will be displayed. To make a peer-to-peer call, refer to **P2P calling** section on page XX for details.

Receiving calls

When there is an incoming call, the screen of handset will display Incoming call. To answer the call, press **TALK** / **FLASH**, or , or the **Answer** softkey.

When the call is received, the date and the elapsed time as you talk will be displayed on the screen. If you subscribe to caller ID service (refer to **Caller ID** on page 18) from your telephone company, more specific information for the caller such as name and telephone number will also be displayed on the screen.

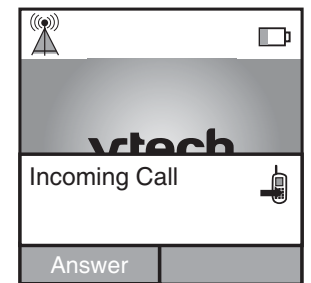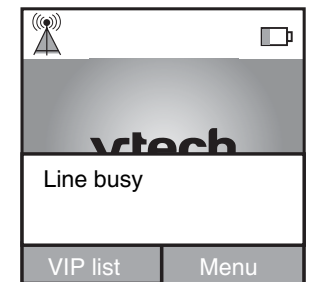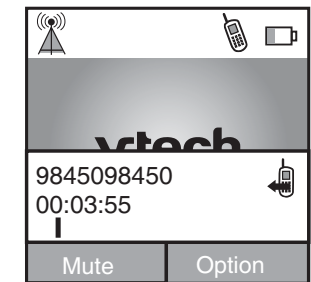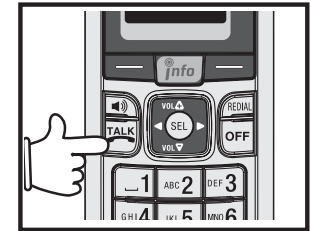

Basic operation

Caller ID

The caller ID with call waiting features in this telephone lets you see the name and telephone number of the caller before answering the call, even when you're already on a call. These features require services provided by your local telephone company.

Contact your telephone company if:

- you have both caller ID and call waiting, but as separate services (you may need combined service),
- you have only caller ID service, or only call waiting service, or
- you do not subscribe to any caller ID or call waiting services but wish to try these services.


You can use this telephone with regular caller ID service, and you can use its other features without subscribing to either caller ID or combined caller ID with call waiting service. There may be fees for these services, and these services may not be available in all areas.

The caller ID features will work only if both you and the caller are in areas offering caller ID service, and if both telephone companies use compatible equipment.

Call waiting

If you have call waiting service, there will be a tone if there is an incoming call during a telephone conversation. Press **TALK** / **FLASH**, or **Answer** softkey on the handset to answer the new incoming call.

While you are on a standard telephone call and there is a peer-to-peer incoming call, a tone will be sounded to remind you that there is an incoming call. Press the **Swap** softkey to answer it.

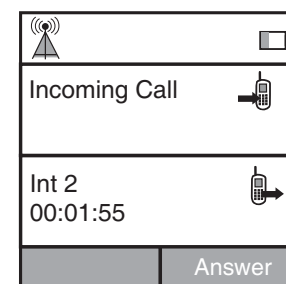

note

- When the call ends, call summary will be shown in term of hours, minutes and seconds.
- **Out of range** will be displayed while the telephone is not in the range.


Basic Operation

Ending calls

While you are on a call, press **OFF** to end the call. When a call ends, call summary will be shown in term of hours, minutes and seconds.

Speakerphone operation

Speakerphone provide you an hands-free option while you are making or answering a call.

During a call, press  to select between speakerphone and normal handset use.

Mute



Mute function is used to silence the microphone during a conversation. You will be able to hear the caller, but the caller will not be able to hear you until you press the UnMute softkey again to resume speaking. When you hang up the telephone, the feature will be canceled.

To mute/unmute the microphone:




During a call, press the Mute softkey to mute the microphone and press the UnMute softkey to resume speaking.

Call volume

You can adjust the listening volume from the earpiece or speaker during a call.

While the telephone is in use, press the up or down NavKey  or  to adjust the listening volume and a volume bar will be displayed on the screen.

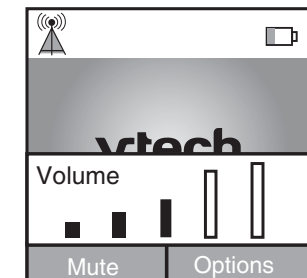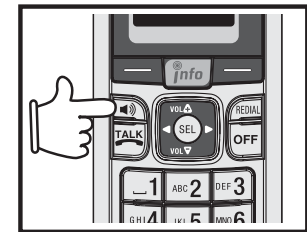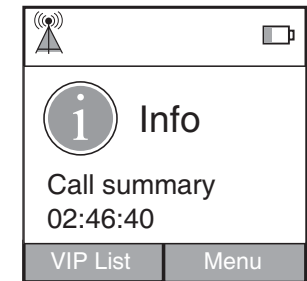


While you stop adjusting of the volume, the volume bar will only be displayed for three seconds and the volume level will be saved automatically.




Basic Operation












Redial



Redial button is a short-cut key for dialed calls. Redial/Dialed calls memory can store up to 10 entries of redial/dialed calls, if the calls are exceed its limit, the oldest entry is deleted to make room for new incoming call information.

Pressing **REDIAL** will call out the **Dialed calls** screen. A list of last ten numbers called and the time and date of the calls will be displayed on the screen. The latest number called will be highlighted. Use the up or down NavKey  or  to select the number you like to dial and press  / **FLASH** to make a call. For details, refer to the **Dialed calls** section on page XX.

Service provider voicemail

If you subscribe to voicemail service provided by your local telephone company, you can receive voicemail left by the caller. The **VMWI** indication light on the telephone base will blink and VMWI icon  will be shown on the screen of handset when you have a new voicemail message. Please contact your local telephone company for more information about voicemail service. To manually remove the VMWI indication:

- Press the **Menu** softkey while in idle mode to enter the main menu screen.
- Use the up, down, left and right NavKey or , ,  and  to choose **Registration Settings**, and press the **Select** softkey or the center NavKey **SEL**  to select.
- Use the up or down NavKey  or  to choose **Base Settings** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Use the up or down NavKey  or  to choose **Clear VMWI** and press the **Select** softkey or the center NavKey **SEL**  to select.
- The screen will display **Clear VMWI?**. Press the Confirm softkey to confirm and **Cleared VMWI successfully** will be displayed on the screen.

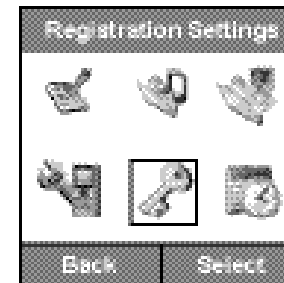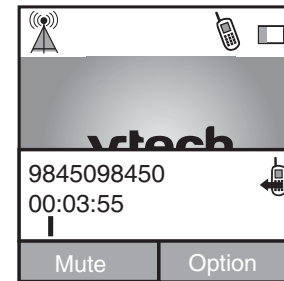

note

- Due to regional service differences, caller ID information may not be available for every incoming call. In addition, the callers may intentionally block their name and/or telephone number.

Default User

Initial registraion process

After installing the telephone base and cordless handset, you will be able to access basic content from the Internet. After installing the telephone base and cordless handset you will be able to make and receive standard telephone calls and access basic content from the Internet.

A simplified default user interface including weather updates, yellow pages and settings will be shown in info mode on the handset after you complete the initial registration process below.

Setup

To complete the initial registration process:

Step 1: Press the Info  on the handset to display the activation screen.


Step 2: Press the **Start** softkey and then enter your ZIP code. Press the **Enter** softkey when you are finished.

If the ZIP code was entered properly, a registration successful screen will be displayed.

You will also be provided with an activation code and instructions for further personalizing the Internet content delivered to the ip8300. Refer to **Info** section on page XX for more details on configuring a personalized user profile.

If the ZIP code was entered improperly, you will be prompted to enter a valid US zip code. Press the **Back** softkey to return to the previous screen and try again.

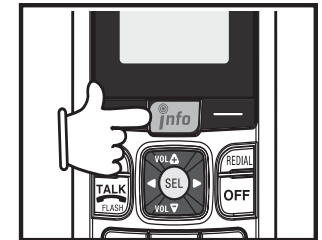

After configuring your ZIP code, the default info screen will be displayed. The default info screen provides weather forecasts and access to Yahoo! Local search for your area. For further details on the info screen, refer to Accessing basic content section on pageXX.



Default User

Network address book

Yahoo! address book is used to store personal information such as name, telephone number and address etc. Network address book provides an interface on the telephone connected to the Yahoo! address book, but it does not synchronize with the Yahoo! address book. If the storage of the Yahoo! address book is bigger than the telephone storage limit, only part of the entries in the Yahoo! address book will be loaded into the telephone.

All the entries should be stored either into sub-directories or as separated files in a Yahoo! address book. If there is only one directory in a Yahoo! address book, all the entries will be displayed directly when you enter the network address book in the info mode on the handset. The entries will be sorted by first or last name and this setting can be configured on the Yahoo! website. Use the left and right softkey  and  to scroll through the entries or use dial pad for the quick search of the entries.




The name of the active address book will be shown at the top of the screen.

Find an address book entry

The search function can be used only when the address book which support a network search function. To find an entry:

- While in network address book on the handset, press the **Search** softkey and the **Find** screen will be displayed.
- Use the dial pad to enter the first and last name of the person you want to find in the boxes accordingly, or press the **Clear** softkey to clear the entry in the box.
- Press the **Start** softkey to confirm. The system starts searching and the screen will display **Searching...**
- The results will be displayed on the screen in alphabetical order if there are results matched the search criteria.

www.vtechphones.com

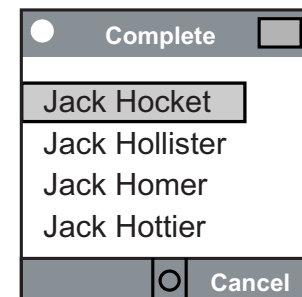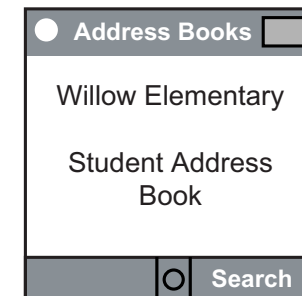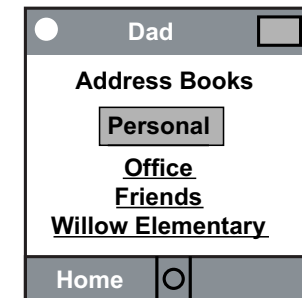
















note







- Press the **Back** softkey anytime to return to previous screen




Default User

Dial an address book entry





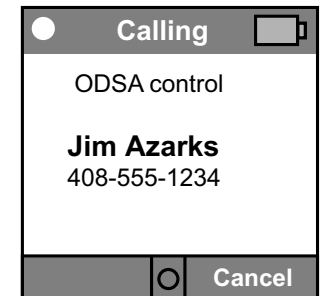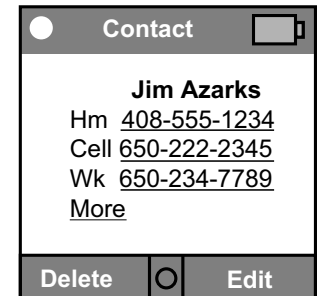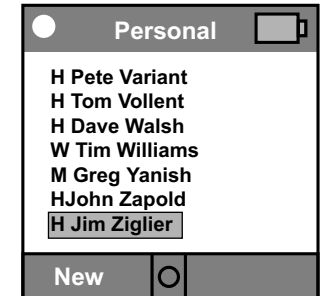

- While in network address book on the handset, use the up or down NavKey  or  to select the directory you like to enter and press the center NavKey **SEL**  to select. All the entries in the directory will be displayed.
- Use the up or down NavKey  or  to select the person you want to contact. Press **TALK** / **FLASH** or  to make a call, and the screen will display the name and telephone number of the person. Press the **Cancel** to end the call. -OR-
- While in network address book on the handset, use the up or down NavKey  or  to select the directory you like to enter and press the center NavKey **SEL**  to select. All the entries in the directory will be displayed.
- Use the up or down NavKey  or  to select the person you want to contact and press the center NavKey **SEL**  to select. The personal information of the person will be displayed on the screen and use the up or down NavKey  or  to highlight the telephone number you want to dial and press **TALK** / **FLASH** or  to make a call.

View an address book entry







- While in network address book on the handset, use the up or down NavKey  or  to select the directory you like to enter and press the center NavKey **SEL**  to select. All the entries in the directory will be displayed.
- Use the up or down NavKey  or  to select the person you want to view his/her personal information. Press the center NavKey **SEL**  to select, and the personal information of the person will be displayed on the screen.
- When there are some additional information to be shown, **More** key will be shown on the screen.





Default User

- Use the up or down NavKey  or  to highlight **More** and press the center NavKey **SEL**  to enter.
- The additional information such as email or home address will be shown on the screen. Use the up or down NavKey  or  to scroll through the content.
- While you highlight the email address, press the center NavKey **SEL**  and the email screen will be displayed on the screen. You can then send email to the person, refer to **Email** section on page XX for details.

Delete an address book entry

- While in network address book on the handset, use the up or down NavKey  or  to select the directory you like to enter and press the center NavKey **SEL**  to select. All the entries in the directory will be displayed.
- Use the up or down NavKey  or  to select the person you want to delete, and press the center NavKey **SEL**  to select. The personal information of the person will be displayed on the screen.
- Press the **Delete** softkey and the screen will display **Contact to be deleted** **Are you sure?** Press the **Yes** softkey to confirm, or press the **No** softkey exit and return to previous screen.

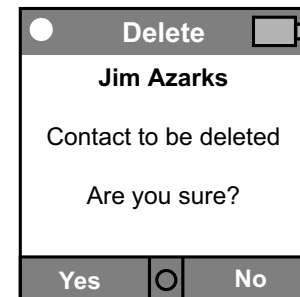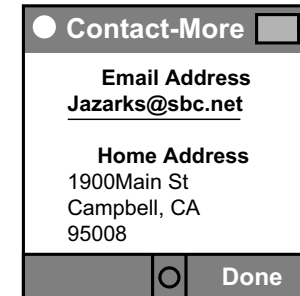













Default User

Add an new address book entry

The new/edit function will be enabled only when the network address book support the edit function.

While you add a new entry in the address book on the handset, you can only enter the name and telephone number. For other information including email, home address etc you like to enter, go to online Yahoo! address book for further customization. To add a new address book entry:

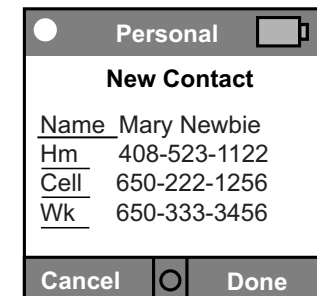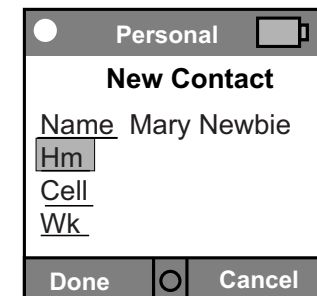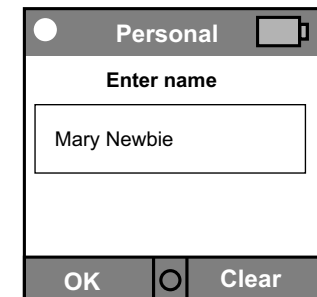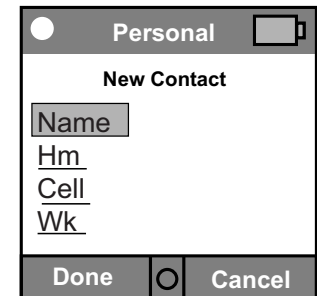


- While in network address book on the handset, use the up or down NavKey  or  to select the directory you like to enter and press the center NavKey **SEL**  to select. All the entries in the directory will be displayed.
- Press the **New** softkey to add a new entry in this directory and a **Personal** screen will be displayed on the screen. There are four types of information including name(Name), home telephone number(Hm), cellphone number(Cell) and work telephone number(Wk) you can enter.
- Use the up or down NavKey  or  to highlight **Name** and the edit screen will be displayed.
- Use dial pad to enter the name in the box and press the **OK** softkey to confirm or press the **Clear** softkey to clear the text in the box.
- **Personal** screen will be displayed and the name you entered will be shown next the the **Name** row and the next row will be highlighted.
- Use the up or down NavKey  or  to highlight the information(Hm, Cell or Wk) you want to enter, and press the center NavKey **SEL**  to select and the edit screen of that information will be shown. Use the dial pad to enter the number in the box and press **OK** softkey to confirm. The number you entered will be shown next to that information.
- After you enter all the information you want, press the **Done** softkey to confirm. Press the **Cancel** softkey to exit.



Default User

Accessing Basic Content




In the default user interface, you can access non-personalized content including weather updates, yellow pages and settings on the handset after you complete the initial registration process.



You can view your local weather updates and information of yellow pages or setting on the handset by using the up or down NavKey  or  to select the weather, or yellow pages, or settings icons on the screen and the name of the icon will be shown at the top of the screen. Press the center NavKey **SEL**  to confirm.

If you require to use more personalized functions or view more personalized information such as news, email, instant message and horoscope on the handset, you have to configure your account on www.infophone.com/ut. For further customization of your account, refer to the **Info** section on page XX.

Weather

This function allows you to view the updated weather report.

- Press **Info** on the handset while in idle mode to enter info mode.
- While in the main screen of info mode, press the up or down NavKey  or  to choose weather icon, and press the center NavKey **SEL**  to confirm, and the weather report will be displayed.
- To view weather forecast, press the **Forecast** softkey and tomorrow's weather report will be displayed. Press the **Back** softkey to go back to today's weather report.
- Press the **Home** softkey to return to the main screen of the info mode.

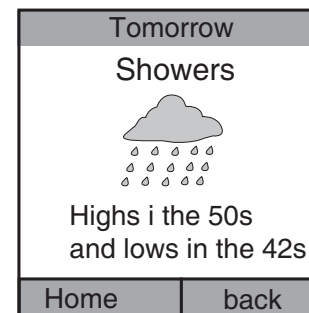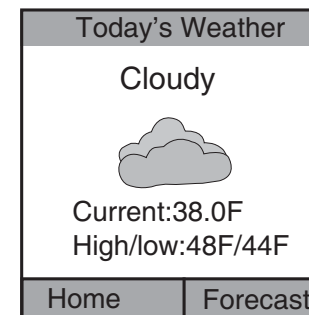












note

- Press the **Cancel** softkey anytime to exit.

Default User

Yellow page

This function allows you to view information of yellow pages including restaurant, home services, department stores, travel, medical etc.

- While in info mode, press the up or down NavKey  or  to choose yellow pages icon, and press the center NavKey **SEL**  to confirm, and the categories inside the yellow pages will be displayed.
- Use the up or down NavKey  or  to choose the category you want to enter, and press the center NavKey **SEL**  to confirm. Sub-categories will then be displayed.
- Use the up or down NavKey  or  to scroll though the sub-categories if sub-categories are available and press the center NavKey **SEL**  to select the information you want to view. Then the content will be displayed on the screen.
- Use the up or down NavKey  or  to scroll though the content while you viewing of the information.
- Press the **Back** softkey to return to previous screen, or press the **Home** softkey to return to the main screen in info mode.







Settings

This function provide you additional information about the telephone or registration including web portal code, phone menu and software version.

Default User







Web portal code

You can always check for the registration website and activation code of the telephone in this section.

- While in info mode, press the up or down NavKey  or  to choose **Settings** icon, and press the center NavKey **SEL**  to confirm.
- Use the up or down NavKey  or  to choose **Web Portal Code**, and press the center NavKey **SEL**  to confirm.
- The registration website address and activation code will be displayed on the screen. Press the **Back** softkey to return to the previous screen.







Phone Menu

You can check telephone menu information in this section.

- While in info mode, press the up or down NavKey  or  to choose **Settings** icon, and press the center NavKey **SEL**  to confirm.
- Use the up or down NavKey  or  to choose **Phone Menu**, and press the center NavKey **SEL**  to confirm.
- Telephone menu information will be shown on the screen. Press the **Back** softkey to return to the previous screen.

Software Version

You can check for the software information of the telephone in this section.

- While in info mode, press the up or down NavKey  or  to choose **Settings** icon, and press the center NavKey **SEL**  to confirm.
- Use the up or down NavKey  or  to choose **Software Version**, and press the center NavKey **SEL**  to confirm.
- The software version of the telephone will be displayed on the screen. Press the **Back** softkey to return to the previous screen.

Main Menu

Call history

The ip8300 telephone supports three call history logs: Missed calls, Received calls, and Dialed calls. A maximum of 50 missed and received calls and 10 dialed calls can be stored.

Entries are displayed in order from the most recent entry to the oldest entry. When the memory is full, the oldest entry is deleted to make room for new incoming call information.






If you subscribe to caller ID from your telephone company, then the Missed and Received call history lists will display more specific information for the caller, such as their name and telephone number. Otherwise, the telephone will just record the date and time the call came in. Dialed Call history keeps track of the number you dialed and the date and time the call was placed.


Missed calls

Missed calls are the calls that have not been reviewed on the handset and the most recently missed call records will be stored in missed calls.





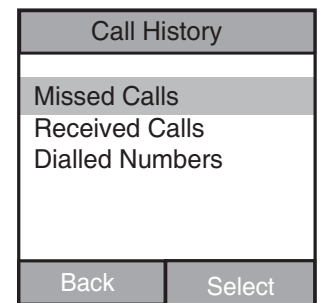


While the handset is not being used, **You have X Missed call(s)** will be displayed on the screen if there are new missed call entries, i.e. missed calls (including missed call waiting records) and un-reviewed calls. Press the **View** softkey to review the missed call list or press the **Back** softkey to exit to idle mode.

You can also review the missed calls list through the main menu, to review the missed calls:

















- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.








Main Menu

- Press the up, down, left and right NavKey or , ,  and  to choose **Missed Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of missed calls with telephone number, date and time will be displayed if you subscribe to caller ID from your telephone company. **No missed call** will be displayed if there is no missed call entry.
- Press the up or down NavKey  or  to review the entries.

Dial a missed call entry

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up, down, left and right NavKey or , ,  and  to choose **Missed Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of missed calls with telephone number, date and time will be displayed if you subscribe to caller ID from your telephone company. **No missed call** will be displayed if there is no missed call entry.
- Press the up or down NavKey  or  to choose an entry you want to dial and press  / **FLASH** to dial. -OR-
- Press the **Options** softkey. Use the up or down NavKey  or  to choose Call and press the **Select** softkey or the center NavKey **SEL**  to dial the entry. Press the **Close** softkey to return to previous screen.











Delete a missed call entry

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.

Missed Calls	
Thomas 1-222-333-4444 01/31 00:12	
Mike 1-444-555-6666	
Close	Options
















Missed Calls	
Thomas 1-222-333-4444 01/31 00:12	
Mike 1-444-555-6666	
Close	Options

Main Menu

- Press the up, down, left and right NavKey or , ,  and  to choose **Missed Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of missed calls with telephone number, date and time will be displayed if you subscribe to caller ID from your telephone company. **No missed call** will be displayed if there is no missed call entry.
- Press the up or down NavKey  or  to choose an entry you want to delete and press the **Options** softkey.
- Use the up or down NavKey  or  to choose Delete and press the **Select** softkey or the center NavKey **SEL**  to confirm. The selected entry will be deleted from the screen.

Missed Calls	
Thomas	1-222-333-4444
01/31 00:12	
Mike	1-444-555-6666
Close	Options

Delete all missed call entries

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up, down, left and right NavKey or , ,  and  to choose **Missed Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of missed calls with telephone number, date and time will be displayed if you subscribe to caller ID from your telephone company. **No missed call** will be displayed if there is no missed call entry.
- Press the up or down NavKey  or  to choose an entry and press the **Options** softkey. Use the up or down NavKey  or  to choose Delete All and press the **Select** softkey or the center NavKey **SEL**  to confirm.
- The screen will display **Delete all calls?**, press the **Yes** softkey to confirm and **All missed calls are deleted** will be displayed on the screen or press the **No** softkey to return to previous screen.













Call History	
Missed Calls	
Received Calls	
Dialled Numbers	
Back	Select

Missed Calls	
Thomas	1-222-333-4444
01/31 00:12	
Mike	1-444-555-6666
Close	Options











Main Menu

Received calls

Received calls are the calls that have been received on the handset and the most recently received call records will be stored in received calls. To view the received calls:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up, down, left and right NavKey or , ,  and  to choose **Received Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of received calls with telephone number, date and time will be displayed if you subscribe to caller ID from your telephone company. **No received call** will be displayed if there is no received call entry.
- Press the up or down NavKey  or  to review the entries.

Dial a received call entry

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up, down, left and right NavKey or , ,  and  to choose **Received Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of received calls with telephone number, date and time will be displayed if you subscribe to caller ID from your telephone company. **No received call** will be displayed if there is no received call entry.

Call History	
Missed Calls	
Received Calls	
Dialled Numbers	
Back	Select






Received Calls	
Thomas 1-222-333-4444 01/31 00:12	
Mike 1-444-555-6666	
Close	Options

Received Calls	
Thomas 1-222-333-4444 01/31 00:12	
Mike 1-444-555-6666	
Close	Options
















note

- Press the **Close** softkey to return to previous screen.
- Due to regional service differences, caller ID information may not be available for every incoming call. In addition, the callers may intentionally block their name and/or telephone number

Main Menu

- Press the up or down NavKey  or  to choose an entry you want to dial and press **TALK** / **FLASH** to dial. -OR-
- Press the **Options** softkey. Use the up or down NavKey  or  to choose Call and press the **Select** softkey or the center NavKey **SEL**  to dial the entry. Press the **Close** softkey to return to previous screen.
















Delete a received call entry




- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up, down, left and right NavKey or , ,  and  to choose **Received Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of received calls with telephone number, date and time will be displayed if you subscribe to caller ID from your telephone company. **No received call** will be displayed if there is no received call entry.
- Press the up or down NavKey  or  to choose an entry you want to delete and press the **Options** softkey.
- Use the up or down NavKey  or  to choose Delete and press the **Select** softkey or the center NavKey **SEL**  to confirm. The selected entry will be deleted from the screen.
- Press the **Close** softkey to return to previous screen.

Received Calls	
Thomas 1-222-333-4444 01/31 00:12	
Mike 1-444-555-6666	
Close	Options

Main Menu

Delete all received call entries

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up, down, left and right NavKey or , ,  and  to choose **Received Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of received calls with telephone number, date and time will be displayed if you subscribe to caller ID from your telephone company. **No received call** will be displayed if there is no received call entry.
- Press the up or down NavKey  or  to choose an entry and press the **Options** softkey.
- Use the up or down NavKey  or  to choose Delete All and press the **Select** softkey or the center NavKey **SEL**  to confirm.
- The screen will display **Delete all calls?**. Press the **Yes** softkey to confirm and **All received calls are deleted** will be displayed on the screen or press the **No** softkey to return to previous screen.

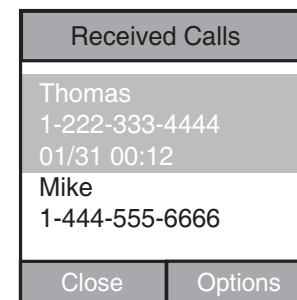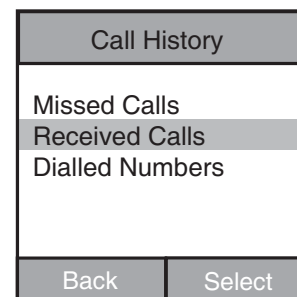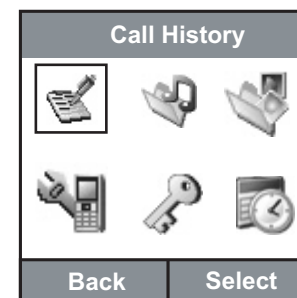













note
















- Press the **Close** softkey to return to previous screen.

Main Menu Dialed number

Dialed calls are the calls that have been dialed or attempted to dial on the handset and the most recently dialed call records will be stored in dialed calls. To view the dialed calls:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up, down, left and right NavKey or , ,  and  to choose **Dialed Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of dialed calls with telephone number, date and time will be displayed. **No dialed call** will be displayed if there is no dialed call entry.
- Press the up or down NavKey  or  to review the entries.

Dial a dial call entry

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up, down, left and right NavKey or , ,  and  to choose **Dialed Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of dialed calls with telephone number, date and time will be displayed. **No dialed call** will be displayed if there is no dialed call entry.
- Press the up or down NavKey  or  to choose an entry you want to dial and press **TALK** / **FLASH** to dial. -OR-
- Press the **Options** softkey. Use the up or down NavKey  or  to choose Call and press the **Select** softkey or the center NavKey **SEL**  to dial the entry.
















Call History	
Missed Calls	
Received Calls	
Dialed Numbers	
Back	Select

Dialed Calls	
1-222-333-4444	
01-01-2007 00:12	
1-444-555-6666	
01-11-2007 07:44	
Close	Option
















Dialed Calls	
1-222-333-4444	
01-01-2007 00:12	
1-444-555-6666	
01-11-2007 07:44	
Close	Option

Main Menu

Delete a dial call entry

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up, down, left and right NavKey or , ,  and  to choose **Dialed Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of dialed calls with telephone number, date and time will be displayed.
- Press the up or down NavKey  or  to choose an entry you want to delete and press the **Options** softkey.
- Use the up or down NavKey  or  to choose Delete and press the **Select** softkey or the center NavKey **SEL**  to confirm. The selected entry will be deleted from the screen.

Delete all dial call entries

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Call History** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up, down, left and right NavKey or , ,  and  to choose **Dialed Calls** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of dialed calls with telephone number, date and time will be displayed.
- Press the up or down NavKey  or  to choose an entry and press the **Options** softkey. Use the up or down NavKey  or  to choose Delete All and press the **Select** softkey or the center NavKey **SEL**  to confirm.
- The screen will display **Delete all calls?**. Press the **Yes** softkey to confirm and **All dialed calls are deleted** will be displayed on the screen.

Dialed Calls	
1-222-333-4444 01-01-2007 00:12	
1-444-555-6666 01-11-2007 07:44	
Close	Option

Dialed Calls	
1-222-333-4444 01-01-2007 00:12	
1-444-555-6666 01-11-2007 07:44	
Close	Option

note













- **No dialed call** will be displayed if there is no dialed call entry.
- Press the **No** softkey to return to previous screen.




Main Menu

Sound album(Ring tones)

Sound album contains files of ring tone. Ring tone is the song that will be played from the speaker while there is an incoming call. In this section, you can play ring tones or set the ring tone for different types of incoming calls including normal(Home), intercom(Internal) and VoIP(VOIP) calls.





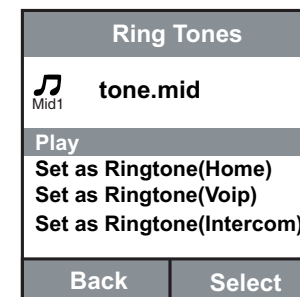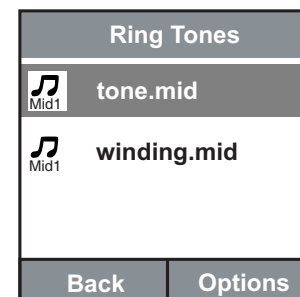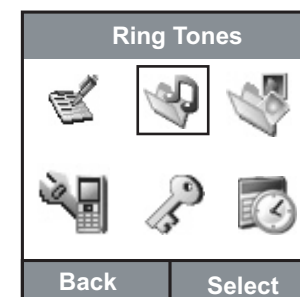





Play ring tones in sound album




- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Sound album** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of songs will be displayed.
- Press the up or down NavKey  or  to choose a song, and press the **Options** softkey.
- Press the up or down NavKey  or  to choose Play and press the **Select** softkey or the center NavKey **SEL**  to select. The selected sound will be played from the speaker.
- The screen will display the progress of the sound and the volume bar will be shown at the lower part of the screen.
- While the song plays, use the up or down NavKey  or  to adjust the volume or press the **Stop** softkey to stop playing of the song.
- Press the **Back** softkey to return to previous screen.



Main Menu





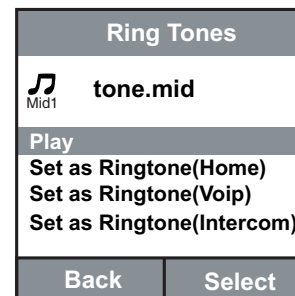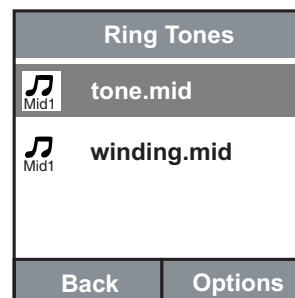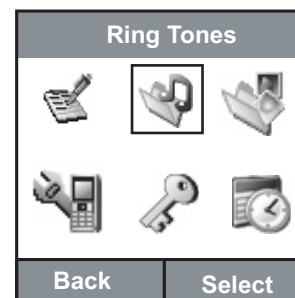






Set ring tone in sound album




- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Sound album** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of songs will be displayed.
- Press the up or down NavKey  or  to choose a song, and press the **Options** softkey.
- Press the up or down NavKey  or  to choose Set as Ringtone(Home) to set the ringtone for normal phone, or to choose Set as Ringtone(Voip) to set the ringtone for the Voip phone, or to choose Set as Ringtone(intercom) to set the ringtone for the intercom.
- Press the **Select** softkey or the center NavKey **SEL**  to select the song as ringtone. The screen displays **Ring tone is set**.
- Press the **Back** softkey to return to previous screen.



Main Menu Wallpapers

The handset is preset with background picture (wallpaper) that will be displayed when the handset is in idle mode. All the pictures stored in **Wallpapers** can be used as wallpaper on the handset. To set the wallpaper on the handset:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Wallpapers** and press the **Select** softkey or the center NavKey **SEL**  to select. A list of picture files will be displayed.
- Press the up or down NavKey  or  to choose a picture and press the **Preview** softkey or the center NavKey **SEL**  to view the selected picture. The selected picture will be displayed on the screen.
- Use the up or down NavKey  or  to scroll though the pictures on the list.
- Press the **Set** softkey or the center NavKey **SEL**  to set the selected picture as wallpaper and the screen displays **Set Wallpaper Done**.
- Press the **Back** softkey to return to previous screen, or press **OFF** to return to the idle mode and the selected picture will be displayed as wallpaper on the main screen.

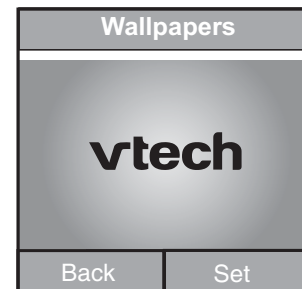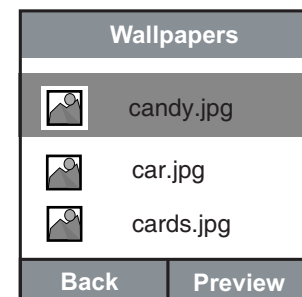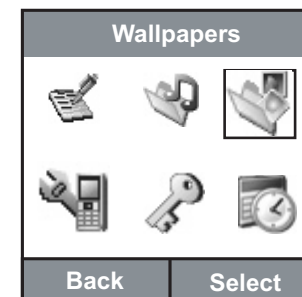











Main Menu



Phone settings

You can change the telephone settings including ringer volume, keypad tone, color themes, handset name and contrast of handset's screen or reset the telephone to default settings in this section.

Ringer volume

There are five volume levels you can choose from on the handset. This feature allows you to adjust ring volume for ring tone. To set the ring volume:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Phone Settings** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Ringer Volume** and press the **Select** softkey or the center NavKey **SEL**  to select. The current ringer volume will be sounded.
- Use the up or down NavKey  or  to increase or decrease the volume. The volume level you adjust will be shown as highlighted volume bar(s) on the screen and the volume level will be sounded at the same time.
- Press the **Done** softkey to confirm, and the ringer volume level will be displayed on the **Settings** screen. Press the **Back** softkey anytime to return to previous screen.

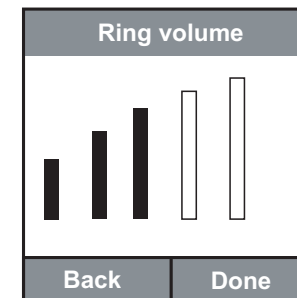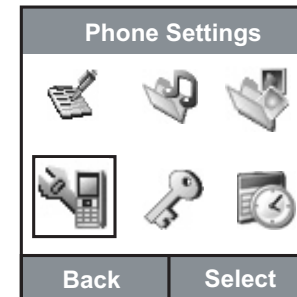












note

- Press the **Back** softkey anytime to return to previous screen.

Main menu












Keypad tone


Keypad tone can be turned on or off in this section. When the keypad tone is on, a sound will be generated while any key is pressed on the handset. To set the keypad tone:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Phone Settings** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Keypad Tone** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Use the up or down NavKey  or  to choose from **On** or **Off** of the keypad tone and press the **Select** softkey or the center NavKey **SEL**  to confirm. The status of keypad tone will be shown on the **Settings** screen.

Color themes

The color of handset interface can be changed into red, blue or green color. To set the color themes:



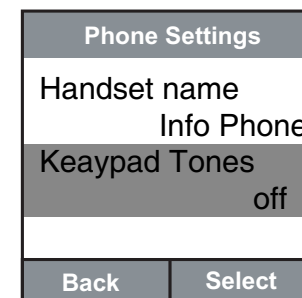






- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Phone Settings** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Color Themes** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Use the up or down NavKey  or  to choose from **Red**, **Blue** or **Green** color.
- Press the **Select** softkey or the center NavKey **SEL**  to confirm and the selected color of the handset interface will be shown automatically.



Main menu








Handset name

The default name of the handset is Info Phone which will be displayed on the main screen while in idle mode. To change the name of the handset:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Phone Settings** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Handset name** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Use dial pad to enter the name of handset in the box. Press the left NavKey  to move the cursor back one space and delete text if you made mistake.
- Press **#** to toggle between different input modes of lowercase, uppercase, or number. Press **1** to insert a space while in lowercase or uppercase input mode. A maximum of 16 characters can be input.
- Press the **Done** softkey to confirm and the new name of the handset will be displayed on **Settings** screen and on the main screen while in idle mode.
- Press the **Back** softkey anytime to return to previous screen.



Set contrast

The contrast of handset's screen can be adjusted from lightness to darkness. To change the contrast of the handset's screen.

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Phone Settings** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Set Contrast** and press the


www.vtechphones.com

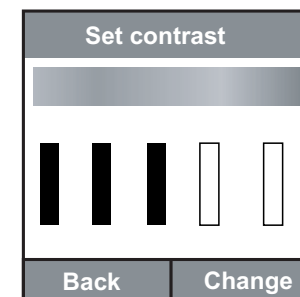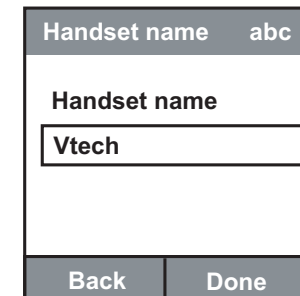

note



note









Main menu

Select softkey or the center NavKey **SEL**  to select. The current contrast level will be shown as highlighted bar on the screen.

- Use the up or down NavKey  or  to increase or decrease the level of contrast. The contrast level you adjust will be shown as highlighted bar(s) on the screen and the contrast of the screen will be changed as you adjust as well.
- Press the **Change** softkey to confirm, and the contrast volume level will be displayed on the **Settings** screen. Press the **Back** softkey anytime to return to previous screen.



Reset settings

All the telephone settings including ringer volume, ring tone, wallpaper, keypad tone, color themes, handset name and so on can be reset to the default settings in this section. To reset the telephone settings:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Phone Settings** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Reset settings** and press the **Select** softkey or the center NavKey **SEL**  to select. The screen will display **Reset general settings?**
- Press the **Yes** softkey to confirm, or press the **No** softkey to exit.
- Press the **Back** softkey anytime to return to previous screen.

Handset registraion

Handset registration are used for configuring the registration related settings for handset and telephone base including registration to telephone base, change of system pin, de-registration of handset and clear of VMWI.

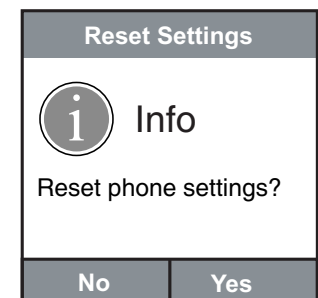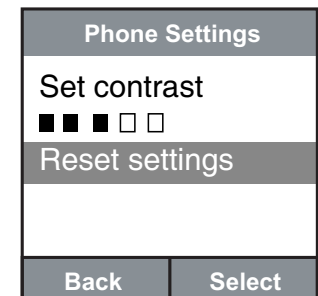

Main menu

Handset settings

This feature is used for registering of the handset to the telephone base. The handset will be automatically registered to the telephone base as handset 1 after the installation of handset and telephone base. However, if you want to use an extra handset you buy separately, you have to register the new handset to the telephone base before it use. To register a new handset, refer to the section of Adding accessory handsets on page XX.









Base settings

This feature allows you to change the system PIN, de-register the handset to the telephone base and clear VMWI.


The system will require you to input the PIN number while you register and de-register your handset, or change the system PIN. The default of system PIN on the handset is 0000 and you can change it in this section. In the base settings, it also allows you to de-register the handset to the telephone base. For the details of clear VMWI, refer to **Service provider voicemail** on page 18.

Change system PIN

This feature allows you to change the system PIN number and the PIN must be four digit long. To change the system PIN:





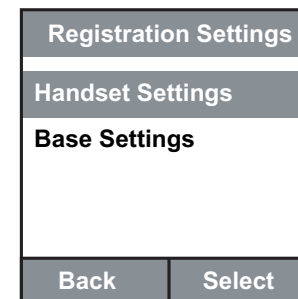

- Press the **Menu** softkey while in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Handset registration**, and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Base Settings**, and press the **Select** softkey or the center NavKey **SEL**  to select.

note










note

Main menu

- Press the up or down NavKey  or  to choose **Change Sys. PIN**, and press the **Select** softkey or the center NavKey **SEL**  to select. The **Change Sys. PIN** screen will be displayed.
- Use dial pad to enter the old PIN in the **Enter Old PIN** box, and press the **Done** softkey to confirm.
- Use dial pad to enter the new PIN in the **Enter New PIN** box on the upper part of the screen and the PIN you enter will be presented as in the box. Press the left NavKey  to backspace and the text will be deleted as the cursor move backward.
- Press the down NavKey  move to the **Confirm New PIN** box on the lower part of the screen. Use dial pad to re-enter the new PIN in the box and the PIN you enter will be presented as in the box. Press the left NavKey  to backspace and the text will be deleted as the cursor move backward.
- Press the **Done** softkey to confirm the new PIN and the screen will display **Accept**. If the PINs you enter in the two boxes are not the same, **PIN does not match!** will be displayed.

De-register handset

This feature allows you to de-register the handset to the telephone base. If more than one handset registered to the telephone base, all the handsets will be displayed on the **de-register handset** screen. Either one of the handset can perform de-registration for the other handsets. To de-register the handset:

- Press the **Menu** softkey while in idle mode to display the main menu.
- Use the up, down, left and right NavKey or , ,  and  to choose **Handset registration**, and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Base Settings** and press








Base Setting	
Change Sys. PIN De-registration Clear VMWI	
Back	Select

Enter PIN	
Enter OLD PIN <input type="text"/>	
Back	Done

Enter New PIN	
Enter new PIN <input type="text"/>	
Confirm new PIN <input type="text"/>	
Back	OK

Main menu

the **Select** softkey or the center NavKey **SEL**  to select.

- Press the up or down NavKey  or  to choose **De-register Handset** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Use dial pad to enter the PIN in the **Enter PIN** box and the PIN you enter will be presented as in the box. Press the left NavKey  to backspace and the text will be deleted as the cursor move backward.
- Press the **Done** softkey to confirm. The screen will display all the handset(s) registered to the telephone base.
- Press the up or down NavKey  or  to choose the handset you want to de-register to the telephone base and press the **Select** softkey or the center NavKey **SEL**  to confirm. The screen will display **De-register successfully**.

De-registration	
Handset 1	
Handset 2	
Handset 3	
Handset 4	
Back	Select

note

- The PIN must be four digit long.

Date and time

The default settings of date and time of the handset are 01 January 2007 and 12:00 AM respectively and it will be displayed on the screen while in idle mode by default. You can allow the date and time to be set automatically only if you subscribe to Caller ID service provided by your local telephone company (refer to Call ID on page XX). You can also set the time and date manually. In this section, the date and time can be set manually or can be hidden from the main menu.



















An alarm will be sounded to remind you the set time when you set the alarm on the handset. In this section, the alarm can be set or disabled and its setting including alarm volume and tone can be changed as well.




note

Main menu

Set the time

This feature allows you to set the time on the handset. To set the time:



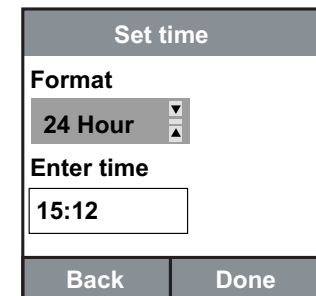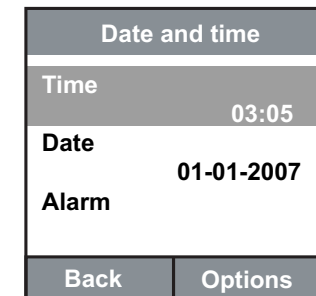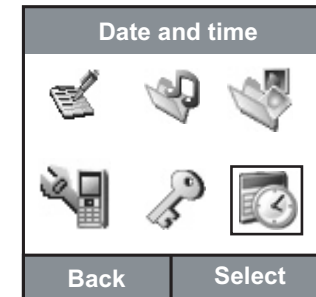







- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Date and Time** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Time** and press the **Options** softkey.
- Use the up or down NavKey  or  to choose **Set** and press the **Select** softkey or the center NavKey **SEL**  to confirm. The **Set time** screen will be displayed.
- Press the left or right NavKey  or  to toggle the format of time between **12 Hour** and **24 Hour**.
- Press the down NavKey  to move to next box to enter the time.
- Press the left or right NavKey  or  to move the cursor forth and back inside the box, and use dial pad to enter the time.
- Press the down NavKey  to move to next box to enter **AM** or **PM** if 12 hour is selected in the format box.
- Press the left or right NavKey  or  to toggle between **AM** and **PM**.
- Press the **Done** softkey to confirm, and the time will be shown on the **Date and Time** screen and the main screen while in idle mode. The screen will display **Enter valid value!** if the time is incorrect.
- Press the **Back** softkey to return to previous screen.



Main menu













Hide/Show the time




This feature allows you to show or hide the time on the main screen of the handset while in idle mode. To hide/show the time:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Date and Time** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Time** and press the **Options** softkey.
- Use the up or down NavKey  or  to choose **Hide/Show** and press the **Select** softkey or the center NavKey **SEL**  to confirm. The time will be hidden/shown on the main screen while in idle mode.

Set the date

This feature allows you to set the date. To set the date:

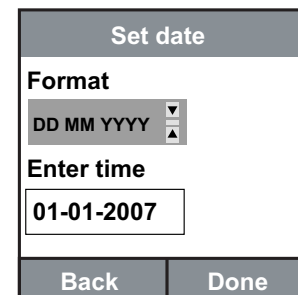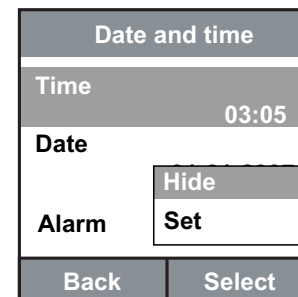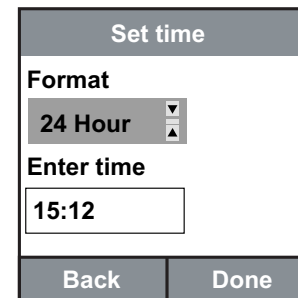


- Press the **Menu** softkey when in idle mode to display the main menu
- Press the up, down, left and right NavKey or , ,  and  to choose **Date and Time** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose Date and press the **Options** softkey.
- Press the up or down NavKey  or  to choose **Set** and press the **Select** softkey or the center NavKey **SEL**  to confirm. The **Set date** screen will be displayed.
- Press the left or right NavKey  or  to toggle the format of date between dd/mm/yyyy, or yyyy/mm/dd, or mm/dd/yyyy (d: date, m: month, y: year).



note











note

Main menu

- Press the down NavKey  to move to next box to enter the date.
- Press the left or right NavKey  or  to move the cursor forth and back inside the box, and use dial pad to enter the date.
- Press the **Done** softkey to confirm, the date will be shown on the **Date and Time** screen and the main screen while in idle mode. The screen will display **Enter valid value!** if the date is incorrect.
- Press the **Back** softkey to return to previous screen.






Hide/Show the date


This feature allows you to hide or show the date on the main screen of the handset while in idle mode. To hide/show the date:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Date and Time** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose Date and press the **Options** softkey.
- Use the up or down NavKey  or  to choose **Hide/Show** and press the **Select** softkey or the center NavKey **SEL**  to confirm. The date will be hidden/shown on the main screen while in idle mode.

Set alarm

This feature allows you to set the alarm on or off on the handset. To set the alarm:















- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Date and Time** and press the **Select** softkey or the center NavKey **SEL** .

Set date	
Format	DD MM YYYY 
Enter time	01-01-2007
Back	Done

Date and time	
Time	03:05
Date	
Alarm	Hide Set
Back	Select






Main menu

to select.

- Press the up or down NavKey  or  to choose **Alarm** and press the **Options** softkey.
- Use the up or down NavKey  or  to choose **Set alarm** and press the **Select** softkey or the center NavKey **SEL**  to confirm. The **Set alarm** screen will be displayed.
- Press the left or right NavKey  or  to toggle between **On** or **Off** of the daily alarm.
- Press the down NavKey  to move to next box to enter the time.
- Press the left or right NavKey  or  to move the cursor forth and back inside the box, and use dial pad to enter the time.
- Press the down NavKey  to move to next box to choose **AM** or **PM** if 12 hour format is chosen in **Set time** screen.
- Press the left or right NavKey  or  to toggle between **AM** or **PM**, and press the **Done** softkey to confirm. The time of alarm will be shown on the **Date and Time** screen and an alarm icon  will be shown at the top of the main screen while in idle mode.
- The screen will display **Enter valid value!** if the time is incorrect.
- Press the **Back** softkey to return to previous screen.

Set alarm volume

This feature allows you to set the alarm volume. To set the alarm volume:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Date and Time** and press the **Select** softkey or the center NavKey **SEL**  to select.

Date and time	
Date	01-01-2007
Alarm	
Reset alarm	▼
Disable alarm	
Alarm settings	▲
Back	Select

Date and time	
Time	03:05
Date	01-01-2007
Alarm	
Back	Options











Date and time	
Date	01-01-2007
Alarm	
Set alarm	
Alarm settings	
Back	Select

Set alarm	
Daily alarm	
Off	▼
Enter time	
06:00	
Back	Done

note











note




Main menu

- Press the up or down NavKey  or  to choose **Alarm** and press the **Options** softkey.
- Press the up or down NavKey  or  to choose **Alarm settings** and press the **Select** softkey or the center NavKey **SEL**  to confirm.
- Press the up or down NavKey  or  to choose **Alarm volume**, and press the **Select** softkey or the center NavKey **SEL**  to select. The current alarm volume will be sounded.
- Use the up or down NavKey  or  to increase or decrease the alarm volume. The alarm volume level you adjust will be shown as highlighted volume bar(s) on the screen and the alarm volume level will be sounded at the same time.
- Press the **Done** softkey to confirm, and the alarm volume level will be displayed on the **Alarm settings** screen.
- Press the **Back** softkey to return to previous screen.

Set alarm tone





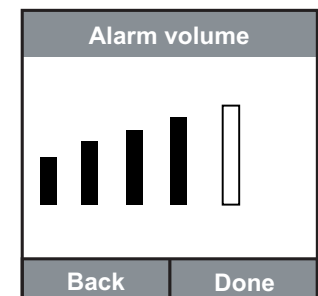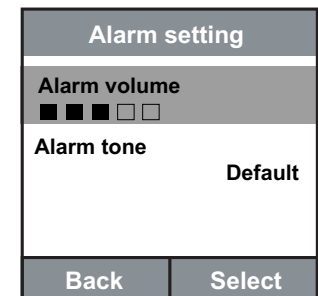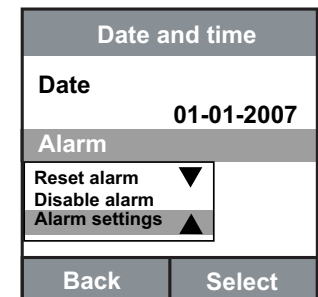

This feature allows you to set alarm tone. To set the alarm tone:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Date and Time** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Alarm** and press the **Options** softkey.
- Press the up or down NavKey  or  to choose **Alarm settings** and press the **Select** softkey or the center NavKey **SEL**  to confirm.



















note

Main menu

- Press the up or down NavKey  or  to choose **Alarm tone**, and press the **Select** softkey or the center NavKey **SEL**  to select. A list of songs will be displayed and the selected song will be played.
- Press the up or down NavKey  or  to choose a song, and press the **Select** softkey or the center NavKey **SEL**  to set the selected song as alarm tone. The name of the song will be shown on the **Alarm settings** screen.
- Press the **Back** softkey to return to previous screen.

Reset alarm




If you have set the alarm before and like to reset it, you can do it in this section.
To reset the alarm:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Date and Time** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Alarm** and press the **Options** softkey.
- Use the up or down NavKey  or  to choose **Reset alarm** and press the **Select** softkey or the center NavKey **SEL**  to confirm. The **Set alarm** screen will be displayed.
- Press the left or right NavKey  or  to toggle between **On** or **Off** of the daily alarm.
- Press the down NavKey  to move to next box to enter the time.
- Press the left or right NavKey  or  to move the cursor forth and back inside the box, and use dial pad to enter the time.
- Press the down NavKey  to move to next box to choose **AM** or **PM** if 12

note












Main menu

hour format is chosen in **Set time** screen.

- Press the left or right NavKey  or  to toggle between **AM** or **PM**, and press the **Done** softkey to confirm. The time of alarm will be shown on the **Date and Time** screen and an alarm icon  will be shown at the top of the main screen while in idle mode.
- The screen will display **Enter valid value!** if the time is incorrect.
- Press the **Back** softkey to return to previous screen.

Disable alarm

This feature allows you to disable or remove the alarm on the handset if you have set the alarm before. To disable the alarm:

- Press the **Menu** softkey when in idle mode to display the main menu.
- Press the up, down, left and right NavKey or , ,  and  to choose **Date and Time** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the up or down NavKey  or  to choose **Alarm** and press the **Options** softkey.
- Use the up or down NavKey  or  to choose **Disable alarm** and press the **Select** softkey or the center NavKey **SEL**  to confirm. The time of alarm will be deleted on the **Date and Time** screen and the alarm icon  on the main screen will also be deleted.














Registration process






If you purchase new handset(s) separately, the new handset(s) must be registered to telephone base before use. A maximum of five handsets can be registered on the same telephone base. To register to a telephone base:

- Press the **Menu** softkey when in idle mode to display the main menu.

Date and time	
Date	01-01-2007
Alarm	
Reset alarm	▼
Disable alarm	
Alarm settings	▲
Back	Select

Main menu

- Press the up, down, left and right NavKey or , ,  and  to choose **Handset Registration** and press the **Select** softkey or the center NavKey **SEL**  to Select.
- Press the up or down NavKey  or  to choose **Handset Settings** and press the **Select** softkey or the center NavKey **SEL**  to select.
- Press the **Select** softkey or the center NavKey **SEL**  to select **Register to base**. A list of rooms for telephone base will be displayed.
- Press the up or down NavKey  or  to choose an empty room from the list and press the **Register** softkey or the center NavKey **SEL**  to confirm. At the same time, press **FIND HANDSET** over 10 seconds to enter subscription mode on the telephone base which make the telephone base to be ready for registration. The indicator of **VMWI** and **LINE IN USE** on the front of the telephone base will be on alternatively to indicate the telephone base is in the subscription mode.
- The handset will search for the telephone base within its range and the screen of handset will display **Searching**.
- If the searching is successful, the code of the selected telephone base will be displayed.
- To register to the selected telephone base, press the **Register** softkey. Enter PIN dialog will be displayed.
- Use the dial pad to enter the PIN in the **Enter PIN** box on the lower part of the screen and the PIN you enter will be presented as in the box. Press the left NavKey  to backspace and the text will be deleted as the cursor move backward. The default PIN is 0000.
- Press the **DONE** softkey to register to the telephone base and the screen will display **Searching. Handset registered** will be displayed on the screen when the registration is successful.

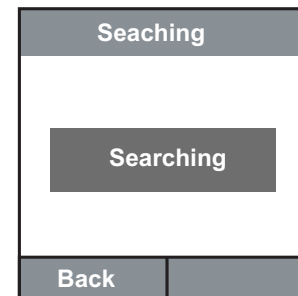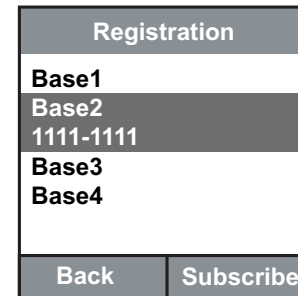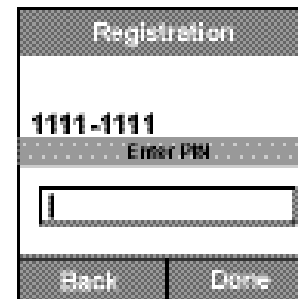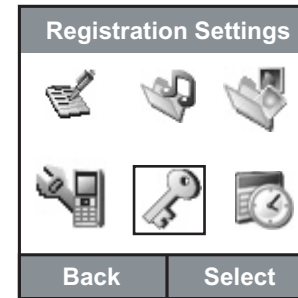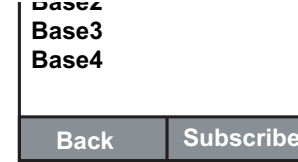

note

note

- Press **FIND HANDSET** over 10 seconds to enter subscription mode on the telephone base.
- The subscription to telephone base must be completed within 10 minutes.
- When in Enter PIN dialog, if you want to enter the same characters subsequently, press right softkey first then enter that character.
- The PIN can be entered three times if it is incorrect.

Adding accessory handsets

It is required to have at least one more handset to perform intercom calling function. New handset(s) can be purchased separately. Intercom feature allows the conversation between one handset to another and if there is an incoming call, a conference call can be performed as well.

Intercom

The intercom feature allows conversation between one handset to another. To make an intercom call:

- Use the dial pad to enter the destination handset number, and press **TALK / FLASH**, or **📞**, or the **Intercom** softkey to make an intercom call.
- The screen of the originating handset will display call connection screen with destination handset number.
- The destination handset will ring, and the screen will display call connection screen with the originating handset number.
- To answer the intercom call, Press **TALK / FLASH**, or **📞**, or the **Answer** softkey on the handset.
- During a call, press the **Mute** softkey to mute the microphone and the end party will not be able to hear you. Press the **UnMute** softkey to resume speaking.
- To end an intercom call, press **OFF** on the handset.

Swap internal and external calls

While you are on an external call and you wish to intercom another handset without dropping the external call.



Adding accessory handsets







- While on a call, press the Options softkey, and press the Internal call softkey.
- Enter the destination handset number you want to reach and the destination handset will ring. The originating handset will beep and the external call will be hold. If you want to end the intercom call, press the Swap softkey while you are calling the destination handset on the originating handset.
- After the destination handset has answered the intercom call, **Active** will be displayed on the intercom connection window on the lower part of the screen

note


note

Intercom calling




at the originating handset. It shows which calls is activated.

- Press the Options softkey on the originating handset. Use up or down NavKey  or  to choose **Swap internal** and press the Select softkey or the center NavKey **SEL**  to swap between internal and external call. **Active** will be shown on the screen while the call is activated and **On Hold** will be shown on the screen while the call is on hold.
- To end the intercom call without dropping the external call, press the Options softkey on the originating handset. Use up or down NavKey  or  to choose **Release internal** and press the Select softkey or the center NavKey **SEL**  to end the intercom call.

Answer an incoming call during an intercom call

- During an intercom call, there will be an alert tone signaling an incoming call.
- To answer the incoming call, press **TALK / FLASH**, or , or the Answer softkey on the handset, and the intercom call will end automatically.
- To end the intercom call without answering the incoming call, press **OFF** on the handset.

Conference call

While you are on external call and internal call and either one is activated and the other is on hold. Press the Options softkey on the originating handset. Use up or down NavKey  or  to choose **Conference** and press the **Select** softkey or the center NavKey **SEL**  to enter conference call.

User Profiles

After installing the telephone base and cordless handset, you will be able to make and receive standard telephone calls and access basic content from the

Intercom calling

Internet. To access content from the Internet:

Step 1: Press **Info** on the handset to display the activation screen.

Step 2: Press the Start softkey and then enter your ZIP code. Press the Enter softkey when you are finished.

After configuring your ZIP code, the default info screen will be displayed (refer to **Setup for data** on page 14).




The default info screen provides weather forecasts and access to Yahoo!! Local search for your area (refer to **Accessing basic content** on page 23).

If you require to use more personalized functions or view more personalized information such as news, email, instant message and horoscope on the handset, you have to configure your profile at www.infophone.com, refer to **Web Portal** on page 55 for details.

Web Portal

To access more personalized functions such as news, email, instant message and horoscope on the handset, go to www.infophone.com to configure your profile. To create your profile, follows the steps below:

Step 1: To get the activation code

- While in info mode, press the settings icon to display the Settings screen.
- Use the up or down NavKey  or  to choose **Web Portal Code** and press the center NavKey **SEL**  to confirm. A **Portal Code** screen will be displayed.
- In the Portal Code screen, activation code and registration website (www.info.com) will be shown.

Step 2: To configure your profile on the registraion website.

- Open your browser on your computer and go to ww.infophone.com and the

www.vtechphones.com

note

Info

general login screen will be displayed.

<insert key image?>

<insert screen shot>

<insert screen shot>

User Login

User Name

Password

Login

To complete your phone registration and create a Casaphone management console click [here](#)

To create a custom user profile click [here](#)

[Forgot your password?](#)

- To configure the phone, click on the link located in the bottom right corner of the screen with the text "To complete your phone registration and create a Casaphone management console click here".

registration, click on [here](#) to enter your username & password

- This step allows you to create a new user profile. Enter your email address, email password, and confirm password on the screen respectively. Click on the submit button to confirm.

User Name and Password
Step(1 of 2)

Email Address

Password

Re-type password

Submit

! email address provided. If the password is incorrect, an error message will be displayed.

Info




note

- Enter the activation code shown on the handset into the spaces provided on the screen respectively and press the submit button to confirm. A successful screen will be displayed.

Edit an exiting profile

While you want to modify your exiting profile, follows the steps below:

Step 1: To get the activation code


- While in info mode, press the settings icon to display the Settings screen.
- Use the up or down NavKey  or  to choose Web Portal Code and press the center NavKey **SEL**  to confirm. A Portal Code screen will be displayed.
- In the Portal Code screen, activation code and registration website (www.info.com) will be shown.

Step 2: To configure your profile on the registration website.

- Open your browser on your computer and go to ww.infophone.com and the general login screen will be displayed.

note

Info

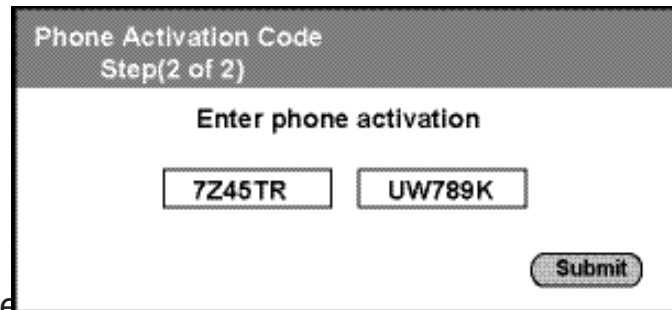

Phone Activation Code
Step(2 of 2)

Enter phone activation

7Z45TR UW789K

Submit

- To configure phone activation, click on here located first from the top on the screen. The create username & password screen will be displayed.
- This step allows you to create specific login profile. Enter your Yahoo! email address, email password and re-enter your password in the spaces provided on the screen respectively. After you enter all the information, press the submit button to confirm. Phone activation code screen will be displayed.

Info

note

- Enter the act on the screen personalization




The image shows a 'User Login' form with the following elements:

- Title: User Login
- Fields: User Name, Password
- Button: Login
- Text: To complete your phone registration and create a Casaphone management console click [here](#)
- Text: To create a custom user profile click [here](#)
- Text: [Forgot your password?](#)

the spaces provided to confirm. A Phone

- In the Phone personalization screen, it allows you to set the phone name and phone PIN. The in Info mode a on the handset the screen res screen will be

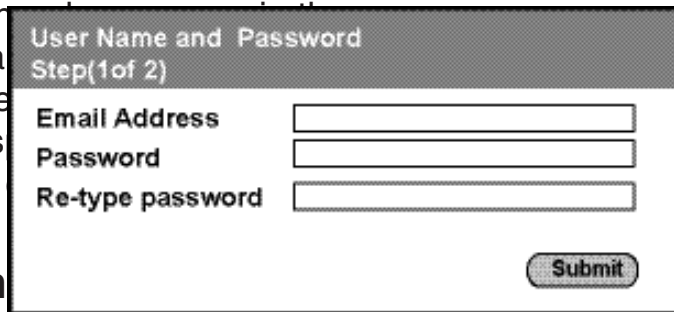

The image shows a 'User Name and Password' form with the following elements:

- Title: User Name and Password
- Subtitle: Step(1 of 2)
- Fields: Email Address, Password, Re-type password
- Button: Submit

in the user list while for the Info mode spaces provided on confirm. A successful

Login on han

After you registered on the website, all the information from the Internet can now be delivered to the cordless handset including new headlines, weather updates, sport

Info

scores, email, instant message and horoscope. To login on the handset:

- Press **Info** on the handset while in idle mode to enter info mode. The Vtech welcome screen will be displayed.
- Press the Us
- A list of use registered on is registered
- Press the up to log-in and screen will be
- Use the dial pad to enter the PIN number you chose while registered in the website(page XX) on the screen, and press the Login softkey to confirm. **Invalid password** will be displayed if the password is incorrect .
- Main screen of the info mode will be displayed and press the up, down, left and right Nav screen.

Phone Activation Code
Step(2 of 2)

Enter phone activation

7Z45TR UW789K

Submit

Phone Name and PIN
Step(3 of 3)

Phone Name Dad

Phone PIN 1234

Phone PIN 1234



Submit

Contacts (Or

This function all in the address b reviewed.






All the information address, etc can be

View a person contacts





- While in the main screen of the info mode, press the Contacts softkey and a list of directories of the address book will be displayed.
- Press the up or down NavKey  or  to choose a directory you want to


Info

enter and press the center NavKey **SEL**  to select. A list of contacts in the selected directory will be displayed.

- Press the up or down NavKey  or  to choose a name you want to review his or her personal information and press the center NavKey **SEL**  to select. The personal information of the selected person will be displayed.
- Use the up or down NavKey  or  to scroll through the content. Press the More softkey to view further information about the selected person if all the information can not be displayed in a single screen.
- Press OFF to return to previous screen.

Search a person on the contact list

- While in the main screen of the info mode, press the Contacts softkey and a list of directories of the address book will be displayed.
- Press the up or down NavKey  or  to choose a directory you want to enter and press the center NavKey **SEL**  to select. A list of contacts in the selected directory will be displayed.
- Press the Find softkey and a search dialog box will be displayed.
- Use the dial pad to enter the name you want to search in the dialog box. Press the Clear softkey to clear the content of the box, or press **1** to insert a space, or the left NavKey  to backspace.
- After you enter a name, press the Find softkey to start searching and the

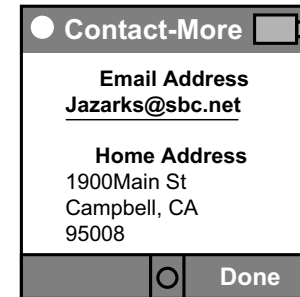


note










Press the Logout softkey to return to the Home screen in info mode.

Info

result will be displayed. The screen will display **No Match** when the name you entered is not on the selected directory.

- To view the details of the selected person, press the center NavKey **SEL**  to confirm, and the personal information will be displayed.
- Press the More softkey to view further information about the selected person, or press the Edit softkey to edit the information of selected person.
- Press OFF to return to previous screen.











Edit a person contacts

- While in the main screen of the info mode, press the Contacts softkey and a list of directories of the address book will be displayed.
- Press the up or down NavKey  or  to choose a directory you want to enter and press the center NavKey **SEL**  to select. A list of contacts in the selected directory will be displayed.
- Press the up or down NavKey  or  to choose a name you want to edit his or her personal information.
- Press the center NavKey **SEL**  to confirm, and the personal information of the selected person will be displayed.
- Press the Edit softkey to edit the information of selected person. Edit Contact screen of the selected person will be displayed.
- Press the up or down NavKey  or  to choose the item(s) you want to edit, and press the center NavKey **SEL**  to select. A dialog box will be displayed.
- User keypad to enter the details in the dialog box. Press **1** to insert a space, or press the Clear softkey to clear the content of the box. Press the **OK** softkey to confirm.

Info


- After edit all the items you want to change, press the Done softkey to confirm.

Add a new entry in the contact list

- While in the main screen of the info mode, press the Contacts softkey and a list of directories of the address book will be displayed.
- Press the up or down NavKey  or  to choose a directory you want to enter and press the center NavKey **SEL**  to select. A list of contacts in the selected directory will be displayed.
- Press the New softkey, and a blank new contact screen will be displayed.
- Press the up or down NavKey  or  to choose First to enter first name, and press the center NavKey **SEL**  to select. A dialog box will be displayed.
- Use dial pad to enter the first name in the dialog box. Press **1** to insert a space, or the left NavKey  to backspace, or press the Clear softkey to clear the content of the box.
- After you enter the first name, press the OK softkey to confirm.
- The personal information screen will be displayed and the name you have entered will be shown in the bracket.
- Press the down NavKey  to choose Last to enter last name, and press the center NavKey **SEL**  to select. A dialog box will be displayed.
- User keypad to enter the last name in the dialog box. Press **1** to insert a space, or the left NavKey  to backspace, or press the Clear softkey to clear the content of the box.
- After you enter the last name, press the OK softkey to confirm.
- The personal information screen will be displayed and the name you have entered will be shown in the bracket.

note

Info





- Press the down NavKey  to move to enter the next item(s). At least first and last name should be entered, otherwise, this new entry cannot be uploaded to your Yahoo! address book.
- After all the items is entered, press the Done softkey to confirm.

Add a new user on the handset

The cordless phone allows you to register up to four users on a handset. To add a new user on the handset:


- Press **Info** to display the Vtech welcome screen.
- Press the Users softkey and a list of user will be displayed if more than one users have registered on the handset. One user will be displayed if only one user was registered on the handset.
- Press the New softkey, an activation code and a message will be displayed to guide you to the registration website for registration of the new user.
- Press the Back softkey to return to the previous screen.


I2S Explained

While in the main screen of the info mode, there are six icons on the screen. You can access contents from the Internet including weather, email, channels, voicemail, instant message and yellow page. Press the up, down, left and right NavKey or , ,  and  to scroll though the functions. For the functions of weather and yellow pages, refer to **Weather** and **Yellow page** on page 24 for details.

E-mail


This function allows you to read, delete and reply new e-mail in Yahoo!

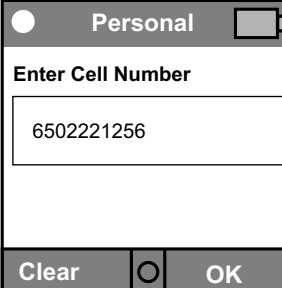



Personal 

Enter Cell Number

6502221256


Clear  OK

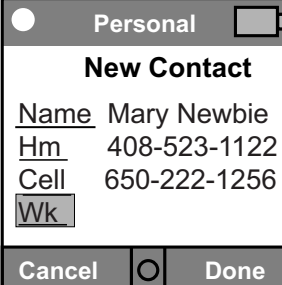



Personal 

New Contact

Name Mary Newbie
Hm 408-523-1122
Cell 650-222-1256
Wk


Cancel  Done

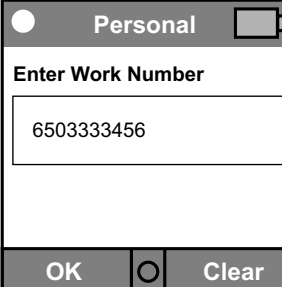



Personal 

Enter Work Number

6503333456


OK  Clear

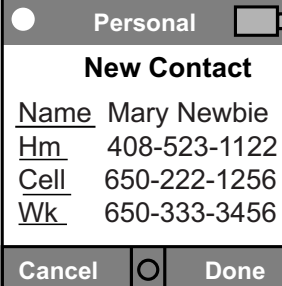

Personal 

New Contact












Name Mary Newbie
Hm 408-523-1122
Cell 650-222-1256
Wk 650-333-3456

Cancel  Done









Info

Mail. All the old e-mail(s) or marked as read e-mail(s) will not be shown on the handset.



View a new e-mail

- While in the main screen of the info mode, press the up or down NavKey  or  to choose mail icon, and press the center NavKey **SEL**  **SEL** to confirm. All new e-mail(s) will be displayed.
- Press the up or down NavKey  or  to choose an e-mail to read, and press the center NavKey **SEL**  to select. The selected e-mail will be opened.
- Press the up or down NavKey  or  to scroll through the content of the e-mail.
- Press the **Options** softkey to set the status of e-mail.
- Press the up or down NavKey  or  to choose between Keep as new (1) or Mark as Read (2), and press the center NavKey **SEL**  to confirm.
- When an e-mail is marked as read, it will not be shown on the handset.
- When there is no new e-mail in your Yahoo! mailbox, **Sorry! You have no email message** will be displayed on the screen of handset.
- Press the **Home** softkey to return to the main screen of info mode.

Delete a new e-mail

- Press the up or down NavKey  or  to choose mail icon, and press center NavKey  to confirm. All new e-mail(s) will be displayed.
- Press the up or down NavKey  or  to choose an e-mail to read, and press the center NavKey **SEL**  to select. The selected e-mail will be opened.
- Press the up or down NavKey  or  to scroll through the content of the e-mail.
- Press the **Delete** softkey to delete the e-mail, and the e-mail will be deleted

note

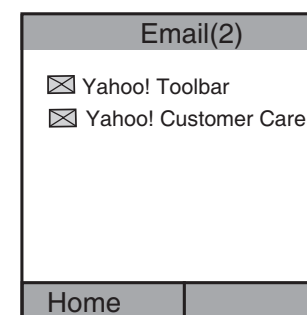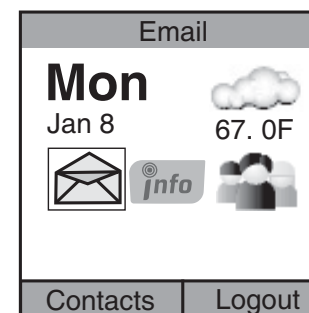

note










Press OFF to return to previous screen.

Info

from your Yahoo! mailbox and the e-mail screen on the handset.


- When there is no new e-mail in your Yahoo! mailbox, **Sorry! You have no email message** will be displayed on the screen of handset.

Reply a new e-mail





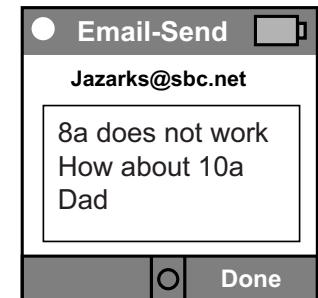


- Press the up or down NavKey  or  to choose mail icon, and press the center NavKey **SEL**  to confirm. All new e-mail(s) will be displayed.
- Press the up or down NavKey  or  to choose an e-mail to read, and press the center NavKey **SEL**  to Select. The selected e-mail will be opened.
- Press the up or down NavKey  or  to scroll through the content of the e-mail.
- Press the **Option** softkey to enter e-mail options screen.
- Press the **Reply** softkey to reply the e-mail. Email-Reply screen will be displayed.
- Press the **One** softkey and message box will be displayed. If you want to return to previous screen, choose Cancel on the screen and press the center NavKey **SEL**  **SEL** to confirm or press OFF on the handset.
- Use keypad to enter the message in the message box. Press **1** to insert a space, or press **the left Navkey to backspace**, or press * to insert symbol.
- After you enter the message, press the **Send** softkey to send out the message or press the Cancel softkey to cancel.

Info

This function allows you to browse updated information or news on the handset such as daily news, NBA news, or horoscope which you have chosen on the create profile page on the registration website (refer pageXX).



Info

- Press the up or down NavKey  or  to choose info icon, and press the center NavKey **SEL** to select. A channel screen will be displayed.
- Press the left or right NavKey  or  to view different information or news.
- If the news or information have been divided into sub-categories, press the up or down NavKey  or  to choose the category you want to see and press the center NavKey **SEL**  **SEL** to confirm.
- Press the Back softkey to return to previous screen.







Instant message (IM)

This function allows you to send instant message to another Yahoo! Messenger user.





Chat

This feature allows the user to send instant message to another online messenger user.

Choose your IM status





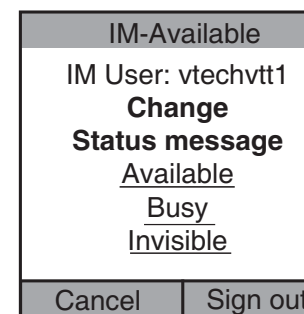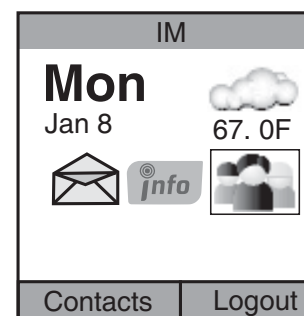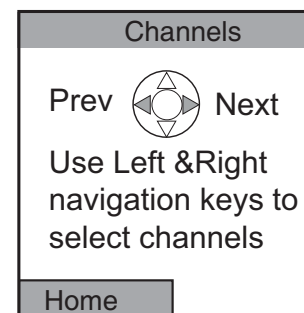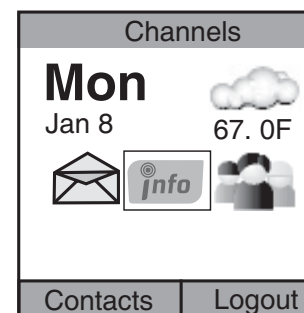


- Press the up or down NavKey  or  to choose people icon, and press the center NavKey **SEL**  to select. A list of active (on-line) users will be displayed.
- Press the **Option** softkey to enter IM screen.
- Press the up or down NavKey  or  to choose your status between **Available**, **Busy**, or **Invisible**.
- Press the center NavKey **SEL**  to select and your status will be shown at the top of IM screen, or press the **Sign Out** softkey to sign out Yahoo! Messenger and return to the main screen of info mode, or press the **Cancel** softkey to return to previous page.

note











Info

Send out instant message

- Press the up or down NavKey  or  to choose people icon, and press the center NavKey **SEL**  to select. A list of active (on-line) users will be displayed.
- Press the up or down NavKey  or  to choose the username you want to communicate and press the center NavKey **SEL**  to select. An instant message box will be displayed.
- Use dial pad to enter message in instant message box. Press **1** to enter a space, or the left NavKey  to backspace.
- After you enter the message, press the Send softkey to send out the message and the sent or received message(s) will be shown below the instant message box.
- Press the Close softkey to sign out the user.
- Press the Home softkey to return to the main screen of info mode.

Check for received instant message

- Press the up or down NavKey  or  to choose people icon, and press the center NavKey **SEL**  to select. A list of active (on-line) users will be displayed.
- Press the up or down NavKey  or  to choose the username you want to check for his or her message and press the Select softkey or the center NavKey **SEL**  to select.
- Message(s) will be shown below the instant message box if message(s) is/are received from the selected user, otherwise, only an instant message box will be displayed for sending out of message.
- Press the up or down NavKey  or  to view the message(s).
- Press the Close softkey to sign out the user.

Info










- Press the Home softkey to return to the main screen of info mode.

Peer-to-Peer calling




This feature allows you to make a peer-to-peer(P2P)call. While the user is on-line, you can use the cordless phone to make or receive peer-to-peer call.

While you are on a standard telephone call and there are an incoming peer-to-peer call, there will be a beep sound to remind you there is an incoming call. Press the Swap softkey to answer the call.

Make a peer-to-peer call





- Press the up or down NavKey  or  to choose people icon, and press the center NavKey **SEL**  to select. A list of active (on-line) users will be displayed.
- Press the up or down NavKey  or  to choose the username you want to communicate and press the center NavKey **SEL**  to select. An instant message box will be displayed.
- Press the up or down NavKey  or  to choose Call on the screen and press the center NavKey **SEL**  to select and make the peer-to-peer call.
- A call connection screen will be displayed on the lower part of the screen. The username and the elapsed time as you talk (in hours, minutes and seconds) will be displayed on the screen as well.
- Press the Close softkey to exit the instant message screen.
- Press the Home softkey to return to the main screen of info mode.

Receive a peer-to-peer call

- Press the up or down NavKey  or  to choose people icon, and press the center NavKey **SEL**  to select. A list of active (on-line) users will be displayed.












note

Info

- Press the up or down NavKey  or  to choose the username you want to communicate and press the center NavKey **SEL**  to select. An instant message box will be displayed.
- Use dial pad to enter message in instant message box. Press 1 to enter a space, or press REDIAL to backspace, or press the Clear softkey to exit instant message box screen and return to IM screen.
- After you enter the message, press the Send softkey or the center NavKey **SEL**  to send out the message and the sent or received message(s) will be shown below the instant message box.
- Press the Clear softkey to sign out the user.
- Press the Home softkey to return to the main screen of info mode.

Directory Search

This function allows you to view information of yellow pages including restaurant, home services, department stores, travel, medical etc.

- While in the main screen of info mode, press the up or down NavKey  or  to choose yellow pages icon, and press the center NavKey **SEL**  to confirm, and the categories inside the yellow pages will be displayed.
- Use the up or down NavKey  or  to choose the category you want to enter, and press the center NavKey **SEL**  to confirm. Sub-categories will then be displayed.
- Use the up or down NavKey  or  to scroll though the sub-categories if sub-categories are available and press the center NavKey **SEL**  to Select the information you want to view. Then the content will be displayed on the screen.
- Use the up or down NavKey  or  to scroll though the content while you

Info

viewing of the information.

- Press the Back softkey to return to previous screen, or press the Home softkey to return to the main screen in info mode.

note

note

note

note

Handset screen display message

No Base Station Subscribed	<ol style="list-style-type: none">1. When the handset is not subscribed to any base station2. Trying to access the master mode.3. Trying to see the RFPI Number.
Enter a Valid Phone Number	When trying to send a SMS message without entering the recipient's address.
Invalid address or empty address, insert valid recipients	When trying to send a MMS message without entering the recipient's address.
Sending message failed, Save to outbox	When the sending of MMS fails, you are prompted to save the message in Inbox.
Empty contact List	Empty contact List Trying to insert the address from the address book for SMS/MMS Sending.
Unable to reach base	Trying to get the SMS settings in Messaging->Message Setting when the base is not reachable.
Message send failed	This info is displayed when trying to send the unsent SMS from the Outbox.
No Contact Details	When trying to save the contacts details without entering any fields.
Enter a Valid Value	When the entered handset PIN is not correct for changing the PIN.

Handset screen display message


Default Profile cannot be deleted	When you are trying to delete the default profile under Phone Setting->Profiles.
Data Connection in Use	When trying to delete the Active Data connection.
Profile in Use	When trying to delete the Active profile.
Enter Valid Value	Trying to save the Data connections without entering the either connection name, phone number or username.
Caller Group name already exists, enter a different name.	When you enter the group name, which is already present while creating and renaming a group.
Cannot delete default caller group	This message is displayed when trying to delete the default caller group.
Unable to Rename File	This message is displayed when renaming an audio

note

note

Handset and base indicators

Handset indicator lights

	<ul style="list-style-type: none">• On when the handset speakerphone is in use.
---	--

Telephone base lights

Power	<ul style="list-style-type: none">• Power ON.
VMWI-FSK	<ul style="list-style-type: none">• Message waiting.• Blinking: New message waiting.• Off: No message.
LINE IN USE	<ul style="list-style-type: none">• Blinking: Telephone is ringing.• Steady: Telephone line is in use.• Off: Telephone line is not in use.
INFO	<ul style="list-style-type: none">• Steady: Registration successful. Device is ready to use.• Blinking : Obtained IP but unable to register with server.• Off: Unable to obtain an IP adress, DHCP failed(169.254.xx).
INTERNET	<ul style="list-style-type: none">• Steady: Ethernet cable connected.• Blinking: Data transmit/receive.• Off: No Ethernet connection.

note

Troubleshooting

If you have difficulty operating your telephone, please try the suggestions below. For Customer Service, visit our website at www.vtechphones.com, or call VTech Communications at 1 (800) 595-9511; in Canada, visit our website at www.vtechcanada.com, or call VTech Telecommunications Canada Ltd. at 1 (800) 267-7377.

Problem	Suggestion
My telephone does not work at all.	<ul style="list-style-type: none"> • Make sure the battery is installed and charged correctly (see pages 3 and 38). For optimum daily performance, return the cordless handset to the telephone base after use. • Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch. • Make sure the telephone line cord is plugged firmly into the telephone base and the modular wall jack. • Unplug the unit's electrical power. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and base to synchronize. • Charge the battery in the cordless handset for at least 16 hours. • Remove and re-insert the battery. If that still does not work, it may be necessary to purchase a new battery. • Disconnect the telephone base from the modular jack and plug in a working telephone. If this telephone does not work, the problem is probably in the wiring or the local service. Call the local telephone company.
Low Battery is displayed on screen.	<ul style="list-style-type: none"> • Place the handset in the telephone base or charger for recharging. • Remove and re-install the battery and use it normally until fully discharged, then recharge the handset on the telephone base or charger for 16 hours. • If the above measures do not correct the problem, the battery may need to be replaced.

Troubleshooting

Problem	Suggestion
The battery does not charge in the handset or the handset battery does not accept charge.	<ul style="list-style-type: none">• Make sure the handset is placed in the charger correctly. The POWER light on the telephone base or charger should be on.• Remove the battery from the handset and install it in the spare battery compartment on the side of the telephone base and let it charge for 16 hours. Then re-install the charged battery into the handset.• If the cordless handset is in the charger or in the telephone base but the POWER light is not on, refer to The POWER light is off in this section.• It may be necessary to purchase a new battery. Please refer to the Battery section (see page 38) of this user's manual.• The telephone might be malfunctioning. Please refer to the Warranty section (see page 50) of this user's manual for further instruction.
The POWER light is off.	<ul style="list-style-type: none">• Clean the charging contacts on the cordless handset(s) and telephone base each month using a pencil eraser or a dry non-abrasive fabric.• Make sure the power adapter and telephone line cords are plugged in correctly and securely.• Unplug the power adapter. Wait for 15 seconds before plugging it back in. Allow up to one minute for the cordless handset and telephone base to reset.• The telephone might be malfunctioning. Please refer to the Warranty section (see page 50) of this user's manual for further instruction.

Troubleshooting

Problem	Suggestion
The POWER Indicator on the telephone base is flashing.	<ul style="list-style-type: none"> • This is a signal that the battery is very low, completely depleted, or when there is no electrical contact between the battery and the telephone base. • Ensure the connector of the battery is securely plugged into the handset and place the handset in the telephone base for charging.
There is no dial tone.	<ul style="list-style-type: none"> • First, try all the above suggestions. • Move the cordless handset closer to the telephone base. It might be out of range. • The telephone line cord might be malfunctioning. Try installing a new telephone line cord. • Disconnect the telephone base from the telephone jack and connect a different telephone. If there is no dial tone on the telephone either, the problem is in your wiring or local service. Contact your local telephone company.
The telephone does not ring when there is an incoming call.	<ul style="list-style-type: none"> • Make sure the ringer is on. (See page 10 for handset). • Make sure the telephone line cord and power adapter are plugged in properly (see page 2). • The cordless handset may be too far from the telephone base. Move it closer to the telephone base. • There may be too many extension phones on the telephone line to allow all of them to ring simultaneously. Try unplugging some of them. • If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact the local telephone company (charges may apply). • Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones.

Troubleshooting

Problem	Suggestion
	<ul style="list-style-type: none">• Test a working telephone at the telephone jack. If another telephone has the same problem, the problem is in the telephone jack. Contact your local telephone company (charges may apply).• The telephone line cord might be malfunctioning. Try installing a new telephone line cord.• Re-install the battery and place the cordless handset in the telephone base.• Wait for the cordless handset to synchronize with the telephone base. To be safe, allow up to one minute for this to take place.
I cannot dial out.	<p>First, try all the above suggestions.</p> <ul style="list-style-type: none">• Make sure there is a dial tone before dialing. It is normal if the cordless handset takes a second or two to synchronize with the telephone before producing a dial tone. Wait an extra second before dialing.• If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact your local telephone company (charges may apply).• Eliminate any background noise. Noise from a television, radio, or other appliances may cause the telephone to not dial out properly. If you cannot eliminate the background noise, first try muting the cordless handset before dialing, or dialing from another room in your home with less background noise.

Troubleshooting

Problem	Suggestion
<p>There is noise or interference during a telephone conversation.</p> <p>My calls fade out or cut in and out when I am using the cordless handset.</p>	<ul style="list-style-type: none">• The handset may be out of range. Move it closer to the telephone base.• Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference. Try moving the appliance or telephone base to another outlet.• Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, wireless routers, and other cordless telephones.• Microwave ovens operate on the same frequency as your telephone. It is normal to experience static on your telephone while the microwave oven is operating. Do not install this telephone in the same outlet or near a microwave oven.• If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this solves the problem, re-locate your telephone or modem farther apart from each other, or use a different surge protector.• The layout of your home or office might be limiting the operating range. Try moving the telephone base to another location, preferably a higher location for better reception.• Disconnect the telephone base from the modular jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or local service. Contact your local service company (charges may apply).• If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact the local telephone company (charges may apply).• Do you have DSL service? If yes, you need to have a DSL filter installed at every telephone jack that has a telephone connected to it. Contact your DSL service provider for filter information.

Troubleshooting

Problem	Suggestion
I hear other calls when using the telephone.	<ul style="list-style-type: none"> • Disconnect the telephone base from the telephone jack. Plug in a different telephone. If you still hear other calls, the problem is probably in the wiring or local service. Call your local telephone company.
I hear noise in the cordless handset, and none of the keys or buttons work.	<ul style="list-style-type: none"> • Make sure the telephone line cord is plugged in securely.
My caller ID features are not working properly.	<ul style="list-style-type: none"> • Caller ID is a subscription service. You must subscribe to this service from your local telephone company for this feature to work on your telephone. • The caller may not be calling from an area which supports caller ID. • Both you and the caller's telephone companies must use equipment which are compatible with caller ID service. • If you subscribe to DSL service, install a DSL filter to the telephone line between the telephone base and the telephone line jack. Contact your DSL service provider for filter information.
The system does not receive caller ID or the system does not display caller ID during call waiting.	<ul style="list-style-type: none"> • Make sure you subscribe to caller ID with call waiting features services provided by the local telephone company. • The caller may not be calling from an area which supports caller ID. • Both you and the caller's telephone companies must use equipment which are compatible with caller ID service. • If you subscribe to DSL service, install a DSL filter to the telephone line between the telephone base and the telephone line jack. Contact your DSL service provider for filter information.

Troubleshooting

Problem	Suggestion
My cordless handset beeps and is not performing normally.	<ul style="list-style-type: none"> • Make sure the power cord is securely plugged into the telephone base. Plug the unit into a different working electrical outlet not controlled by a wall switch. • Move the cordless handset closer to the telephone base. It may be out of range. • Reset the telephone base by unplugging the unit's electrical power. Wait for 15 seconds and plug it back in again. Allow up to one minute for the cordless handset and the telephone base to synchronize. • Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away from these electronic devices as possible: wireless routers, radios, radio towers, pager towers, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and other cordless telephones.
Common cure for electronic equipment.	<ul style="list-style-type: none"> • If the unit is not responding normally, try putting the cordless handset in the telephone base or the charger. If it does not seem to respond, try the following (in the order listed): • Disconnect the power to the telephone base. • Disconnect the battery on the cordless handset and the spare battery in the telephone base. • Wait a few minutes before connecting power to the telephone base. • Re-install the battery and place the cordless handset into the telephone base or charger. • Wait for the cordless handset to synchronize its connection with the telephone base. To be safe, allow up to one minute for this to take place.
How can I get replacement parts for my ip8300?	<ul style="list-style-type: none"> • If you need a replacement, call VTech Communications, Inc. at 1 (800) 595-9511 in the United States. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance ---which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset will display **Searching**. The user can access the handset directory, and certain parts of the menu system, i.e. handset setting and registration, but not the time setting and base setting. **Not possible** will be displayed if access is tried.

If there is a call while the handset is out of range, it might not ring, or if it does ring, the call might not connect well when you press TALK/FLASH. Move closer to the telephone base, then press TALK/FLASH to answer the call.

If the handset moves out of range during a telephone conversation, there might be interference.

To improve reception, move closer to the base.

Maintenance

Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install your telephone base near a sink, bathtub or shower.

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, use caution when using electric appliances during storms.

Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap. Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If your telephone base should fall into water, DO NOT RETRIEVE IT UNTIL YOU UN-PLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Then pull the unit out by the unplugged cords.

About cordless telephones

- **Privacy:** the same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the base and the cordless handset by radio waves, so there is a possibility that your cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- **Electrical Power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged or switched off, or if the electrical power is interrupted.
- **Potential TV Interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference. (Applies to 25 channel cordless telephones only).
- **Rechargeable Battery(ies):** This product contains either Nickel-Cadmium or Nickel-Metal Hydride rechargeable battery(ies). Exercise care in handling battery(ies) in order not to short the battery with conducting material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- **Nickel-Metal Hydride Rechargeable Battery(ies):** Dispose of these battery(ies) in a safe manner. Do not burn or puncture. Like other battery(ies) of this type, if burned or punctured, they could release caustic material which could cause injury.

Warranty

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase (“Consumer” or “you”) that the Product and all accessories provided in the sales package (“Product”) are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period (“Materially Defective Product”)?

During the limited warranty period, VTech’s authorized service representative will repair or replace at VTech’s option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech’s option, is your exclusive remedy. VTech will return repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

What is not covered by this limited warranty?

This limited warranty does not cover:

1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or
2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or
3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or
4. Product to the extent that the problem is caused by use with non-VTech accessories; or
5. Product whose warranty/quality stickers, Product serial numbers plates or electronic serial numbers have been removed, altered or rendered illegible; or
6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
7. Product returned without valid proof of purchase (see item 2 below); or

Warranty

8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

How do you get warranty service?

To obtain warranty service in the United States of America, please call 1-800-595-9511; In Canada, please dial 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty to you, transportation, delivery or handling charges prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

What must you return with the Product to get warranty service?

1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and
2. Include "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and
3. Provide your name, complete and correct mailing address, and telephone number.

Other Limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.

Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bathtub, kitchen sink, or swimming pool).
5. Do not place this product on an unstable table, shelf, stand or other unstable surface.
6. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
9. Never push objects of any kind into this product through slots in the base or handset as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
10. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
11. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
12. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled onto the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions, as improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - E. If the product has been dropped and the base and/or handset has been damaged.
 - F. If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.
15. Only put the handset of your telephone next to your ear when it is in normal talk.
16. This power unit is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

SAVE THESE INSTRUCTIONS

www.vtechphones.com

FCC, ACTA and IC regulations

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more. If you choose to use a clipping device, please make sure to only use the supplied VTech belt clip.

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

FCC, ACTA and IC regulations

- Remain on the line and briefly explain the reason for the call before hanging up.
- Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

This equipment complies with regulations RSS210 and CS-03 of Industry Canada. This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

The RBRC® Seal



The RBRC® Seal on the nickel-metal-hydride battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used nickel-metal-hydride batteries into the trash or municipal waste, which may be illegal in your area.

VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call 1-800-8-BATTERY™ for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

RBRC® is a registered trademark of Rechargeable Battery Recycling Corporation.

Technical specifications

Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	Handset: 1921.536 - 1928.448 MHz Telephone base: 1921.536 - 1928.448 MHz
Channels	5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Size	Handset: 170.9mm X 48.1mm X 25.8mm Telephone base: 129.5mm X 123.8mm X 95.0mm Charger: 84.0mm X 99.0mm X 102.0mm
Weight	Handset: 131.0 grams (including battery) Telephone base: 181.6 grams Charger: 101.4 grams
Power requirements	Handset: 2 cells AAA 750mAh NiMH battery Telephone base: DC 6V @ 400mA Charger: DC 6V @ 300mA
Memory	Call history (dialled numbers & missed calls): 40 memory locations; up to 24 digits, 15 characters per location. Call log: 10 memory locations; up to 24 digits, 15 characters per location.

Index

- About cordless telephones 88
- Accessing Basic Content 24
- Add a new entry in the contact list 64
- Add a new user on the handset 65
- Add an new address book entry 23
- Adding accessory handsets 53
- Answer an incoming call during an intercom call 55
- Base settings 42
- Basic navigation 7
- Basic operation 16
- Before you begin 1
- Caller ID 17
- Call history 27
- Call volume 18
- Call waiting 17
- Change system PIN 42
- Charge handset battery 11
- Chat 68
- Check for received instant message 69
- Choose your IM status 68
- Color themes 39
- Conference call 55
- Configure your Yahoo! account 8
- Contacts (Online address book) 61
- Date and time 44
- De-register handset 43
- Default User 21
- Delete a dial call entry 34
- Delete all dial call entries 34
- Delete all missed call entries 30
- Delete all received call entries 32
- Delete a missed call entry 29
- Delete a new e-mail 66
- Delete a received call entry 32
- Dial a dial call entry 33
- Dial an address book entry 22
- Dial a received call entry 31
- Dialed number 33
- Directory Search 71
- Disable alarm 51
- E-mail 66
- Edit an exiting profile 58
- Edit a person contacts 63
- Entering text 7
- FCC, ACTA and IC regulations 91
- Find an address book entry 21
- Getting to know the ip8300 3
- Handset and base indicators 77
- Handset charger installation 9
- Handset indicator lights 77
- Handset name 40
- Handset registraion 41
- Handset screen display message 75
- Handset settings 42
- Handset status icons 6
- Hide/Show the date 47
- Hide/Show the time 46
- I2S Explained 65
- Important safety instructions 90
- Index 96
- Info 57
- Info 67
- Initial registraion process 20
- Installation and configuration 8
- Install handset battery 10
- Instant message (IM) 68
- Intercom calling 55
- Keypad tone 38
- Login on handset 61
- Main Menu 29
- Maintenance 87
- Make a peer-to-peer call 70
- Making calls 16
- Minimum requirements 1
- Missed calls 28
- Mute 18
- Network address book 21
- Operating range 87
- Parts checklist 2
- Peer-to-Peer calling 70
- Phone Menu 27

Index

- Phone settings 38
- Play ring tones in sound album 35
- Prepare the handset 9
- Receive a peer-to-peer call 70
- Received calls 30
- Redial 19
- Registration process 51
- Reply a new e-mail 67
- Reset alarm 50
- Reset settings 41
- Ringer volume 38
- Search a person on the contract list 62
- Send out instant message 69
- Service provider voicemail 19
- Set alarm 47
- Set alarm tone 49
- Set alarm volume 48
- Set contrast 40
- Set ring tone in sound album 36
- Set the date 46
- Set the time 45
- Settings 26
- Setup 20
- Setup for data 15
- Softkeys 7
- Software Version 27
- Sound album(Ring tones) 35
- Speakerphone operation 18
- Status of indication light 4
- Swap internal and external calls 54
- Table of contents I
- Technical specifications 95
- Telephone base installation 13
- Telephone base layout 3
- Telephone base lights 77
- Text entry tips 7
- The RBRC® Seal 92
- Troubleshooting 80
- Using the handset 7
- View a new e-mail 66
- View a person contacts 62
- Wallpapers 37
- Warranty 88
- Weather 25
- Web Portal 56
- Web portal code 26
- Yellow page 25

VTECH TELECOMMUNICATIONS LTD.

A member of THE VTECH GROUP OF COMPANIES.

Distributed in the U.S.A. by VTech Communications, Inc., Beaverton, Oregon

Distributed in Canada by VTech Telecommunications Canada, Ltd., Richmond, B.C.

Copyright ©2007 for VTECH TELECOMMUNICATIONS LTD.

Printed in China.

v.00

91-00xxxx-010-100



User's manual

www.vtechphones.com

Model: ip8300