

## 27MHz Wireless Office Combo

### User's Guide

Thank you for purchasing the Gemini-P15 Smart Wireless Office Keyboard/Mouse Combo. Please read this user's guide to make it easy to use this product. If you have any question, please visit us at the website at [www.ione.com.tw](http://www.ione.com.tw) or [www.itron-europe.com](http://www.itron-europe.com)

### Introduction

Gemini-P15 Smart Wireless Office Combo will save up to 70% of your hands movement between keyboard and mouse, preventing the "Repetitive Stress Injure" *enhance efficiency*.

- *The one-touch Hot Keys* are taking you into MS. Office and your favorite multimedia activities instantly. You can play music and video, surf the Web, and access much more functions with one touch.
- *The Scroll Wheel* helps you to review Internet and Windows document easily.

*No driver required* for: Win ME/2000/XP/2003 server

Just plug and play.

### Features

- 27 MHz RF frequency:
- Dual channel and each channel contain 256 sets ID.
- Built-in EEPROM keeps the ID code in memory.
- Wireless office keyboard with 40 Hot-keys and a Scroll Wheel.
- Wireless 8-button mouse with 800 dpi optical sensor
- Low power consumption with power saving function
- Battery charger receiver with 6 AA rechargeable batteries
- Compatible with Win95/98/ME/NT/2000/XP, Office 97/2000/2003/XP
- Effective distance: Keyboard 3M and Mouse 1.5M
- Stylish ergonomic designed with superior quality.


### Package Content:

1. Smart Office Keyboard
2. Wireless 8-Button Advance Mouse
3. Receiver with Battery charger
4. **4 x** AA Rechargeable Batteries
5. User's Guide

### **System Requirements:**

1. IBM or Compatible PC System
2. Win95/98/ME/NT/2000/XP
3. All Versions of MS-Office
4. USB port

### **Hardware Installation:**

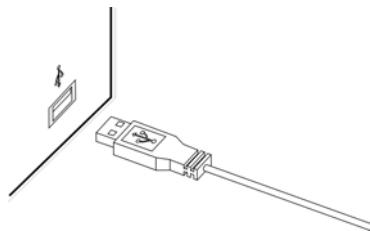

Step1: Plug the receiver's connector into USB port of your PC.

Step2: Install 2AA batteries in the mouse and 2AA in the keyboard.

Step3: Turn on your PC.

Step4: System will automatically detect the USB Device.

Note: If you are running Win 98, it may be prompted to insert the Win 98 CD-ROM.

Please insert Win 98 CD-ROM to your CD-ROM Drive. Then follow the steps completed the setup.

### **Software Installation:**

All buttons of mouse are NOT required driver. However, the Magic-Pop-Up function (Scroll Wheel Button software) offers a convenient way to configure and select up to 12 shortcuts for various applications and files. Please download this software from our website [www.ione.com.tw](http://www.ione.com.tw) or [www.itron-europe.com](http://www.itron-europe.com)

Download from [www.ione.com.tw](http://www.ione.com.tw):

Step1: Go to "Support" section and choose the item "3D mouse driver" (Magic-Pop-Up).

- Step2: Choose the version that suits with your language requirement.
- Step3: Double-click the icon or execute the .exe file to install the software.
- Step4: Select the interface.
- Step5: Follow the steps to complete the installation.

Download from [www.itron-europe.com](http://www.itron-europe.com):

- Step1: Go to “Download – Driver / Manuals”
- Step2: Download the version that suits with your operating system
- Step3: Extract the .zip-file.
- Step4: Navigate to the Folder to which you extracted the zip-file and double-click the icon or execute the .exe file to install the software.
- Step5: Select the interface.
- Step6: Follow the steps to complete the installation.

Note: If you still have problems with this program, please read the “help”-files or contact us at [ione@ione.com.tw](mailto:ione@ione.com.tw) or [support@itron-europe.com](mailto:support@itron-europe.com)

### **ID Setup:**


The product has been pre-set. Mouse, keyboard and receiver are already paired. It is not necessary to do the ID setting when you use the mouse and keyboard for the first time. However, the connection may be lost due to RF interference of environment. Hence, it may be necessary to re-set the connection-ID. Please follow the process below for the ID setting.

### **Mouse:**

Step 1: Push the connect button on the back of the wireless Mouse.




Step 2: Press the connect button located on the RF Receiver. This step must be completed less than 8 seconds after Step 1. Once the Connection indicator (left side) stops blinking, goes to Step 3.

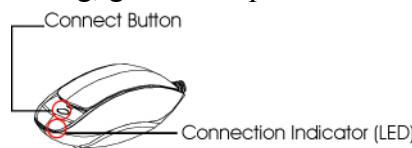


Step 3: When you move the wireless mouse, the Connection indicator will blink. It means the wireless mouse is connected successfully. If the wireless mouse does not work properly, please go back to Step 1. (In case, the ID is occupied by another device, please repeat Step 1 and Step 2 until mouse works properly)

### **Keyboard:**

Step 4: Press the Connect button located on the back of the wireless keyboard (You may need a pencil tip or other small tip to press the connect button.)

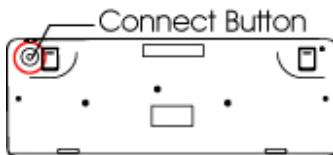

Step 5: Press the connect button located on the RF Receiver. This step must be completed less than 8 seconds after Step 4. Once the Connection indicator (left side) stops blinking, goes to Step 6.

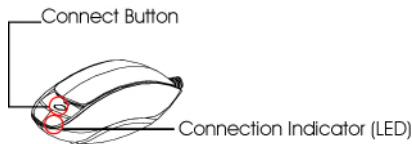


Step 6: When you press any key of wireless keyboard, the LED of the receiver will blink. It means the Receiver and the wireless keyboard are connected. If the wireless keyboard does not work properly, please go back to Step 4. (In case, the ID is occupied by other devices, please repeat Step 4 and Step 5 until keyboard works properly.)

### **Hot Key Function Description:**

#### **1. Mouse**

1. Left Click
2. Right Click
3. Scroll Wheel Button
4. Previous-Page
5. Next-Page
6. Scroll Up
7. Scroll Down
8. Application Switch

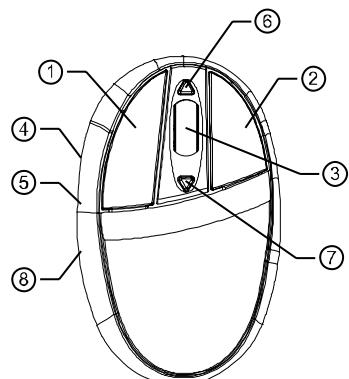

## 2. Keyboard

40 Hot-Keys and Scroll Wheel Descriptions:

Office Application Key Block

Help	Open the Help file
New	Create a blank file based on the default template
Open	Open a file
Save	Save the current file
Replace	Open “Search& Replace” dialog box for replacing
Spell	Automatic check spelling and grammar
Undo	Undo the last command <sup>L</sup>
Redo	Redo the previously undo action
Reply	Reply to only the sender. (For MS Outlook or Outlook Express)
Reply All	Reply to the sender and the recipients on the list. (For MS Outlook or Outlook Express)
Forward	Forward the e-mail message to other person/ people. (For MS Outlook or Outlook Express) <sup>L</sup>
Send	Send the e-mail message. (For MS Outlook or Outlook Express)
Print Screen	Open the Print dialog box.
“€” Euro	Euro sign

Office Key Block

Word	Launch MS. Word <b>(Before it can be activated, please follow below instruction)</b>
Power Point	Launch MS. PowerPoint <b>(Before it can be activated, please follow below instruction)</b>
Excel	Launch Microsoft Excel <b>(Before it can be activated, please follow below instruction)</b>
Office lock	Office function on/off

Internet Key Block

Back	Back to the last page on Internet browser
Forward	Forward to the next page on Internet browser
Stop	Stop downloading current website
WWW	Start the default Web browser or go to the Home page
Email	Open Default E-mail application
My favorite	Open the Internet Explorer “My Favorite panel
Refresh	Refresh web sites or the content of a particular window

Search	Open the Internet Explorer Search panel
Sleep	Turn the system to Sleep mode
Multimedia Key Block	
Volume up	Turn volume up
Volume down	Turn volume down
Mute	Mute volume output
Stop	Stop Playing Media Player
Play/Pause	Play or pause CD/VCD/DVD player
Pre-track	Instruct the CD/VCD/DVD player to the previous track
Next track	Instruct the CD/VCD/DVD player to the next track
Clipboard Key Block	
Cut	Cut out the selected item(s) to the Clipboard
Paste	Paste the copied or cut item(s) from Clipboard
Copy	Copy the selected item(s) to the Clipboard
Mark	Use the key to mark item(s)
Close	Close the current active application
Application	Switch between open windows
Scroll Wheel	
Scroll Wheel	Support for “Page Up” and “Page down” <span style="color: red;">This function only applies in USB interface. PS2 and USB+PS2 interfaces will be no function.</span>

### “Word, Excel, Power Point” Hotkey Setup Function:

**(Note: The above hotkeys will not be working, if you do not follow the instructions below to set up the “Word, Excel, Power Point” hotkey functions)**

1. Click the “Start” button, and point to “Program” to search “target application icon” that you want to setup.
2. Use the right mouse button to click the “target application shortcut Icon” to which you want to assign a shortcut key, and then click “Properties” on the menu that appears.
3. Click the **Shortcut** tab.
4. Press the “target application key” shown on your keyboard. You will see “Ctrl+Alt+P (for PowerPoint) or Ctrl+Alt+D(for Word) or Ctrl+Alt+E”(for Excel) appear in the menu depending on the application key you press.
5. Click **OK** to complete the setup process.

So, from now on, you can launch target application by pressing the “Word, Excel, PowerPoint” keys of the keyboard to launch the application you pressed.

**Note :** Following the method above, you can assign any hotkey to any application you prefer. You also can remove the above hotkey setup manually by assigning it to nothing and making it blank under the above step 4.

## **Power Switch**

### **Mouse**

You can turn off the mouse manually.

To turn off the power, please press the Power switch/Connect button for 5seconds.

To turn on the power, just press the Power switch/Connect button.

**Note:** This wireless mouse is designed for power saving mode.

The mouse will "sleep" automatically if you don't use it over 8 minutes.

To wake up from sleeping mode, just press left button or right button.

## **Battery Charging**



1. The rechargeable batteries can be charged whenever your desktop PC is turned on or turned off. Laptop PC only can charge with power on.
2. Install the batteries with the correct polarity. Please refer to the diagram on the battery compartment.
3. Safety timer protection prevents over charging. Once battery charging has been done, Battery Charger will be shut off automatically.
4. Battery charging indicator (Right side)
  - LED is on: The battery charging is in progress.
  - LED is off: The battery charging has been done.

**DO NOT PUT REGULAR BATTERIES INSIDE THE CHARGER. IT COULD CAUSE BATTERY EXPLOSION IF YOU DO SO.**

## **VI. Troubleshooting:**

- A. The keyboard cannot work

Re-plug the PS/2 or USB connect and restart the computer.

B. "€" Euro sign key cannot work

Euro sign only appears under the "Office lock" is on. Please press "office lock", then press Euro key (same as number lock) to trigger Euro sign.

C. The Num lock key cannot work

"Num Lock" works only under "Office Lock" is off. Please make sure the "Office Lock" is off.

D. The "Sleep" hotkey cannot work

Sleep mode is available only if your system supports the power management "ACPI" and your mainboard and all the components of your PC are compatible with power management.

E. Some short-cut keys cannot be accessed

The program of Smart Office Keyboard will take over some system resources for the short-cut keys. The following 5 combination keys cannot be used again. "Ctrl + Alt + E" (Euro sign), "Ctrl + Alt + P" (Full page mode), "Ctrl + Alt + O" (Outline mode), "Ctrl + Alt + D" (Remark), "Ctrl + Alt + C" (trademark sign)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications

Any changes or modification not expressly approved by the party responsible could void the user's authority to operate the device.