

FORWARD ELECTRONIC CO.,LTD

User's manual

1. Insert AAA batteries into the remote unit.
2. Press any key will send rf data by 27.045MHZ.
3. Troubleshooting.

Remove batteries, reinstall batteries.

15.21 “Changes or modifications are not expressly approved by the manufacturer could void the user's authority to operate the equipment.”