

HELPFUL HINTS

Following hints can help you get the most enjoyment from your vehicle.

- Running your car continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your car's battery dies, let the car cool at least 10 minutes before installing newly charged battery pack.
- If the car's motor runs but it does not respond to the transmitter, move closer to the vehicle and try again.
- If someone uses a CB nearby, it might interfere with control of the car. If this happens, move the car and transmitter away from the CB.
- You cannot operate your car near devices with transmitters that use the same frequency, 27 MHz or 49 MHz. Check the vehicle's box to see which frequency your car uses.
- If the car moves slowly, and you have installed recharged battery pack, check the wheel mechanisms for lint, thread, hair or dust.

CARE

The following suggestions will help you care for your vehicle so you can enjoy it for years.

- Never drive the vehicle on a wet floor, on sand, or in mud, rain, or snow. These can damage it.
- Do not expose the vehicle to temperature extremes.
- To protect the vehicle's wheel mechanisms from lint and hair, do not drive it on carpet.
- Wipe the vehicle with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals to clean the vehicle.

Modifying or tampering with the vehicle or the transmitter's internal components can cause a malfunction and void your FCC authorization to operate them.

THE FCC WANTS YOU TO KNOW

Your vehicle or transmitter might cause TV or radio interference even when it is operating properly. To determine whether your vehicle or transmitter is causing the interference, turn off your vehicle and release the transmitter's control levers. If the interference goes away, your vehicle or transmitter is causing it.

Try to eliminate the interference by:

- Moving your vehicle and transmitter away from the TV or radio.

If you cannot eliminate the interference, the FCC requires that you stop using your vehicle.

INSTALLING THE BATTERIES

Cautions:

- Use only a fresh battery and battery pack of the required size and type.
- If you do not plan to use the car for several days, remove the battery from the transmitter and the battery pack from the car.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the car.
- Dispose of old batteries promptly and properly; do not bury or burn them.
- Non-rechargeable batteries are not to be charged.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be shorted.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.


P.01

- Battery charger should be regularly examined for damage to the cord, plug, enclosure and other parts. In the event of such damage, battery charger should not be used until damage have been repaired.

- Keep the package and owner's manual since it contains important information.

IN THE TRANSMITTER

The transmitter requires one 9-volt battery (not included). For the best performance and longest life, we recommend an alkaline battery. Follow these steps to install the transmitter's battery.

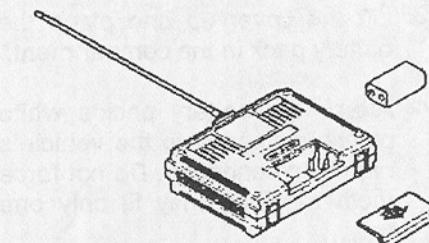

- 1 Slide the battery compartment cover in the direction of the arrow on the cover to remove it.
- 2 Put a battery in the compartment according to the polarity symbols (+ and -) marked inside.
- 3 Replace the cover and snap it shut.

When the transmitter's range decreases, replace its battery.

Ka Wah Manufactory Ltd.
JOB #: 159H1
FCCID: F5J31427
EXHIBIT : 3

In the Vehicle


Your vehicle requires a 7.2-volt rechargeable battery pack (not included). You must charge the battery pack with a battery charger before you can use it to power your vehicle. To charge it, follow the battery charger's instructions. Then follow these steps to put the battery pack in the vehicle.

1. Slide **ON/OFF** switch on the side of the vehicle to **OFF**.
2. Use a coin to turn the battery compartment cover's latch(s) until it stops.
3. Lift the cover up and place the battery pack in the compartment.
4. Attach the battery pack's white plastic connector to the vehicle's matching connector. Do not force them together, they fit only one way.
5. Replace the cover and turn the latch(s) to secure it.

When the vehicle slows down, recharge the battery pack. When the battery pack will no longer hold a charge, replace it.

Note : Occasionally, fully discharge the battery pack before you recharge it. Otherwise the battery pack loses its ability to fully charge.

Note : To remove, grasp the battery pack's and the vehicle's connectors, press and hold down the latch on the vehicle's connector then pull the connectors apart to disconnect them.

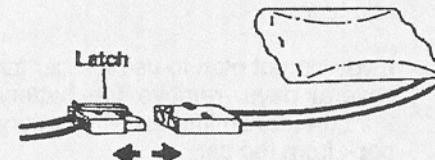

INSTALLING THE VEHICLE'S ANTENNA TUBE

To ensure that the vehicle receives all signals from the transmitter, you must set up the antenna properly.


1. Route the antenna wire's loose end through the plastic antenna tube.
2. Insert the tube securely into the vehicle's antenna tube holder.

DRIVING THE VEHICLE

Warning: Never play with your vehicle in the street.

1. Slide **ON/OFF** switch on the vehicle to **ON**.

2. Use the transmitter's control levers as follows:

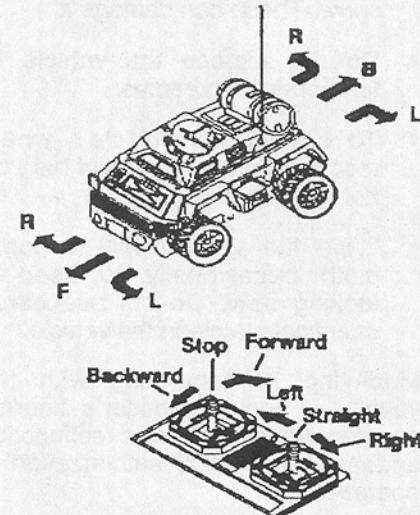

Left Control Lever

- Push forward to move forward (F).
- Pull back to move backward (B).
- Release to stop.


Right Control Lever

- Push left to move left (L).
- Push right to move right (R).
- Release to go straight (S).

Caution: If the vehicle gets stuck under an object, immediately release the control levers on the transmitter, then retrieve the car.

3. When you finish driving, slide the **ON/OFF** switch on the vehicle to **OFF**.

WHEEL ALIGNMENT

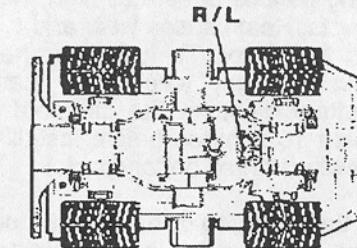

If the vehicle does not go in a straight line when you release the right control lever, adjust the wheel alignment control on the bottom of the vehicle.

Turn the wheel alignment control toward **L** if the vehicle is pulling to the right, or toward **R** if the vehicle is pulling to the left.