

## **Installing your batteries**

Your will need

One 7.2V rechargeable battery pack (not included)

One 9V battery for transmitter (not included)

Battery Pack charger (not included)

### **In Your Vehicle**

1. Remove the battery compartment cover.
2. Place the battery pack in the compartment and attach its white connector to your vehicle's matching connector. Do not force them together. They only fit one way.
3. Replace the cover and turn the latches to secure it.

**Note:**

If your vehicle moves slowly, or does not move at all, recharge your vehicle's battery pack.

### **In Your Transmitter**

1. Remove the battery compartment cover and place the 9V battery in your transmitter.
2. Replace the cover.

**Note :**

When your transmitter's range decreases, replace its battery.

### **Driving your vehicle**

#### **Vehicle**

The supplied antenna tube holds up the antenna wire for best reception.

1. Route your vehicle's antenna wire through the tube.
2. Insert the tube securely into your vehicle's tube holder.
3. Slide to ON to activate the vehicle and drive it. Slide to OFF when you are finished driving the vehicle.

#### **Transmitter**

1. ON/OFF – Slide to ON to activate the transmitter and drive the car. Slide to OFF when you are finished driving the car.
2. Antenna – Extend the antenna to its full length before driving the car. For

maximum range, hold the transmitter with the antenna as high as possible and point it straight up. Retract the antenna when you are finished driving the car.

3. Steering Wheel – Use to turn the vehicle left or right. Release the wheel to go straight.
4. TRIM VOL ST – Adjusts the wheel alignment so your vehicle drives in a straight line.
5. TRIM VOL F/R – Adjusts the throttle trim so the car stops completely when the throttle trigger is released.
6. Throttle Trigger – Pull to go forward and push to go in reverse. Release to stop.

#### Adjusting the throttle trim

1. Place the vehicle upside down on a flat surface so its tires do not touch the ground. Do not touch the tires during the adjustment.
2. Turn the transmitter and vehicle on.
3. If the rear tires begin to move, turn TRIM VOL F/R on the transmitter clockwise or counter-clockwise until the tires stop moving.

#### Note :

Never use the throttle trim to make the vehicle go.

#### Adjusting the Steering Trim

1. Place the vehicle upside down on a flat surface so its tires do not touch the ground. Do not touch the tires during the adjustment.
2. Turn the transmitter and car on.
3. If the front tires angle left or right, turn TRIM VOL ST on the transmitter clockwise or counter-clockwise until the wheels point directly forward.

#### Helpful hints

- Your vehicle can reach much higher speeds than most other radio-controlled cars. Avoid high-impact collisions with people and objects.
- Do not drive your vehicle through puddles or in the rain, sand or snow. Doing so can damage it.
- To prolong your vehicle's use, rest the car for 20 minutes after every 15 minutes of continuous use.
- If your vehicle gets struck under an object, turn your transmitter off and

retrieve your vehicle.

- Running your vehicle for long periods generates high heat levels. Heat causes wear and tear on the motor.
- To keep heat levels down, let your vehicle cool for at least 10 minutes before installing a new or newly charged battery pack.
- Your transmitter controls a range of up to 120 feet. If your vehicle's motor runs, but does not respond to the transmitter, move closer to your vehicle and try it again.

#### Battery notes

- Dispose of old batteries promptly and properly. Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use your vehicle for several days, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

#### Care and Maintenance

Keep your vehicle dry; if it gets wet, wipe it dry immediately. Use and store your vehicle in normal temperature environments. Handle your vehicle carefully; do not drop it. Keep your car away from dust and dirt. Wipe it with a damp cloth occasionally to keep it looking new.

#### The FCC wants you to know

Your vehicle might cause TV or radio interference even when it is operating properly. To determine whether your vehicle is causing the interference, turn off your vehicle & transmitter. If the interference stops, your vehicle is causing it. Try to eliminate the interference by:

- Moving your vehicle & transmitter away from the receiver.

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.