



CARE

The following suggestions will help you enjoy your vehicle for years.

- Never drive the vehicle on a wet floor, on sand, or in mud, rain, or snow. These can damage it.
- Do not expose the vehicle to extreme temperature.
- Wipe the vehicle with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals to clean the vehicle.

Modifying or tampering with the vehicle or the transmitter's internal components can cause a malfunction and void your FCC authorization to operate it.

INDUSTRY CANADA NOTICE

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of Industry Canada.

THE FCC WANTS YOU TO KNOW

Your vehicle or transmitter might cause TV or radio interference even when it is operating properly. To determine whether your vehicle or transmitter is causing the interference, turn off your vehicle and transmitter. If the interference goes away, your vehicle or transmitter is causing it.

Try to eliminate the interference by:

- Moving your vehicle and transmitter away from the TV or radio.
- Contacting your local store for help.

If you cannot eliminate the interference, the FCC requires that you stop using your vehicle.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



INSTALLING BATTERIES

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline or rechargeable), or rechargeable batteries capacities.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the vehicle before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the vehicle. Never leave dead or weak batteries in the vehicle or transmitter.
- The supply terminals are not to be short-circuited.
- If you're not using the vehicle for several days, remove the batteries. Batteries can leak chemicals that can damage electronics parts.
- Dispose of batteries promptly & properly; do not bury or burn them.


• Charger used with the vehicle are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the vehicle must not be used with this charger until the damage has been replaced.

• Keep the package and owner's manual since it contains important information.

In the Transmitter

The transmitter requires one 9-Volt battery. For the best performance and longest life-time, we recommend an alkaline battery.

Follow these steps to install the transmitter's battery.

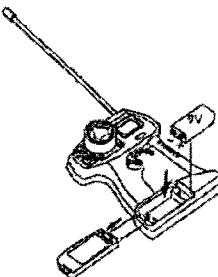

1. Slide off the battery compartment cover in the direction of the arrow to remove it.

2. Put a battery in the compartment according to the polarity symbols (+ and -) marked inside.

3. Replace the cover and snap it shut.

When the transmitter's range decreases, replace its battery.

In the Vehicle

Your vehicle requires one 9.6-volt rechargeable battery pack. **You must charge the battery pack with a battery charger before you can use it to power your vehicle.** Then follow these steps to put the battery pack in the vehicle.


1. Slide the OFF/ON switch on the bottom of the vehicle to OFF.
2. Use a coin to turn the battery compartment cover's latch until it stops.
3. Lift the cover up to remove it.
4. Place the battery pack in the compartment.
5. Attach the battery pack's white plastic connector to the vehicle's matching connector. Do not force them together, they fit only one way.
6. Replace the cover and turn the latch to secure it.

When the vehicle slows down, recharge the battery pack. When the battery pack will no longer hold a charge, replace it.

Note: Occasionally, fully discharge the battery pack before you recharge it. Otherwise the battery pack loses its ability to fully charge.

- Styles of vehicle may appear different to the illustration.


Note: To remove, grasp the battery pack's and the vehicle's connectors, press and hold down the latch on the vehicle's connector then pull the connectors apart to disconnect them.

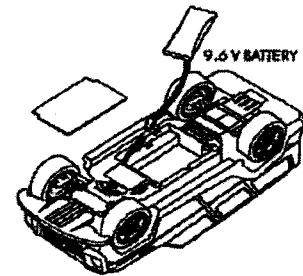

DRIVING THE VEHICLE

Warning: Never play with your vehicle in the street.

1. Slide the transmitter's OFF/ON switch to ON.
2. Slide the vehicle's OFF/ON switch to ON.
3. Use the transmitter's trigger & steering wheel to drive and steer the vehicle.

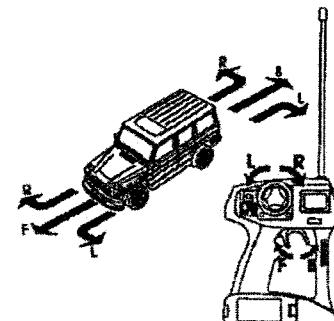

Trigger

- Pull backward to move forward (F). Front lights light up.
- Push forward to move backward (B). Rear lights light up.
- Release to stop.

Steering Wheel


- Steer left to move left (L)
- Steer to move right (R)
- Release to go straight.

4. When you finish driving the vehicle, slide the vehicle's and transmitter's OFF/ON switch to OFF.

Warning: This vehicle can reach high speeds. Be careful when you use the vehicle to avoid high-impact collisions with people and objects.

Warning: If this vehicle gets stuck under an object, immediately release the trigger and steering wheel on the transmitter, then retrieve the vehicle.

WHEEL ALIGNMENT

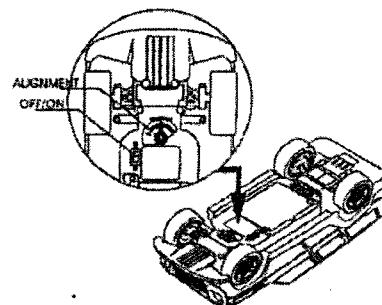

If the vehicle does not go in a straight line when you release the steering wheel, adjust the wheel alignment control on the bottom of the vehicle.

Turn the wheel alignment control toward L if the vehicle is pulling to the right, or toward R if the vehicle is pulling to the left.

HELPFUL HINTS

Follow these hints to get the most enjoyment from your vehicle.

- Running your vehicle continuously for long periods generates high heat levels. Heat causes the most wear and tear on the motor. To help keep heat levels down, when your vehicle's battery power dies, let the vehicle cool at least 10 minutes before installing new or newly charged batteries.

- If the vehicle's motor runs but it does not respond to the transmitter, move closer to the vehicle and try again.

- If the vehicle moves slowly, and you have installed freshly recharged batteries, check the wheel mechanisms for lint, thread, hair or dust.

- If someone uses a CB nearby, it might interfere with control of the vehicle. If this happens, move the vehicle away from the CB.

- You cannot operate your vehicle near devices with transmitters that use the same frequency. Check the vehicle's box to see what frequency your vehicle uses.

WARRANTY



LIMITED WARRANTY

Who is Providing This Warranty?

- Orbyx Electronics, LLC ("Orbyx"), as the distributor of this Sector 7™ product (your "Product").

What Does This Warranty Cover?

- This warranty covers defects in materials or workmanship in your Product under normal use and conditions.

What is the Period of Coverage?

- This warranty covers your Product for 90 days from the original purchase date.

Who Is Covered?

- This warranty covers the original consumer purchaser. Coverage terminates if you sell or otherwise transfer your Product.

What Will We Do To Correct Problems?

- We will repair your Product or replace your Product with a new or reconditioned equivalent product, at our option.

How Do You Get Service?

- Call Orbyx TOLL FREE at 1-866-363-3059 for instructions for obtaining warranty service from Orbyx's authorized service providers.
- Or, return your Product directly to the retail store from which you purchased the Product.
- When you obtain service for your Product, you must provide a purchase receipt (or other proof of the original purchase date) and a description of the defect(s).

What Does This Warranty Not Cover?

- This warranty DOES NOT COVER:
 - damage due to misuse, abuse, alteration, unauthorized repair, or accident (such as improper electrical current);
 - damage due to "acts of God" (such as lightning) or other contingencies beyond our control;
 - cosmetic damage;
 - externally generated static, signal reception or antenna problems not caused by your Product; or batteries.
- This warranty also DOES NOT COVER, and in no case will we be liable for, any incidental damages (such as transportation costs to and from an authorized service provider, or loss of time) or consequential damages (such as costs of repairing or replacing other property which is damaged, including tapes, discs, speakers not included with your Product or other accessories, or external electrical systems) resulting from the use of your Product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
- Defacing the serial number, or using your Product for commercial or institutional purposes, voids this warranty.

Are There Other Warranties?

- There are no express warranties other than those expressed herein. Neither the sales personnel nor any other person is authorized to make any other warranties or to extend the duration of any warranties.
- ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY (AN UNWRITTEN WARRANTY THAT A PRODUCT IS FIT FOR ORDINARY USE), ARE LIMITED TO 90 DAYS. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

How Does State Law Apply?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



LIMITED WARRANTY

ORBYX ELECTRONICS WARRANTY

ORBYX Electronics warrants that this product will be free from defects in materials and workmanship for a period of ninety (90) days from the date of purchase. Within this period, simply take the product and your proof of purchase to any ORBYX Electronics store or dealer and the product will be repaired without charge for parts and labour. ORBYX Electronics reserves the right to charge for transportation. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through ORBYX Electronics' company owned stores and dealers and to a product that is presented for repair in a country where ORBYX Electronics offers the product for sale. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, province and other governmental entities in which ORBYX Electronics operates. This warranty is subject to all statutory rights you may have in the country of purchase.

Distributed exclusively in the U.S. by

Orbyx Electronics, LLC
501 South Cheryl Lane,
Walnut, CA 91789

Imported in Canada for/Importé au Canada pour
Orbyx Electronics,
Concord, Canada, L4K 4M3

Manufactured in China

For product support please contact www.orbyxelectronics.com
or 1-866-363-3059



Limited Warranty/Garantie Limitée
U.S.A & Canada

© 2005 ORBYX Electronics. All Rights Reserved.



GARANTIE



GARANTIE LIMITÉE

GARANTIE ORBYX ELECTRONICS

ORBYX Electronics garantit ce produit contre tout vice de matière ou de fabrication pour une période de quatre-vingt-dix (90) jours à compter de la date d'achat. Au cours de cette période, vous n'avez qu'à retourner le produit, accompagné d'une preuve d'achat, à tout magasin ou détaillant ORBYX Electronics où il sera réparé sans frais pour les pièces et la main-d'œuvre. ORBYX Electronics se réserve le droit d'imposer des frais de transport. La garantie ne s'applique pas aux produits endommagés suite à un mauvais usage ou à un accident.

La garantie s'applique qu'à un produit acheté dans un magasin de la compagnie ORBYX Electronics ou chez un détaillant ORBYX Electronics et à un produit qui est vendu dans le pays où l'on fait la demande de réparation au titre de la garantie. Bien que cette garantie n'accorde aucun droit particulier autre que ceux susmentionnés, vous pouvez avoir des droits statutaires additionnels qui varient selon le pays, l'état, la province ou l'entité gouvernementale où ORBYX Electronics exerce ses affaires. Cette garantie se conforme à tous les droits légaux que vous pourriez avoir dans le pays d'achat.

Distributed exclusively in the U.S. by
Orbyx Electronics, LLC

501 South Cheryl Lane,
Walnut, CA 91789

Imported in Canada for/Importé au Canada pour
Orbyx Electronics,
Concord, Canada, L4K 4M3

Manufactured in China

Pour le service à la clientèle, s'il vous plaît, visitez-nous sur le site Internet au www.orbyxelectronics.com ouappelez au
1-866-363-3059



Limited Warranty/Garantie Limitée
U.S.A & Canada

© 2005 ORBYX Electronics. All Rights Reserved.

