



Super Complete Selection Animation
スーパーコンプリートセレクトアニメーション



T-2210076

中文
English

ver. 松田啓人

玩法說明
How to play

詳細玩法

The detail of how to play

本說明僅記載在遊玩時需要注意的內容。
詳細玩法請參考WEB說明書。how to play, refer to the WEB manual.

 
 
<https://toy.bandai.co.jp/manuals/pdf.php?id=298149>



產品內容與各部分名稱 Set contents and part names

SuperCompleteSelectionAnimation
D-Ark Ver.松田啓人 本體...1
SuperCompleteSelectionAnimation
D-ARK Ver. Takato Matsuda (Body) ...1

【擴大圖】
[Enlarged view]

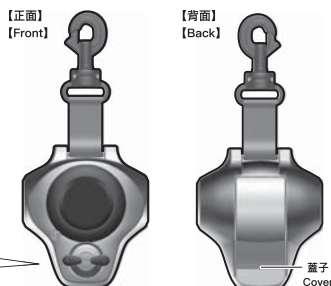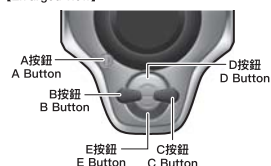

使用說明書(本書)...1
Instruction sheet...1

Digimon Card for the exclusive use of the SuperCompleteSelectionAnimation D-Ark...10



注意! CAUTION!

- 持有產品者請細心閱讀本說明書。
- 本產品含有電池蓋及螺絲等較細小零件，小心勿讓兒童誤放入口，以免引致窒息的可能。
- 電池、電池蓋及螺絲有被誤吞的可能，勿將本產品給予3歲以下幼兒。
- 更換電池時，請找成年人幫忙。
- 切勿將新舊電池混合使用。
- 切勿將鹼性、標準(碳鋅)或充電式(鎳鎘等)的電池混合使用。
- 切勿使用充電式(鎳鎘等)電池。
- 請勿把非充電式電池充電。
- 請把耗盡的電池從玩具中移除。
- 電池應以正確的極性放入。
- 電源端子不得短路。
- 萬一誤吞電池或者電池洩漏的液體滲入眼內時，請立即向醫生諮詢。
- 洩漏的液體沾到皮膚或衣服時請用水清洗。
- 本產品可能與包裝上圖片及插圖所示有少許偏差。
- 此包裝含重要信息，請保留此包裝資料作日後參考之用。
- 適合15歲或以上。
- 請於打開包裝後棄置膠袋包裝。
- 本產品需要2枚AAA型電池操作。(另售)

- Please read the instruction sheet before playing with toy.
- This product contains small parts such as battery cover and screws that may cause suffocation if swallowed by children.
- Batteries, battery cover & screws may be swallowed by children. Do not pass this product to children below 3 years old.
- While replacing the batteries, please ask a guardian for help.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd) batteries.
- Do not use any rechargeable batteries (Ni-Cd, etc).
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from the toy.
- Batteries are to be inserted with the correct polarity.
- Supply terminals are not to be short-circuited.
- If the battery is mis-swallowed or the liquid leaked out from it spatters into eyes, please consult a doctor immediately. Wash away the liquid on the skin or clothes with clean water.
- Contents may vary from photos and illustrations shown on the packages.
- This packaging contains important information. Please keep for future reference.
- Ages 15 & up.
- Discard the plastic packaging material after unsealing the product.
- Requires 2xAAA batteries. (Sold Separately)

<使用時的注意事項>

- 本產品由精密的電子部件構成。請勿讓其墜落，被水沾濕，被弄髒或分解。同時請勿在高溫、低溫場所使用或保管。
- 塑膠為包裝材料請在開封後立即棄棄。
- 請勿將本產品放置在樹脂制沙發、墊子或瓷磚上。長時間接觸可能會染色。
- 對於可動部分，安裝部分，請勿強行向錯誤方向拉扯或彎曲。
- 部分聲音可能出現聲調不一致或者因產品特性而出現難以聽的情況，敬請諒解。
- 請勿將專用 Digimon Card 與其它IC卡一起保管。可能會引起誤動作。
- 請勿彎折卡片，或將其靠近音響等發出電磁波的機器。可能會引起機器芯片損壞。
- 使用時如果周圍有較強的電磁波，或是靠近金屬材料時，專用 Digimon Card 可能會較難讀取。

<Precautions for Use>

- This product is composed of precise electronic parts. Do not drop, get wet, get dirty or detach it. Meanwhile, avoid using or keeping it in an environment where the temperature is too high or too low.
- Discard the plastic packaging material immediately after unsealing the product.
- Do not place this product on couches or cushions made of resin or on any tiles because they may get dyed after a long time of direct contact.
- Do not pull or bend the movable or installed parts in the wrong directions forcibly.
- It is normal that some sound may not be consistent or be heard clearly due to the characteristics of the product.
- It is normal that there may be differences in the appearance of the products due to the characteristics of the product.
- Do not store or use a Digimon card with a commercially available IC card. It may cause malfunction.
- Do not handle the card roughly by folding or bending it. Also, keep away from devices that emit strong magnetism, such as TVs and speakers. The internal chip may be damaged.
- In an environment where strong radio waves are generated, it may be difficult to read the Digimon card. Also, if you have metal or other equipment nearby, you may not be able to read the Digimon card.

適合15歲或以上
Ages 15 & up

WARNING:
CHOKING HAZARD-Small parts. Not for children under 3 years.

警告：窒息危險-細小部份不適合3歲或以下之兒童。

裝入電池方法

 
※從產品內容的狀態開始。

How to insert batteries

※Start with the set contents.

- ① 取下蓋子。
請從背面蓋子下方縫隙打開蓋子。
- ② 打開電池蓋。
②-1 請用螺絲刀按箭頭方向打開。
②-2 取下電池蓋。
- ③ 裝入電池。
使用2顆4號電池(另售)依照⊕⊖的標誌裝入。
- ④ 蓋上電池蓋。
將電池蓋上的凸起與玩具本體的凹陷處對齊，用螺絲刀按②-1反方向關上電池蓋。
- ⑤ 蓋上蓋子。

- ① Remove the cover.
Remove the cover by placing your finger on the recessed part of the cover on the back of the main unit.
- ② Remove the Battery lid.
②-1 Turn the Battery lid screw ⊕ or ⊖ with a screwdriver in the direction of the arrow.
②-2 Remove the battery cover.
- ③ Insert batteries.
Insert 2 AAA batteries (sold separately) in the correct ⊕, ⊖.
- ④ Replace the Battery lid.
Align the protrusion of the Battery lid with the groove of the body, and turn the screw of the Battery lid in the opposite direction of ②-1 to close it.
- ⑤ Replace the cover.

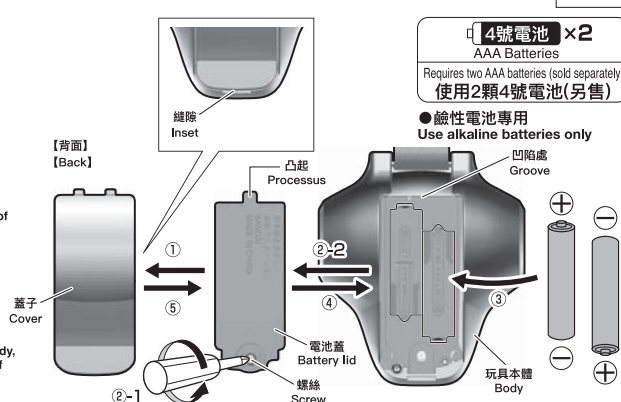

※當音樂變小聲不容易聽取時，或是聲音反覆重複時，或是有誤動作發生，畫面上顯示低電量時，請將所有電池都更換全新的電池。※長時間不玩的時候請取出電池。
※If the battery level indicator appears on the display, replace the battery with a new one.
※Be sure to remove the battery when you are not playing for a long time.

 


打開電源的方法

How to turn the power on

- 按下A按鈕。
→畫面亮起，玩具啟動。
Press A button.
→The Start screen appears.

【正面】
[Front]

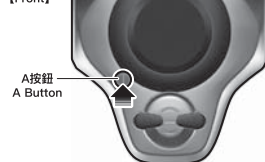

- ※關閉電源時請長按A按鈕。
一定時間未操作時玩具畫面會變暗，並自動關閉電源。
再次遊玩時請按A按鈕啟動。
※Press and hold A Button to turn off the power.
The screen will not dim and the power will be turned off if no operation is performed for a certain period of time. If you want to play again, press A button to start.

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。