

- 1) Click to Edit the channel's parameters
- 2) Select the new parameters values and click "OK" to save changes to the receiver
- 3) The "Need To Sync" alert will light up. Sync the transmitter to apply the selected parameters

ClearOne Remote provides the following functions:

File: 1. Save a PDF image of the screen.

Settings: 2.

Phantom Power: A. Turn antenna phantom power on or off. Default = ON.

Redundancy: B. Set adjacent pairs of receivers to redundancy mode. Default = OFF.

Headphone Mode: C. Toggles the mixed output jack from headphone mode to a balanced line output. Default = Balanced line output.

Ethernet Settings: 3. If using Ethernet, assign the proper IP address to the ClearOne Receiver.

RF Scan - RF Plot: 4. Shows the RF strength of each antenna in a ClearOne system and shows if there is outside interference.

Presets: 5. Save or load preset system parameters configurations. Default = As Ordered.

GPIO: 6. Assign contact closure functions and setup for RS232 control. Default = RS232 - Output mutes.

Security: 7. Password to prevent unauthorized changes: (Under construction). Default = none.

Alerts: 8. Send alerts to authorized personal when preventive maintenance is required of if there is a fault. Default = none.

Update System: 9. Checks to see if the system has the most current firmware and provides a wizard for updating the firmware.

Help: 10.

Tutorials: A. Setting parameters, Antenna Application Guide, etc.

About: B. Shows vital statistics for each component of the system

Default Transmitter Preamp Gain Settings:

Transmitter + Last 4 digits of serial Default Transmitter Preamp Gain

Number

BLT XXXX	+10 dB
HH XXXX	H18 = 0dB, H13 & H18 = +20dB
PDM XXXX	+10dB
BDM XXXX	+20dB