


PMID701i: User Manual

size: 78.0cm x 64.0cm


3/04/2012



7" Internet Tablet
Capacitive Touch screen tablet


User Manual

In the box



Tablet
User Manual
USB Cable
AC Adapter

 
Location of controls



Operating System: Android 4.0 Ice Cream Sandwich
Screen: 7" (17.8 cm) capacitive touch screen
Processor: 1.0 GHz
Graphics accelerator: OpenGL ES 2.0 (3D game support)
Display:
• Resolution: 1024 x 600 pixels
• Memory: 1GB
• Camera: 3.2 MP (5 megapixels)
• Network: Wi-Fi 802.11 (b/g/n)
Memory:
• Internal Memory: 1GB
• External Memory: Micro SDHC card (4GB max 32GB)
1. Mini USB port
2. MicroSD slot
3. Headphone jack
4. Microphone
5. (Power/standby) - Press to lock/standby the tablet. Press and hold to turn on/off.
6. (Home) - Press to go to the home screen.
7. (Menu) - Press to access the menus of apps or screens of the tablet.
8. (Recent) - Press to return to the previous screen.
9. (Reset) - (on back)
10. Speaker - (on back)

Basic operation

Charging the battery:
Connect the tablet to a wall outlet using the included AC adapter.




The tablet may also be charged by connecting it to a computer using the USB cable; however, it will take much longer to fully charge.

 
Approximate play times
Actual play times may vary depending on display and power settings:
• Music: up to 10 hours (Wi-Fi / backlight off)
• Video: 4-5 hours (Wi-Fi / turned off)
• Internet: 4-7 hours (Wi-Fi / turned off)
• Video browsing: 3-5 hours
• Standby time: 40-70 hours

Battery Tip:
• Turn on/off when it's not in use.
• Low the tablet the display is off to shorten charging time.
• To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app.

Turning on the tablet
Press and hold the Q button until the startup screen appears.




Unlock (enter) the tablet
Slide the "Lock icon" to the right.



Lock (standby) the tablet
To lock or unlock the tablet, briefly press the Q button. Lock the device to conserve the battery.

Turning off the tablet
Press and hold the Q button until the Power off dialog appears.




Power app
For quick poweroff, you can select the "Power" app to turn off the tablet.

Home screen

 
On the Home screen, you can place app shortcuts and widgets.

Home screen (left)




Bookmarks widget
Calendar widget
Music widget

Home screen (center)

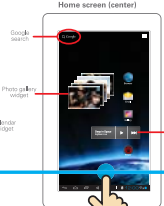


Google search
Phone dialer widget
Music widget

 
Home screen (right)

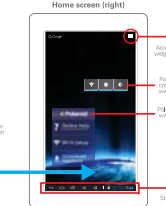


Access apps & widgets screen
Recent control widget
Polaroid widget
Speaker

Swipe the screen left or right to access other Home screens.

 
Access apps & widgets screen
Press  to access the Apps & widgets screen.

Press the  icon to return to the Home screen.

Placing apps & widgets on the Home screen
Press & hold an app or widget to place it on one of the Home screens.




Removing shortcuts or widgets
Press and hold the app or widget and slide it as shown below.



Connecting to Wi-Fi & downloading apps

 Status bar
The Status bar is available on all screens and apps of the tablet.

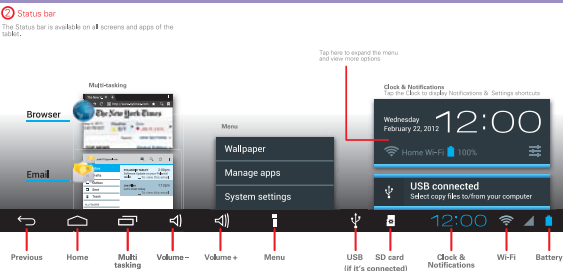

Multi-tasking
Browser
Email
Menu
Wallpaper
Manage apps
System settings
USB connected
USB copy files to/from your computer
Previous Home Multi-tasking Volume- Volume+ Menu USB SD card (if it's connected) Clock & Notifications Wi-Fi Battery

Setting up Wi-Fi
To connect to the Internet, use email and download apps, you must first connect the tablet to the Internet.

To set up Wi-Fi and download the Amazon Appstore on the tablet, use the "Polaroid widget" on the Home screen.

1. Swipe the Home screen to the left to access the Polaroid widget.

2. Select "Wi-Fi Setup" on the Polaroid widget.

3. Select a network.

4. If required, enter the correct password and select "Connect".

5. When the tablet is connected to a network, the Wi-Fi icon will appear on the Status bar and "Connected" Wi-Fi appear under the selected network.

To conserve battery life, turn off Wi-Fi when not connected to a network.

Downloading the Amazon Appstore
To access a large library of resident apps and games, we recommend downloading the Amazon Appstore. Follow the instructions below to download it directly to the Apps screen of the tablet.

1. After successfully connecting the tablet to Wi-Fi, select "Download Appstore" on the Polaroid widget.

2. Select "Download now" to download the Amazon Appstore. It will be downloaded to the Apps screen.

3. Select "Install" to install the app.

4. The Amazon Appstore appears on the Apps screen.

Downloading and installing apps:
After downloading the Amazon Appstore, it is possible to download and install apps directly to the tablet - these apps will appear on the Apps screen.

Select "Appstore" on the Apps screen and create an Amazon account. Setting up the account is free. Once an account is created, it is easy to purchase, download and install apps directly to the tablet.

NOTE: App compatibility / games:
There are many apps available on the Amazon Appstore, and unfortunately not all will be compatible with the Tablet. This is because some of the apps are designed for mobile phones and require functions or specifications that are not supported by the Tablet. We recommend always searching for the free or "Lite" version of an app and testing it before purchasing the paid app.

*Avoid apps that require camera or GPS as these apps will not be supported by the Tablet.

The Tablet supports some game apps, although we recommend please testing the free version if available before purchasing.

Sometimes, while playing games, the pointer on the tablet may not function correctly. This results in games not being controllable. To correct this problem, follow the steps below:

1. Open "Settings".
2. Open "Controls".
3. Select "Accelerometer Coordinate System".
4. The default setting is "Default Coordinate System". This setting should work for most games.
5. If your game is not functioning properly, select "Default coordinate system to support some other games".

Recommended Apps

Amazon MP3
To purchase and download music to the tablet, install the Amazon MP3 app. To find the app use the search feature of the Appstore and follow the instructions to download and install the app to the tablet.

Amazon MP3
Type "Amazon MP3"

Accelerometer coordinate system
Type "Accelerometer coordinate system"

Note: Polaroid and the manufacturer of this tablet are not affiliated with, connected to, or sponsored by Amazon. Amazon Appstore, or the Amazon MP3 app, are simply recommended their app name over the other available options because of the wide selection of available apps, user experience, and customer service.

FRONT