

TRIXIG

Design D Wahl/ A Andreevski/ C Asmussen/ K Shadley



LG Homeshmart A & B

78 x 78 mm.

Language amount: 18



Design and Quality
IKEA of Sweden

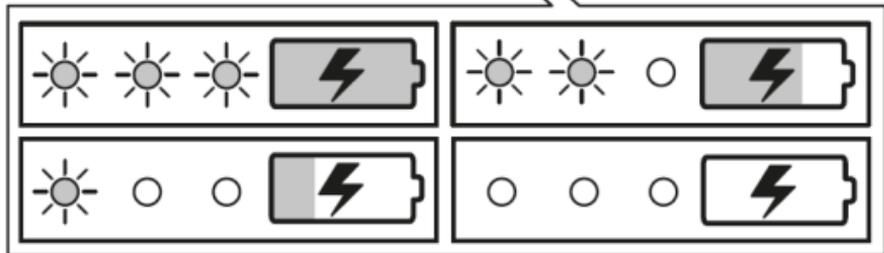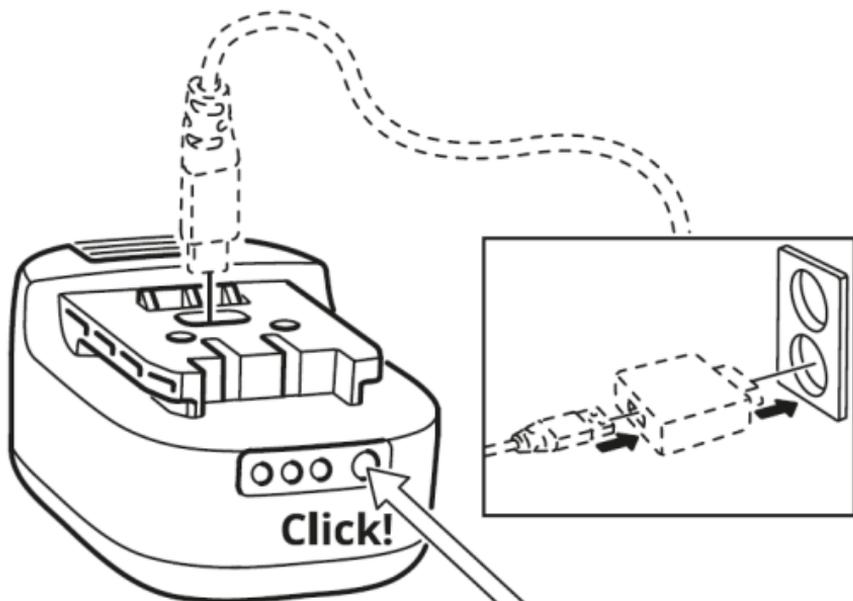

English
Deutsch
Français
Nederlands
Dansk
Íslenska
Norsk
Suomi
Svenska
Česky
Español
Italiano
Magyar
Polski
Eesti

Latviešu
Lietuvių
Português
Româna
Slovensky
Български
Hrvatski
Ελληνικά
Русский
Українська
Srpski
Slovenščina
Türkçe

NOT THE CORRECT
LANGUAGES

English



Read the instruction manual before first use.

CAUTION

- Do not modify, disassemble, open, drop, crush, puncture, or shred battery.
- Do not expose the battery to rain or water.
- Risk of fires and burns. Do not open, crush, heat above 50°C (122°F), or incinerate.
- Keep battery away from open flame or sunlight to

- prevent heat build-up.
- Keep battery away from high voltage devices.
- This product is not a toy, keep away from children.
- Ensure that all persons who use this product read and follow these warnings and instructions.
- Do not short-circuit the battery or its cells.
- In the event of a cell leaking, do not allow the liquid to
- come in contact with the skin or eyes.

The battery charging indicator:

- Pulsating light - charging in progress
- Steady light for two minutes/no light - charging completed

- Small LED divided into three circles showing the charge amount left in the battery.
- Press the button located on the back to see charge amount. Light will turn off shortly after.

Good to know

- It is normal for the battery to become hot during charging and it will gradually cool down after charging.
- Charging time may vary depending on remaining charge, battery age and ambient temperature.
- Disconnect the battery from the power outlet before
 - cleaning or when it is not used.

- Battery should not be left discharged for a longer period.
- Battery should not be charged while in contact with
- flammable material like textiles.
- This battery can only be used with TRIXIG drill
- USB-C cable not included

Care instruction

To clean the unit, wipe with a soft cloth moistened with a little mild detergent. Use another soft dry cloth to wipe dry.

Note!

Never use abrasive cleaners or chemical solvents since this can damage the product.

Product servicing

Do not attempt to repair this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks.

Technical data

Type: ICBL 10.8-16-USBC-P1

Nominal voltage: 10.8V d.c.

Rated voltage 12V d.c.

Capacity: 1.5Ah Lithium-Ion, 16,2Wh

Input: 5.0V d.c. / 1.0-3.0A (USB-C)



For indoor use only

Rechargeable Li-Ion battery cell inside.

(three INR19/66 Li-ion cells connected to a group in series)

Charging time:

If you use 5V 1A charge current – charging time < 360 min

If you use 5V 2A charge current – charging time < 210 min

If you use 5V 3A charge current – charging time < 150 min



Do not open or dismantle



Do not dispose of in fire



Do not short circuit

Do not store the tool and battery pack in locations where the temperature may reach or exceed 50 °C



To preserve natural resources, please recycle or dispose of the battery pack properly. This battery pack contains Li-ion batteries. Consult your local waste authority for information

regarding available recycling and/or disposal options. Discharge your battery pack by operating your drill. Then remove the battery pack from the drill housing and cover the battery pack connections with heavy-duty adhesive tape to prevent any short circuit and energy discharge. Do not attempt to open or remove any of the components.

This device conforms to UL STD. 2054

Keep this manual for future use

Manufacturer: IKEA of Sweden AB

**Address: Box 702, SE-343 81 Älmhult,
SWEDEN**



Batteries and rechargeable batteries are not household waste! As a consumer, you are required by law to dispose of all batteries and accumulators, whether they contain harmful substances* or not, at a collection point in your municipality/neighbourhood or via a commercial entity offering battery disposal so that they can be disposed of in an environmentally sound manner.

* marked with: Cd = cadmium, Hg = mercury, Pb = lead

Caution!

Make sure that the battery is discharged before removal.

Use caution to avoid damaging the battery.

Cut and isolate wires one by one to avoid short circuit.

This device complies with Part 15 of the FCC Rules.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation Science and Economic Development Canada's licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

WARNING:

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found

to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference

by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF EXPOSURE INFORMATION

According to RF exposure regulations, under normal operations the end user shall refrain from being closer than 20 cm from the device.

License rights and limitations

NO RIGHTS OR LICENSES, EXPRESS OR IMPLIED, ARE GRANTED TO USE THIRD-PARTY DEVICES IN COMBINATION WITH THESE PRODUCTS IN A WIRELESS MESH NETWORK, OR TO USE THIRD-PARTY SERVICES TO ACCESS, MONITOR OR CONTROL THESE PRODUCTS IN A WIRELESS MESH NETWORK VIA THE INTERNET OR ANOTHER EXTERNAL WIDE AREA NETWORK.

For use pursuant to U.S. Patent

Nos.:

US 6,914,893

US 7,697,492

US 8,964,708



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For

more information, please contact your IKEA store.

