

ePure

Digital Cordless telephone (DECT 6.0)



User manual

Welcome to Swissvoice

The ePure is a cordless telephone designed for connection to an analog telephone network. International DECT (GAP)-standard digital technology offers excellent voice quality.

You can register up to 5 handsets to your base and make internal calls free of charge.



The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

Warning

Be sure to read this user guide and the safety precautions before using your telephone. Explain their content and the potential hazards associated with using the telephone to your children.



Use only the charging cradle supplied with the power adapter.



Use only recommended, rechargeable batteries. Failure to do so could damage your health and cause injury.
Do not charge the handset in charging unit or base station while the headset is connected.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment (such as a doctor's office).



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise, you risk serious and permanent damage to your hearing.



Do not install the charging cradle in bathrooms or shower areas. The charging cradle is not waterproof.



Do not use your phone in environments that pose a explosion hazard (e.g., paint shops).



If you give your phone to someone else, make sure you also give them the user guide.




Please remove faulty base stations from use, as they could interfere with other wireless services.

Contents

Keys	2
Display symbols	3
Range / Location	3
Battery advice	4
Insert the battery	4
Connecting the phone	5
Set date and time	5
Set language	5
Making a call	6
Redial	7
PBX operation	7
Paging – Locate mislaid handsets	8
Phonebook	8
Direct memory	9
Calls list and caller ID operation	9
Extending the ePure	11
Making a call with several call partners	12
Personal settings	13
Advanced settings	13
Appendix	14


Keys

Handset

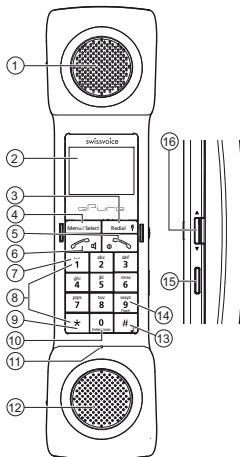

- 1 Earpiece
- 2 Display
- 3 Redial key
During a call: Mute the microphone
- 4 Menu/Select key
In standby: open the menu
In a menu or list: select the highlighted item
- 5 End call key / back to idle mode
- 6 Talk key
- 7 Key 1: Insert a space
- 8 Digit keys
- 9 Star key
- 10 Key 0 / Intercom key
Press 3 sec. for internal calls
- 11 Microphone
- 12 Loudspeaker (for ring signal and hands-free)
- 13 Hash key
switches between lower and upper case letters / switches off ringer / press 3 sec. when editing an entry: insert a pause
- 14 Flash key (press 3 sec. key "9")
Send a hook flash signal to the currently connected line
- 15 Control LED (flashes when you have one or more missed calls, flashes quickly with an incoming call)
- 16 Navigation key / set volume

Base

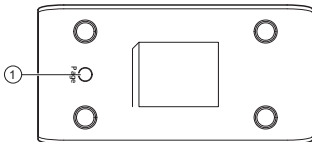

- 1 Page key (on the bottom)

Display symbols

	Steady on: batterie's charge level. Flashing: batteries have to be charged.
12:03	Time.
	Call in progress.
	Steady on : the caller's list is open. Flashing : new calls in the caller's list.
	The phonebook is open.
	Scroll up/down in a list or a menu.
OK	Confirmation.
	Ringer off.
	Handsfree active.
	Alarm is set.
	Steady on, when the handset is near the base. Flashes, if out of range or not registered.

Range / Location

To obtain the best possible range, we recommend positioning the telephone in a location central to your sphere of activity. Avoid positioning the telephone in niches, recesses and behind steel doors.

The maximum range between base station and handset is approximately 900 feet outdoors. Depending on the surrounding conditions as well as spatial and structural factors, the range may be smaller. Silent zones can occur due to the digital transmission in the frequency range used – even within the range, depending on the structural environment. In this case the transmission quality may be reduced through the increased incidence of short breaks in transmission. Normal call quality can be restored if you move slightly out of the silent zone. If the range is exceeded, the call will be disconnected unless you move back into range within ten seconds.

Battery advice

Use only the original battery (Li-Ion 3.7 V / 550 mAh) as well as the original power supply (7.5 VDC, 300mA).

The handset operating times (standby 150 hours/active 10 hours) and charging times apply only if the battery is charged to the defined minimum capacity.

Charging is electronically controlled to ensure optimal charging and care of battery in different charge states. Full capacity is achieved only after several charging cycles.

Note:

Using other rechargeable battery or non-rechargeable battery/primary cells can be dangerous and cause malfunctions or damage to the telephone. Do not short-circuit the battery (danger). In particular, avoid inadvertent short-circuits during storage and transport e.g. bunch of keys, metal panels or similar objects, and make sure the battery do not come into contact with greasy materials. When not in the handset, therefore, battery should be stored only in insulating packaging. Ensure also that the contacts do not touch greasy parts.

Rechargeable battery can become warm while recharging. This is a normal occurrence and is not dangerous.

Insert the battery

The battery compartment is situated in the handset.

Open the handset cover.

Insert the battery in the battery compartment.

Replace the handset cover.


Green dots



Make sure you install the battery pack and fit the cover the right way round:

- position the 3 metal contacts of the battery pack against the 3 blade contacts,
- align the green dot on the handset with the one on the cover.

Connecting the phone

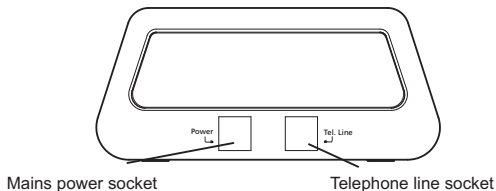

- Before you can start using your telephone you must plug in the telephone connector cable and the mains cable.
- When the phone is delivered, the battery is not yet charged.
- To charge the battery, insert the handset in the base station. The battery will take around 6 hours to fully charge (initial charge).

Set date and time

After setting up the telephone first, date and time are not set.

- Press **Menu / Select**, select **Clock/Alarm** with the navigation key **▲/▼** and press **OK**.
- Select **Date&Time** and press **OK**.
- Enter date and press **OK**.
- Enter the time and press **OK**.

Set language

- The language of the display texts can be changed in the menu:
Personal set/Language

Making a call

- Dial the desired number using the keypad.
- Press the **Talk key**  .

End the call

Press the **End call key**.

Receiving a call

- Incoming calls are signalled by a ring tone and a quick flashing of the control LED on the handset.
- Press the **Talk key**  and conduct your conversation.

End the call

Press the **End call key**.

Calls cannot be made if the battery is almost discharged or the handset is out of range of the base station.

Switch ringer off

When a call is coming in, press and hold the  key for approx. 3 seconds. The ringer is switched off for this call.

Mute handset microphone

Press  to deactivate the microphone in your handset during a call. Press the key again to reactivate the microphone.

Set speaker/loudspeaker volume

You can adjust the speaker/loudspeaker volume during a conversation. Set the desired volume using the **navigation key**  .

Switch handset off

- Press and hold the **End call key** (approx. 5 sec).
- Press and hold again the **End call key** to reactivate the handset.

Set alarm

- Press **Menu/Select** , select **Clock/Alarm** using the **navigation key ▲/▼** and press **OK**.
- Select **Set alarm** using the **navigation key ▲/▼** and press **OK**.
- Select the desired alarm function (e.g. On once), enter the alarm time and press **OK**.

Set alarm tone

- Press **Menu/Select** , select **Clock/Alarm** using the **navigation key ▲/▼** and press **OK**.
- Select **Alarm tone** using the **navigation key ▲/▼** and press **OK**.
- Select the desired alarm melody and press **OK**.

The activated alarm is displayed in standby mode by .

The alarm sounds for 60 seconds or can be deactivated immediately by pressing any key.

Redial

The Redial list contains up to 10 entries.

- Press **Redial**  and select the desired entry using the **navigation key ▲/▼**.
- Press the **Talk key**.

Edit redial list

- Open the Redial list, press **OK**.
You have the following options:
 - **Save Number** – Add number to the phonebook.
 - **Delete entry** – Delete the entry.
 - **Delete All** – Delete the entire redial list.

PBX operation

Your telephone is designed for use in the analogue telephone network and can be operated on a PBX that supports DTMF dialling and flash signalling. To enter the R key (e.g. needed to establish a connection) press **key** **9** flash for 3 sec.

You can adjust the flash/recall time for key R (see chapter "Advanced settings").

Paging – Locate mislaid handsets

All registered handsets ring for one minute, when the **Page key**  on the base is pressed. To stop the ring press the **End call key** on the handset or the **Page key**  on the base.

Phonebook

You can store up to 100 names and numbers in the phonebook on each handset.

Digits / Characters

Different characters are printed on each key. The entries in the phonebook are sorted alphabetically.

- Key #** Change from upper case to lower case letters (ABC/abc).
 Press 3 sec. to insert a pause inside a phone number ("P" appears).
- Key 1** Insert a space.

Add new entries in the phonebook

- Press , select Phonebook and press **OK**.
- Select **New entry** and press **OK**.
- Enter the desired name and press the **navigation key** ▲/▼ for further input options.
- Press **OK** to save the entry.

Edit phonebook

- Press , select Phonebook and press **OK**.
- Select **View entry** and press **OK**.
- Select the desired entry using the **navigation key** ▲/▼ or enter the first letter of the name.
- Press the **Talk key**  to call the number.

In the phonebook menu you have the following options:

- New entry
- View entry
- Delete all
- Direct mem - Call a programmed direct memory number.
- PB Transfer – Copy phonebook to another handset.

Direct memory

Phone numbers from the phone book can be assigned to numerical keys 1 to 9.

Programming direct memory keys

- Press **Menu / Select** , select **Phonebook** and press **OK**.
- Select **Direct mem** and press **OK**.
- Select the desired memory key and press **OK** twice.
- Select **Add** and press **OK**.
- Select the desired entry from the phonebook using the **navigation key ▲/▼** and press **OK**.

Calling a direct memory number

To call a direct memory number, press the corresponding key for approx. 3 seconds. The programed number is called.

Calls list and caller ID operation

Getting to know your new telephone

IMPORTANT: Subscription to Caller ID (CID)/Call Waiting ID services from your Local Phone Company is required for using the Caller ID/Call Waiting ID features of ePure. Your new ePure telephone gives you the ultimate in cordless telephone sound quality with the luxury of Caller ID and Call Waiting ID. Some key features are:

- 50 name and number Caller ID/Call Waiting ID memory (Call List)
- 100 name and number programmable memory (Phonebook)

Unlike regular telephones, your cordless telephone does not work during power failures. We do not recommend that you use a cordless telephone as the only phone in your residence.

INTRODUCTION to CALLER ID and CALL WAITING ID

The ePure Caller ID/Calling Waiting ID devices allow you to take advantage of the Caller identification delivery service offered by your Local Telephone Company. For more information, you can refer to the following Questions and Answers table:

QUESTIONS	ANSWERS
What is Caller ID?	Caller ID is a device that identifies the calling party before you answer a call. This device can be used to screen unwanted calls and eliminate harassment from annoying calls.
What is Caller Waiting ID?	Call Waiting ID is a device that can also identifies the call waiting party before you answer a call.
How does Caller ID and Call waiting ID work?	When used with Caller ID/Call Waiting service, the Caller ID/Call Waiting ID device displays the name (if available), and the telephone number (if available) of the person calling before you answer your telephone.
Who provides Caller ID service?	Your local telephone company. However, not all local telephone companies provide Caller ID service. Please call you local phone company to confirm that the service is available before you install the device.
How can I activate my Caller ID?	For your Caller ID unit to function, you must first arrange with your local telephone company to have Caller ID/Call Waiting ID service installed on you line. There is an extra charge added to your monthly telephone bill for this service. Before using this unit, please read instruction manual carefully.

The control LED on the side of the handset flashes when you have one or more missed calls. The calls list can contain up to 50 entries.

To use this function, the caller's number must be transmitted (FSK). Contact your telephone company for further information.

Call a number from the calls lists

- Open the calls list by pressing the **navigation key ▲**.
- Select the desired entry using the **navigation key ▲/▼**.
- Press the **Talk key**  to call the number.
or
- press **OK** and select a function from the list.

If the caller's number is suppressed, only Withhold is displayed. The call is not entered in the call list.

Edit calls list

- Open the calls list.

You have the following options:

- Edit entry
- Save Number – Store number in the phonebook.
- Delete entry – Delete single entries.
- Delete All – Delete all entries.

Extending the ePure

The delivered handset is already registered on to base station. In standby the internal number of the handset is displayed.

You can register up to 5 handsets to your base station.

If you register your ePure handset with a "third party" base station or a "third party" handset on your ePure base station (GAP), you may not be able to use some functions or only to a limited extent.

Register new handsets

Registering an additional handset with the main base station (the base station you have connected to the telephone network):

1. Before registering an additional handset, you first need to unregister it from its original base station:
 - Press **Menu / Select**, select **Advanced set** and press **OK**.
 - Select **Unregister** and press **OK**.
 - The ePure may now ask for the PIN. If so, enter the PIN (default 0000) and press **OK**.
 - Press **OK** again to confirm.

Your handset is now no longer registered with any base station.
2. Preparing the main base station (base you have connected to the telephone network) for registering additional handsets:
 - On the base station you want to use as the main base station, press and hold down the **Page key**  for around 10 seconds (the Page key is on the underside of the base station).

3. Registering an additional handset:

- Press , select **Advanced set** and press **OK**.
- Select **Registration** and press **OK**.
- Select **Regist. Base** and press **OK**.
- **Base 1 2 3 4** is displayed on the handset. Select the main base station (default 1).
- After a few seconds you will be asked to enter the PIN.
- Enter the PIN (default 0000) and press **OK**.
- If registration is successful you will hear the dialling tone when you press the Talk key , and after one minute the handset will go to standby mode.

Repeat this procedure for every additional handset.

If the registration is not successful:

- Interrupt power supply of base and handset (disconnect power adapter/remove battery).
- Repeat the registration procedure.

Making a call with several call partners

During a call you can make a second internal call (enquiry call), switch between call partners or simultaneously converse (3-way conference call) without the need for two telephone lines.

Internal conversation / Internal call

- Press 3 sec. key  and enter the desired internal party.

If only two handsets are registered, pressing 3 sec. key  will automatically call the other handset.

If you receive an external call while you are on the phone to an internal call partner, you will hear an incoming call alert. End the internal call by pressing the **End call key**. Press the **Talk key**. You are connected to the external party.

Call transfer to another handset

You are conducting an external call and you want to transfer it to another handset.

- Press 3 sec. key .
- Enter the desired number.
- When the internal party responds press the **End call key** to transfer the call to the other party.

Conference

You are conducting an external call.

- Call another internal party (see above).
- The internal party answers.
- Press 3 sec. key  to start a conference call. If one of the handsets presses the End call key, the other handset will be connected to the external call.

Personal settings

- Press , select **Personal set** and press **OK**.
- Select a function from the list using the **navigation key ▲/▼** and press **OK**.
 - Handset tone
 - Ring volume
 - Ring melody
 - Group melody
 - Key tone - Every time a key is pressed, a brief beep is heard.
 - First ring - This handset doesn't ring until the second ring (the first one is withheld).
 - Handset name - To better distinguish between handsets, you can give each handset a name.
 - Auto pick-up - Just pick up the handset from the base to answer a call (without pressing any key).
 - Auto hang-up - Just hang up the handset to end a call.
 - Language
 - Room monitor - You need two handset to use this function. Place one of the handsets in the room you wish to monitor. Enable the function at that handset. You can then establish a connection to this handset from a second handset and monitor the room acoustically. Dialling the internal phone number of the handset placed in the room starts room monitoring. Room monitoring is stopped again by either putting the phone down or pressing the Talk key.

Advanced settings

- Press , select **Advanced set** and press **OK**.
- Select a function from the list using the **navigation key ▲/▼** and press **OK**.
 - Recall Time – Select the recall time (flash time) for the analogue network functionalities in your country.
 - Dial Mode – Tone: Normal dialling procedure on analog lines. Pulse: May be required for connecting older telephone systems. Please refer to the relevant documentation.

- **Call barring** – Use this function to ban certain phone numbers from being dialled. The call barring numbers must be entered separately for each handset. You can specify bar calls to up to 4 numbers each comprising up to 4 digits. All phone numbers whose first digits match the specified numbers will be barred.
- **Baby call** – Use this function to store a set phone number that will be dialled automatically when any key (except the End call key) is pressed. You must enter the desired call number.
- **Registration** - Accessory handsets must be registered to the base station.
- **Unregister** – Select the handset you want to deregister.
- **PIN** – You can modify the PIN code (0000 on delivery).
- **Reset unit**
- **Prefix**
 - **Detect digit** - If the first digits of a number you are calling are identical to the digits stored, they will be suppressed.
 - **Prefix num.** - The prefix number can be 5 digits long. The stored digits are added in front of the phone number when dialling (with a dialling pause).
- **Intrusion** - Enabling this function allows you to link in handsets to the call made with another handset.
- **ECO Mode** – When ECO Mode is set to ON, the handset's power transmission is regulated and a radiation reduction is achieved when it is near the base station.
- **Zero Emit** - Multi handset ECO Mode.

Appendix

Using Internet/cable telephone adapters on an analog port

When using an analog telephone on the analog connection of an Internet or cable telephone adapter, not all the described features (in particular calling line display) may function in the same way as with a standard analog telephone line. This does not cause the ePure to malfunction.

Several factors can cause a failure of specific features to function:

- The Internet/cable telephony provider may not provide the function on its Internet/cable telephony connection.
- The adapter used to convert Internet/cable telephony to analog telephony (usually supplied by the provider) may not forward the functions to connected telephones or may forward them in a non-analog format.

If this happens, please check the ePure on an analog fixed line and/or contact your Internet/cable telephony provider.

Industry Canada Certification

Operation is subject to the following two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

NOTE: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

FCC / ACTA Information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA.

On the bottom of the base station is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone

network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

A copy of the supplier's Declaration of Conformity (SDoC) is available at this Internet address: www.swissvoice.net

If this equipment causes harm to the telephone network, the telephone company will notify you in advance, that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment.

If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If trouble is experienced with this equipment, for repair or warranty information, please contact Support at 0011800 – 10181010. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment is of a type that is not intended to be repaired by the Customer (user).

This telephone system may not be used on coin service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. Privacy of communications may not be ensured when using this phone.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

FCC Part 15

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Privacy of communications may not be ensured when using this telephone!

Notice for Direct Inward Dialing ("DID")

ALLOWING THIS EQUIPMENT TO BE OPERATED IN SUCH A MANNER AS TO NOT PROVIDE FOR PROPER ANSWER SUPERVISION IS A VIOLATION OF PART 68 OF THE FCC'S RULES.

Notice to Hearing Aid Wearers:

This phone system is compatible with inductively coupled hearing aids.

Power Outage:

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

Notice:

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

For body worn operation, the portable part (handset) has been tested and meets FCC RF exposure guidelines. Use with an accessory that contains metal parts may not ensure compliance with FCC RF exposure guidelines.

Notice to telephone company service:

If you need service from your telephone company, please provide them with the information – Facility interface Code (FIC) – Service Order Code (SOC) – Universal Service Order Code (USOC) as indicated on the label on the bottom side of the base station.

IMPORTANT SAFETY INSTRUCTIONS

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. The telephone is for indoor use in dry locations.
5. The maximum ambient operating temperature is 40 °C. In order to avoid over-heating, do not cover the telephone.
6. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
7. CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.

WARNING

TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

Warning: To reduce the risk of electric shock, do not remove the cover (or back), no user serviceable parts inside. Refer servicing to qualified personnel only.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

9. Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.
10. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.
11. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of AC line power to your home, consult your dealer or local power company.
12. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
13. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
14. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.
15. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used. Disconnect TNV circuit connector before removing cover.
16. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a.) When the power cord is damaged or frayed.
 - b.) If liquid has been spilled into the product.
 - c.) If the product has been exposed to rain or water.
 - d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
 - e.) If the product has been dropped or physically has been damaged.
 - f.) If the product exhibits a distinct change in performance.
17. Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrestor.
18. Minimum No. 26 AWG telecommunication line cord must be used with this phone.

Contact with liquid



If the handset should come into contact with liquid:

1. **Switch the handset off and remove the battery immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**
When it has fully dried out, you will usually be able to use it again.

Care

Your telephone is a sophisticated product in terms of design and construction, and should therefore be handled with care.

To clean the telephone, wipe first with an antistatic cloth or a damp, soft leather cloth and then dry using a dry cloth.

Recycling (environmental protection)



At the end of the product's life cycle, the telephone must not be disposed of in normal domestic waste. Please take it to a collection point for processing electrical and electronic equipment: see symbol on the product, in the user manual and/or packaging.

Some materials used in this product can be recycled if you take it to a recycling depot. By recycling parts or raw materials from used products you will be making an important contribution to environmental protection. Please contact your local authority if you require information about collection points in your neighbourhood.

BATTERY SAFETY PRECAUTIONS

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions.

CONTAINS NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this product.
2. **DO NOT USE NICKEL CADMIUM OR LITHIUM BATTERIES**, or mix batteries of different sizes or from different manufacturers in this product. **DO NOT USE NONRECHARGEABLE BATTERIES.**
3. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
4. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
5. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
6. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.
7. Periodically clean the charge contacts on both the charger and handset.

Service (Customer Care)

If you face any issue with your cordless phone, please first visit our website **[www.swissvoice.net /epure](http://www.swissvoice.net/epure)**, FAQ section. The most current issues are described and this will help you to solve your trouble.

If after having visited our FAQ you are still facing this issue, and for any Customer Care warranty service, product operation information or problem resolution, please call : Toll free : **0011800 – 10181010** or send an email to **helpline@swissvoice.net**

End-user limited warranty

This product is covered by a one year limited warranty.

Any repair replacement or warranty service, and all questions about this product should be directed to: 0011800 – 10181010.

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") provided by Swissvoice Inc.

Swissvoice Inc. warrants to you that at the date of purchase, the Product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

1. WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

2. EXCLUSIVE REMEDY

Swissvoice Inc. entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING:

- Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.
- Products which have been repaired, maintained or modified (including the antenna) by anyone other than Swissvoice Inc. or a Swissvoice Inc.-approved repair facility, or that have been improperly installed.
- Cost of installation, removal or reinstallation.
- Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.
- Equipment and components not manufactured, supplied or authorized by Swissvoice Inc.
- Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product or other acts which are not the fault of Swissvoice Inc. and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.
- Products which have had warranty stickers, electronic serial number and/or serial

number label removed, altered, rendered illegible or fraudulently applied to other equipment.

- Signal reception problems (unless caused by defect in material or workmanship in the Product).
- Products operated outside published maximum ratings.
- Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Swissvoice Inc.
- Consumables (such as batteries and fuses).
- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Swissvoice Inc.
- Loss of data.
- Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Swissvoice Inc. shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not. This warranty is valid only in the country in which it is purchased (i.e., the United States of America or Canada respectively, but not both).

USE WITH ACCESSORIES NOT SUPPLIED BY SWISSVOICE INC. OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY SWISSVOICE INC. MAY VOID WARRANTY.

4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Swissvoice Inc. prior to the expiration of the warranty period. Swissvoice Inc.'s obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater.

If you want to learn more about Swissvoice Service or for Support on your Swissvoice phone, visit our web site at <http://www.swissvoice.net>

Support service will be provided for you by accessing the toll free customer service number: 0011800 – 10181010.

5. LIMITATION OF WARRANTY

Swissvoice Inc. makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Swissvoice Inc., YOU ARE NOT ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES, if the Product does not meet the limited warranty and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty.

Some states/jurisdictions/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have others which vary from state/jurisdiction/province to state/jurisdiction/province.

7. DISCLAIMER OF WARRANTIES

SWISSVOICE INC. AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COMPLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION OR NONINFRINGEMENT WITH REGARD TO THE PRODUCT.

Some states/jurisdictions/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. If an implied warranty or condition is created by your state/ province and federal or state/provincial law prohibits disclaimer of it, you also have an implied warranty or condition, BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIMITED WARRANTY (ONE YEAR). AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY KIND.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province to province. In no event shall Swissvoice Inc.'s liability exceed the cost of repairing or replacing defective Products as provided herein,

and any such liabilities will terminate upon expiration of the warranty period. Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory.

8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL SWISSVOICE INC., SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIMITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF SWISSVOICE INC. OR SELLER OR ANY SUPPLIER, AND EVEN IF SWISSVOICE INC. OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF SWISSVOICE INC., SELLER AND ANY OF THEIR SUPPLIERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING (EXCEPT FOR ANY REMEDY OF REPAIR OR REPLACEMENT ELECTED BY SWISSVOICE INC. OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WARRANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS (\$5.00 USD/CAN).

THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

10. GOVERNING LAW

If this Product was purchased in the United States of America this limited warranty will be governed by the laws of Texas, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If this Product was purchased in Canada this limited warranty will be governed by the laws of the Province of Ontario and the federal laws of Canada applicable therein, and exclude the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Swissvoice Service or for Support on your Swissvoice phone, visit our web site at <http://www.swissvoice.net> or send an email to swissvoice@tdm.de or please call **0011800 – 10181010**.

Issued by
Swissvoice SA
1, chemin des Mûriers, CH-1170 Aubonne

© Swissvoice SA 2012

All rights reserved.

Subject to availability.

Rights of modifications reserved.

Product attributes subject to change.

We reserve the right, to make changes without notice in equipment design and/or components.

20406635en_ba_a0

SV 20406635

© Copyright 2012

Warranty Certificate

swissvoice *Warranty Certificate*

*Garantieschein, Bon de garantie, Certificato di garanzia,
Garantiebewijs, Takuutodistus, Garantibevís, Garantisedel,
Garantibevís, Certificado de Garantía, Talão de garantia*

device type: (Gerätetyp, type d'appareil, tipo di apparecchio, toesteltype, laitetyypit, maskintype, apparattyp, apparattype, modelo del aparato, modelo do aparelho):

serial number: (Seriennummer, numéro de série, numero di serie, serienummer, sarjanumero, serienummer, serienummer, serienummer, número de serie, número de série):

dealer's stamp: (Händlerstempel, sceau du vendeur, timbro del rivenditore, stempel van de dealer, kauppiaan leima, forhandlerens stempel, försäljarens stämpel, forhandlerstempel, sello del comerciante, carimbo do vendedor):

dealer's signature: (Unterschrift des Händlers, signature du vendeur, firma del rivenditore, handtekening van de dealer, kauppiaan allekirjoitus, forhandlerens underskrift, försäljarens underskrift, forhandlers underskrift, firma del comerciante, assinatura do vendedor):

date of purchase: (Kaufdatum, date d'achat, data d'acquisto, datum van aankoop, ostopäiväys, kjøpsdato, datum för köpet, salgsdato, fecha de adquisición, data de compra):



Product attributes subject to change.
We reserve the right, to make changes without notice in
equipment design and/or components.

Issued by
Swissvoice SA
1, chemin des Mûriers, CH-1170 Aubonne

© Swissvoice SA 2012
All rights reserved.
Subject to availability.
Rights of modifications reserved without notice in equipment
design and/or components.
Product attributes subject to change.

www.swissvoice.net

20406635us_ba_a0
SV 20406635
© Copyright 2012