



INNOVATIONS IN WIRELESS COMMUNICATIONS
985 SHULAM AVE • SANTA CLARA • CA • 95050
VOCIE (408) 727-4889 FAX (408) 727-3025
WWW.SWINTEK.COM • ssales@swintek.com

OPERATING INSTRUCTION FOR MARK7557 ® BALL-CAP XT

- 1) *The 7554 body wire transmitter is designed to be powered from ONE NINE-VOLT TRANSISTOR BATTERY. The transmitter will not work properly with zinc or carbon base batteries.*
- 2) *Hold the transmitter and clip a fresh battery to the battery cord.*
- 3) *Power Switch: When set to the ON position, the transmitter will turn on and transmit continuous voice information.*
- 4) *Always test the range of the unit before using. The transmitter should be centered in the middle of the cap with the antenna going around the circumference of the cap.*

Never re-use your batteries. Always use NEW batteries! Typical runtime at .5 Watt is 1.5 to 2 hours for alkaline.

FCC ID: FLC2000~~4~~0

PAGE 6 OF 6
