

## 1.6 User Manual

### FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following 2 condition:

- 1.this device may not cause harmful interference, and
- 2.this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### IMPORTANT SAFETY WARNINGS

- 1.FCC regulations state that any change or modification to the equipment, not expressly approved by the manufacturer or its authorized parties, could void user's authority to operate this equipment.
- 2.To prevent fire or electric shock, do not expose the unit to rain or moisture.
- 3.Never attempt to open the casing. Always refer servicing to a qualified technician.

### FCC NOTICE (USA)

As specified in Part 15 of the FCC Rules, this equipment complies within the limits of a Class B digital device. These restrictions provide sufficient against radio and TV interference in residential areas. However, even during normal operation, this device may cause TV or radio interference. In attempting to eliminate some or all interference, you should try one or more of the following corrective measures:

- 1.Increase the distance between the device and the radio and/or TV
- 2.Try a different outlet on various electrical circuits for the device, the radio and/or TV.
- 3.Reposition the receiving antenna



Disposal of old electrical and electronic equipment :  
After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies:  
Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilizing old devices, you are making an important contribution to protecting our environment.



**Bluetooth®**

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. And any use of such marks by Native Union is under licence. Bluetooth QCID:

 
## ENGLISH

### WELCOME

Thank you for buying an ECHOLOGICO Retro Bluetooth Handset. For the most current information, please check our website at [www.echologico.com](http://www.echologico.com)

### IN THIS PACKAGE

- 1 x ECHOLOGICO Retro Bluetooth Handset
- 1 x User Guide
- 1 x Micro USB - USB Charging Cable

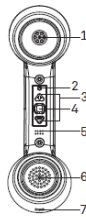

### OVERVIEW :

1. Earpiece
2. Status Indicator
3. Volume[+]/[-]Key
4. Multi-function Button [MFB]
5. Ringer
6. Microphone
7. Micro-USB Charging Port

### A. CHARGING THE BLUETOOTH HANDSET:

- 1.Plug the Micro-USB jack of the charging cable into the charging port of the Bluetooth handset.
- 2.Plug the USB end of charging cable into the computer USB port
- 3.The red LED will turn on when the battery is under charging
- 4.Once charging completed, the red LED will turn off.

### B. PAIRING YOUR HANDSET WITH A BLUETOOTH MOBILE PHONE:

(Please place your mobile phone close to the Bluetooth handset when starting the registration process.)

- 1.If handset is OFF, press and hold the [MFB] for 6 seconds until the status indicator flashes blue and red alternately. If handset is ON, press and hold the Volume [+] key for 4 seconds until the status indicator flashes blue and red alternately.
- 2.Activate your mobile phone's Bluetooth, search Bluetooth devices, select "Retro Bluetooth", and if required, enter the passcode "0000". When the pairing is completed, the handset blue status indicator will flash twice to confirm.

### C. MAIN FUNCTIONS OF THE BLUETOOTH HANDSET:

FUNCTION	BUTTON	*SOUND AND **STATUS INDICATOR
Power On	Press and hold the [MFB] for 3 seconds	*Short beep at earpiece **Blue LED will flash every 1 seconds if it's not paired or connected to any mobile phone **Blue LED will flash every 3 seconds if it's connected to a mobile phone.
Power Off	Press and hold the MFB for 4 seconds	**Red LED will flash 5 times to confirm
Low battery alert		**Red LED will flash every 3 seconds
Answer/End a call	Press the [MFB] once	
Earpiece volume	Press Volume [+] / [-] key during conversation	
Ringer Volume	Press Volume [+] / [-] key during standby mode	
Voice dialing	Press the [MFB] once while in standby mode	
Last number redial	Press the [MFB] twice while in standby mode	
Reject call	Press and hold [MFB] for 2 seconds during incoming call	
Mute	-Press and hold the Volume [-] key for 2 seconds during conversation to mute. -Press the Volume [-] key twice to release the mute	*2 short beeps at earpiece **Red LED will turn on during mute

### TROUBLESHOOTING

If you have problems using your ECHOLOGICO Retro Bluetooth handset, please go to [www.echologico.com](http://www.echologico.com) for further help and information, or consult your local retailer.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

©ECHOLOGICO and ECHOLOGICO logo are registered trademarks of Flat Planet Limited.  
All other trademarks and registered trademarks are the property of their respected owners.  
Other product and company names mentioned herein may be trademarks of their respective companies.