


7" Multimedia Tablet



Quick Start Guide

4-Turn Device ON/OFF/Standby Mode

ON: Press and hold the Power button until the loading screen appears. Once the lock screen appears, unlock the Tablet by swiping your finger from the left 'Unlock' icon to the right 'Unlock' icon (illustrated below). Should the display 'Timeout' (or go black) before you are able to unlock the device, press the Power button for one second to turn the display back on.

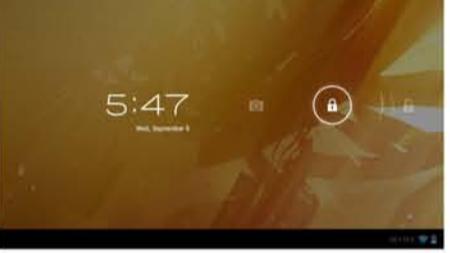

NOTE: Leaving the device in Standby mode when not in use will result in a small battery drain. Switch the Tablet off completely to conserve power between charges.



OFF: Press and hold the Power button until the Tablet options appear. The options will prompt you to tap 'OK' to power the Tablet off or 'Cancel' to return back to the Home screen.

STANDBY: To enter Standby mode, simple tap and release the Power button. To wake up from Standby, tap and release the Power button.

5 -Connecting to a Wireless Network


Note: To connect your Tablet to the Internet, you must have an Internet connection and a wireless network.

- Open the App Tray > Select 'Settings' > Switch the 'Wi-Fi' option from 'OFF' to 'ON' by tapping the 'OFF' icon.
- A list of networks will appear to the right of the screen > Select your network and enter the password/network key.
- Tap 'Connect' to complete the connection.

Tip: Check the "Show Password" box to verify password was entered correctly.



2 - Device Controls and Ports

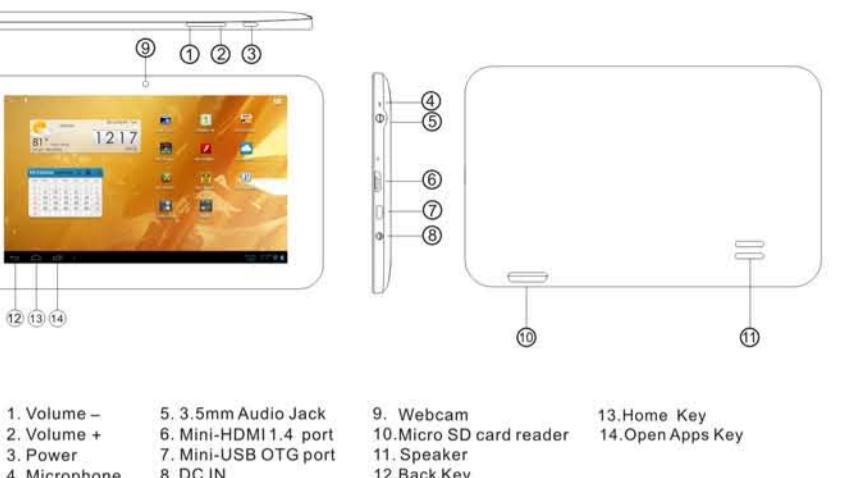


- Volume -
- Volume +
- Power
- Microphone
- 3.5mm Audio Jack
- Mini-HDMI 1.4 port
- Mini-USB OTG port
- DC IN
- Webcam
- Micro SD card reader
- Speaker
- Back Key
- Home Key
- Open Apps Key
- Open Apps Key

3 - Charging Your Device

Connect the AC adapter to your Tablet via the DC input on the bottom (illustrated below). The Tablet may also be charged via USB by connecting your Tablet to a PC with the included USB cable.

It is recommended that the Tablet be fully charged before the first use. A full charge and discharge (15% or below) cycle is recommended to maximize the battery's life and performance.

If the battery is completely drained please allow the Tablet at least 10-25 minutes to recharge prior to turning it on.

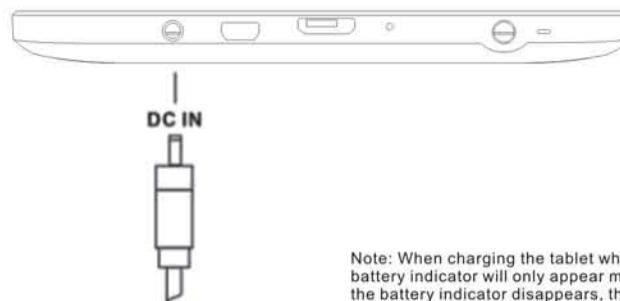


Note: When charging the tablet while powered OFF, the battery indicator will only appear momentarily. Although the battery indicator disappears, the tablet will continue to charge. A full charge takes approximately 3 hours.

7 - Browse the Web



Your SKYPAD Tablet is equipped with a full HTML Web Browser that enables you to view webpages.

- To access the Web Browser select the icon from the App Tray.
- To enter a URL, tap the URL field at the top of the browser and enter the desired link using the QWERTY keyboard.
- Tap 'Go' to load the page.

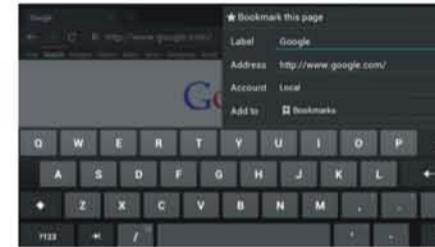

8 - Settings: Date, Time, & Screen Timeout

Manual Time Setting

- Open the App Tray > Select 'Settings' > Scroll down to and tap 'Date & Time' > Select 'Set Time' > Set the hour and minute by tapping the arrow keys; then tap 'Set.'

Manual Date Setting

- Open the App Tray > Select 'Settings' > Scroll down to and tap 'Date & Time' > Select 'Set Date' > Set the month, date, and year by tapping the arrow keys; then select 'Set.'



Auto Date & Time
A. Open the App Tray > Select 'Settings' > Scroll down to and tap 'Date & Time' > Select 'Automatic Date & Time' to check the box.

Note: The 'Automatic Date & Time' option sets the date and time using the network provided. Should an incorrect time zone appear, tap 'Select Time Zone' and find the appropriate time zone.

Screen Timeout

- Open the App Tray > Select 'Settings' > 'Display' > 'Sleep.' A dialogue box will appear with several options to choose from.

Tap the length of time (in seconds or minutes) before the Tablet goes black (to conserve battery life).

9 - Home Screen, Application Shortcuts

Home Screen

A. This is your starting point. The Home screen features pre-installed games, shortcuts and many popular App links ready for download once you connect to the internet.

B. Status/Notifications Bar, Quick Search Icon, and Shortcut Icons.



Add or Remove Favorite Apps from App Tray
A. To open the App Tray tap the icon located at the upper right hand corner of the Tablet to display all of the applications that have been pre-installed or downloaded to your Tablet.
B. To add to the Home Screen, tap and hold the desired app. Release the icon onto the Home screen.
C. To remove an app from the Home screen, tap and hold the icon until it enlarges, then drag to the 'Remove' option that appears at the top of the screen.

Note: Apps that are running in the background may take up valuable memory and drain battery resources. Tap the icon and swipe to close the apps.

10 - Transfer Your Music/Photos/Videos

- Connect your Tablet to your PC via the USB cable.
- A USB symbol will appear in the Notifications Bar/Bottom Bar.
- Select the USB icon that appears in the Notifications Bar/Bottom Bar.
- Tap 'USB Connected' > Turn on USB Storage.'




Note: Your Tablet will be recognized as an external drive. Once completed, tap 'Turn off USB Storage' and remove Tablet from your PC.

11 - Playing Your Music/Videos/Photos

Play Music

- Go to App Tray then tap the 'Music' icon.
- Select the desired song and adjust volume settings to your liking.
- To exit out of the app, tap 'Home' or 'Back.'
- To stop music playback, go back to the Music app and tap 'Pause.'

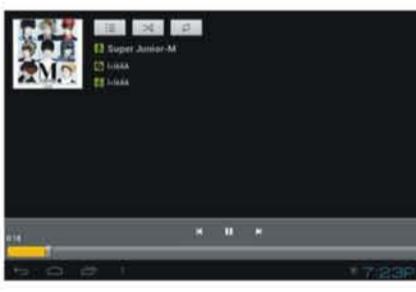

Watch Videos

- Go to the App Tray and select 'Super-HD Player.'
- Select the movie file to view.
- Once the video begins, you may select playback controls that appear on the display.

View Photos

- Go to App Tray and select 'Super-HD Player.'
- Tap on photo files you would like to view.

FCC STATEMENT

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - This device may not cause harmful interference, and
 - This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without RF restriction.

12 - Online Video Streaming

Your Tablet is capable of streaming videos directly from the Internet or via 3rd party streaming applications. To properly run certain applications Adobe® Flash® Player may be required. Popular streaming video applications are available through the Skytex App Store for download onto your Tablet. Prior to streaming films, download the application of your choice.



Note: To view video on your HDTV or monitor, connect using an optional HDMI cable and select the appropriate TV input.

13 - Webcam and Video Chat




Camera Functions
A. Tap the Trash Can icon to delete.
B. Tap Menu > 'Set Picture As' to set the photo as the Table's background.



Video Chat
A. Download and install your favorite video chat app from the 1Mobile Market.
B. The Webcam is set as the default camera for video chat.

14 - Setting up Your Email

- From your App Tray, tap the 'Email' icon to enter the Email client.
- Enter an email address and a password.
- After you have entered your information, press 'Next' to move to the next step.
- The email app will test the incoming and outgoing mail servers. Once completed, you will be prompted to enter an account name and your name.
- The account name is used to identify the name of the account on the Tablet.
- Your name will be displayed on all outgoing messages sent from the email app on your Tablet.

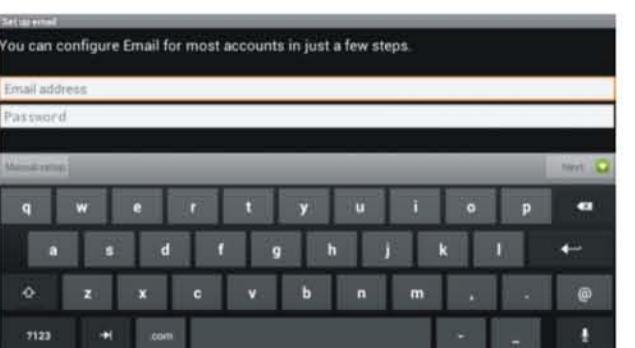

Certain email providers will require you to enter more details about the type of account you are using. You will have three choices: POP3, IMAP, and Exchange. If unsure of your account type, please contact your email provider for more information.