

SKYPAD POCKET



Quick Start Guide

4-Turn Device ON/OFF/STANDBY Mode



ON: Press and hold the Power button until the Pocket loading screen appears. Once the lock screen appears, unlock the table by swiping your finger from the lower "unlock" icon up to the top of the screen (illustrated below). Should the display "timeout" (or go black) before you are able to unlock the device, press the Power button for one second to bring up the display again.

OFF: Press and hold the power button until the device options appear and tap "Power Off" to shut down the device.

STANDBY: To enter standby mode, simply tap and release the power button OR press and hold the power button, then choose the "standby" option. To wake up from standby, tap and release the power button.

NOTE: Leaving the device in standby mode when not in use will result in minimal battery drain. Switch the tablet completely off to conserve power between charges.

1-Introduction

Thank you for purchasing your new SKYPAD Pocket gaming tablet. The Pocket was designed to offer you a full tablet experience right in the palm of your hand. With Wi-Fi capabilities and a multi-touch interface you are able to enjoy videos, music, and games on the go.

Stay entertained with the pre-installed apps right out of the box. Enjoy access to hundreds of thousands of apps from the 1Mobile Market. Use finger gestures to navigate as you surf the web, listen to music, and playback movies. The opportunities are endless with the SKYPAD Pocket.

This QSG will get you started right away; however, we recommend that you review the user manual for a more complete understanding of your SKYPAD Pocket. Visit us at www.skytex.com for additional information and updated FAQ's.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced technician for help.


The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

5-Settings: Date, Time, & Screen Timeout

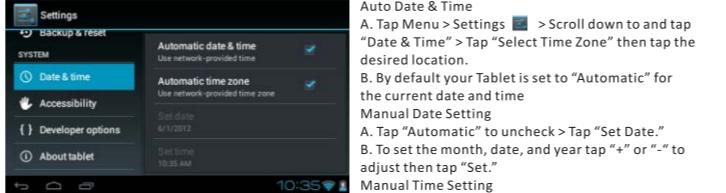

6-Connecting to a Wireless Network

NOTE: To connect your Pocket to the Internet, you must have an Internet connection and a wireless network.

- A. Tap Menu > Settings > Wireless & Networks > tap to check the Wi-Fi box. Do so will turn on Wi-Fi capabilities.
- B. Tap "Wi-Fi Settings" > display a list of available Wi-Fi networks.
- C. Select your network and enter your password/network key.
- D. Tap "Done" then "Connect" to complete the connection.

TIP: Check the box "Show Password" to verify password was entered correctly.




3-Charging Your Device


Connect the larger end of the USB Cable to the AC Adapter. Connect the smaller end of the USB Cable to the SKYPAD Pocket via the mini-USB port on the left side of the device (illustrated below). The SKYPAD Pocket can also be charged by connecting your device to a PC with the USB cable.

It is recommended that the tablet is fully charged before the first use. A full charge and discharge (15% or below) cycle is recommended to maximize the battery's life and capacity.

If the battery becomes completely drained please allow 10-15 minutes for the Tablet to charge prior to turning it on.

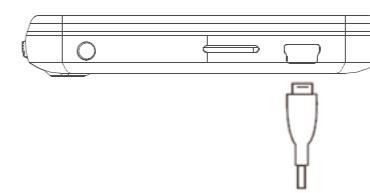

7-Home Screen, Application Shortcuts

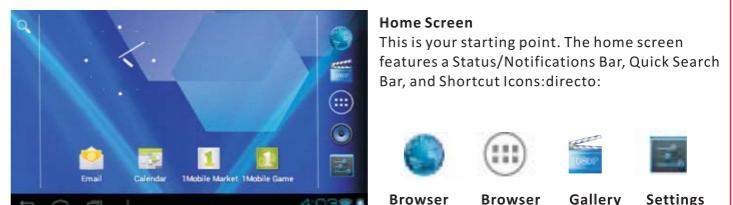


Home Screen

This is your starting point. The home screen features a Status/Notifications Bar, Quick Search Bar, and Shortcut Icons:director:



8-Install Popular Applications from 1Mobile Market

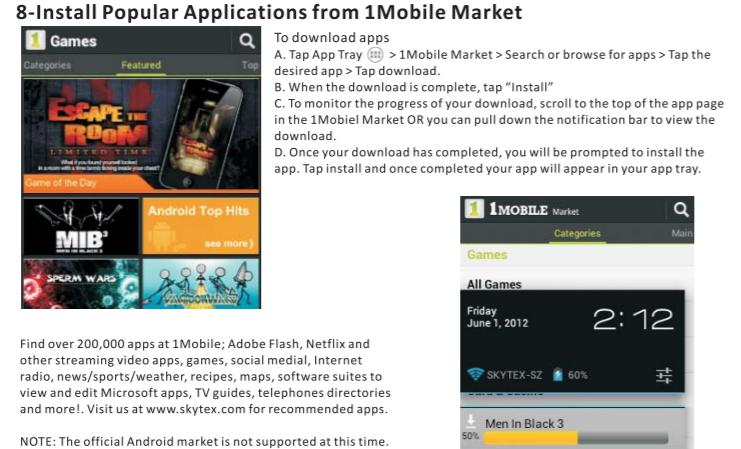


To download apps:
A. Tap App Tray > 1Mobile Market > Search or browse for apps > Tap the desired app > Tap download.
B. When the download is complete, tap "Install".
C. To monitor the progress of your download, scroll to the top of the app page in the 1Mobile Market OR you can pull down the notification bar to view the download.
D. Once your download has completed, you will be prompted to install the app. Tap install and once completed your app will appear in your app tray.

Find over 200,000 apps at 1Mobile, Adobe Flash, Netflix and other streaming video apps, games, social media, Internet radio, news/weather, recipes, maps, software suites to view and edit Microsoft apps, TV guides, telephones directories and more! Visit us at www.skytex.com for recommended apps.

NOTE: The official Android market is not supported at this time.

9-Browse the Web

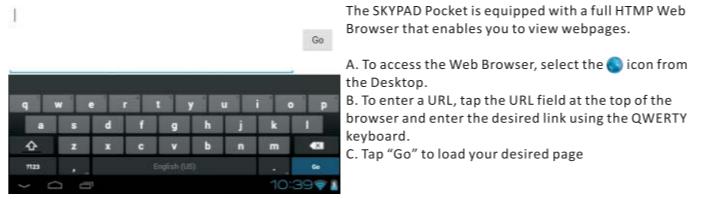


The SKYPAD Pocket is equipped with a full HTML5 Web Browser that enables you to view webpages.

- A. To access the Web Browser, select the icon from the Desktop.
- B. To enter a URL, tap the URL field at the top of the browser and enter the desired link using the QWERTY keyboard.
- C. Tap "Go" to load your desired page.

Bookmark a Favorite Page
A. While at desired page, tap the menu key
B. Tap "More" > Tap "Add Bookmark" > Tap "OK"

10-Transfer Your Music/Photos/Videos

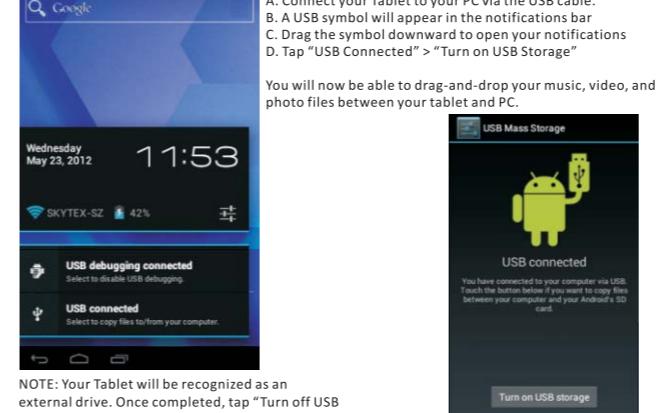

A. Connect your Tablet to your PC via the USB cable.

B. A USB symbol will appear in the notifications bar.


C. Drag the symbol downward to open your notifications.

D. Tap "USB Connected" > "Turn on USB Storage"

You will now be able to drag-and-drop your music, video, and photo files between your tablet and PC.



11-Playing Your Music/Photos/Videos

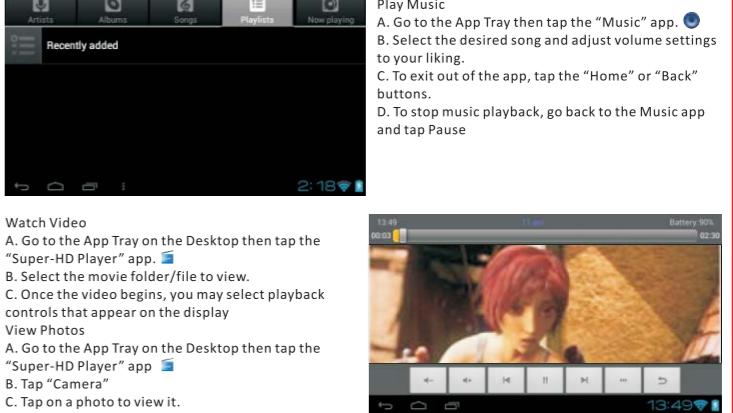


Play Music

- A. Go to the App Tray then tap the "Music" app.
- B. Select the desired song and adjust volume settings to your liking.
- C. To exit out of the app, tap the "Home" or "Back" buttons.
- D. To stop music playback, go back to the Music app and tap Pause


Watch Video
A. Go to the App Tray on the Desktop then tap the "Super-HD Player" app.
B. Select the movie folder/file to view.
C. Once the video begins, you may select playback controls that appear on the display
View Photos
A. Go to the App Tray on the Desktop then tap the "Super-HD Player" app.
B. Tap "Camera".
C. Tap on a photo to view it.

12-Online Video Streaming

The SKYPAD Pocket is capable of streaming videos directly off the Internet or via 3rd party streaming applications. Adobe Flash Player and YouTube have been pre-installed for your convenience. There are many popular video streaming applications available through the 1Mobile Market. Prior to streaming films, download the application of your choice.

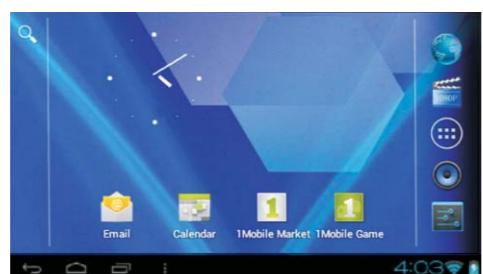


13-Webcam and Video Chat

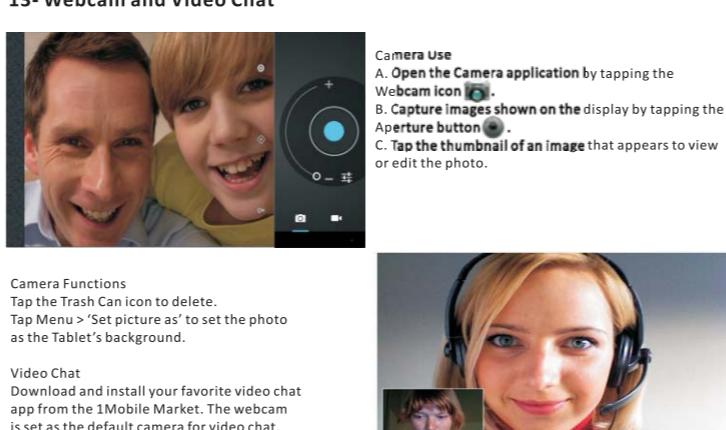

Camera Functions
Tap the Trash Can icon to delete.
Tap Menu > "Set picture as" to set the photo as the Tablet's background.

Video Chat
Download and install your favorite video chat app from the 1Mobile Market. The webcam is set as the default camera for video chat.

14-Setting Up Your Email

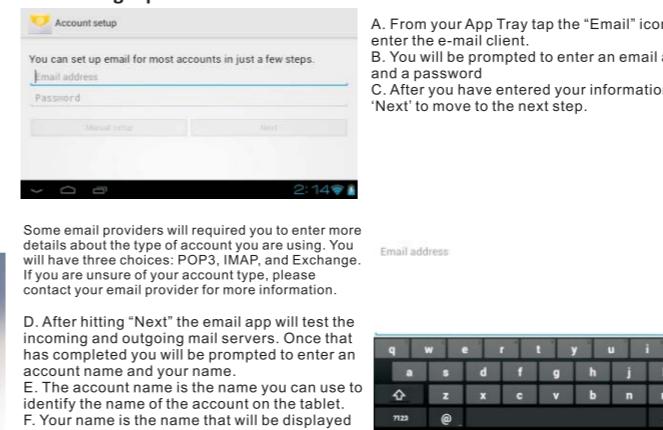

A. From your App Tray tap the "Email" icon to enter the e-mail client.

B. You will be prompted to enter an email address and a password.

C. After you have entered your information press "Next" to move to the next step.

Some email providers will require you to enter more details about the type of account you are using. You will have three choices: POP3, IMAP, and Exchange. If you are unsure of your account type, please contact your email provider for more information.

D. After hitting "Next" the small app will test the incoming and outgoing mail servers. Once that has completed you will be prompted to enter an account name and your name.

E. The account name is the name you can use to identify the name of the account on the tablet.

F. Your name is the name that will be displayed on all outgoing messages sent from the email app on your tablet.

15-FAQ's

Why do I get a parsing error when I attempt to download apps from the 1Mobile Market?

We recommend force closing the application and clearing the cache data. To do this go to Settings > Manage Applications > All > 1Mobile > Force Stop > Clear Data

If you continue to receive the parsing error, try downloading the application from the 1Mobile Market's website at www.1mobile.com.

Why is my SKYPAD Pocket not turning on? How can I reset my SKYPAD Pocket?

To reset the device first make sure the power source is unplugged. Press and hold the power button for 10 seconds and plug the power source back in. Press the power button for another 3 seconds to power on the tablet.

Why am I unable to connect to my Wi-Fi Network?

Make sure that the correct password is entered when connecting to your wireless network. To ensure correct password is being entered enable the "Show Password" option and double check for a case sensitive password. If you are still having problems you may need to contact your Wireless provider.

Where can I get Android Apps from?

The 1 Mobile Market has been pre-installed and gives you immediate access to over 200,000 of the best Android apps available. All for free! Google's Android Market/Google Play is not officially supported at this time.