




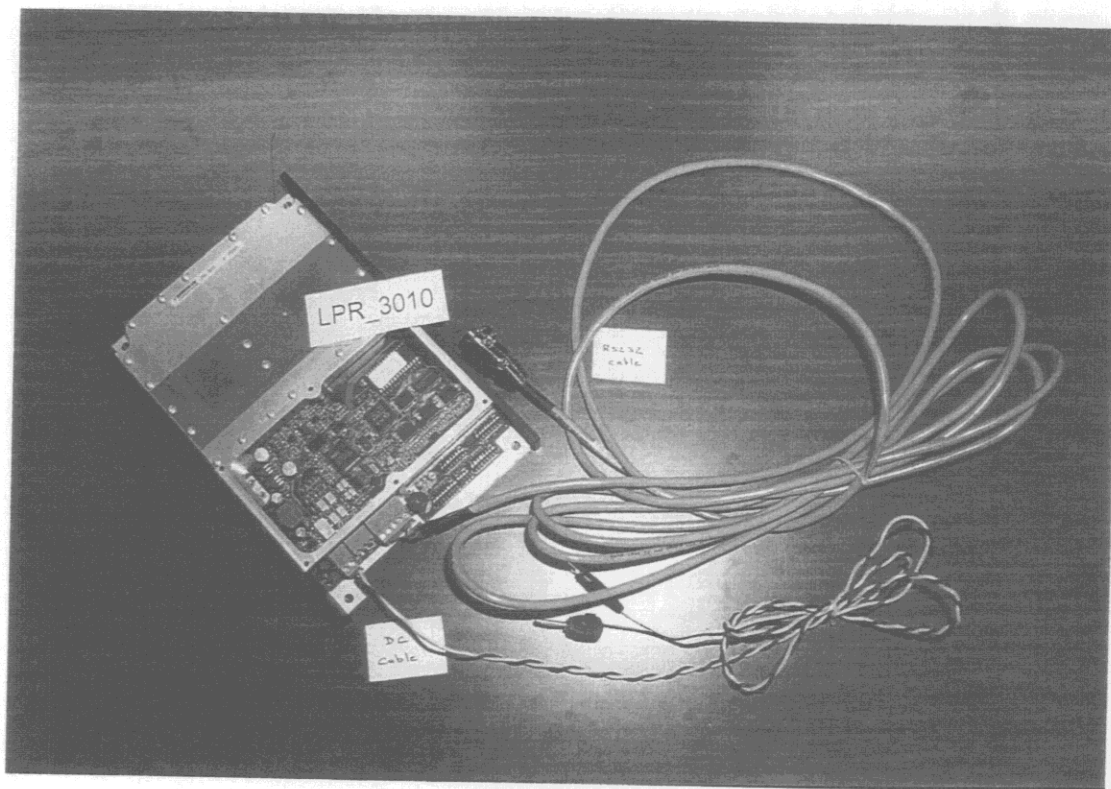


8-2 Reader LPR_3010 with DC cable and RS232 cable

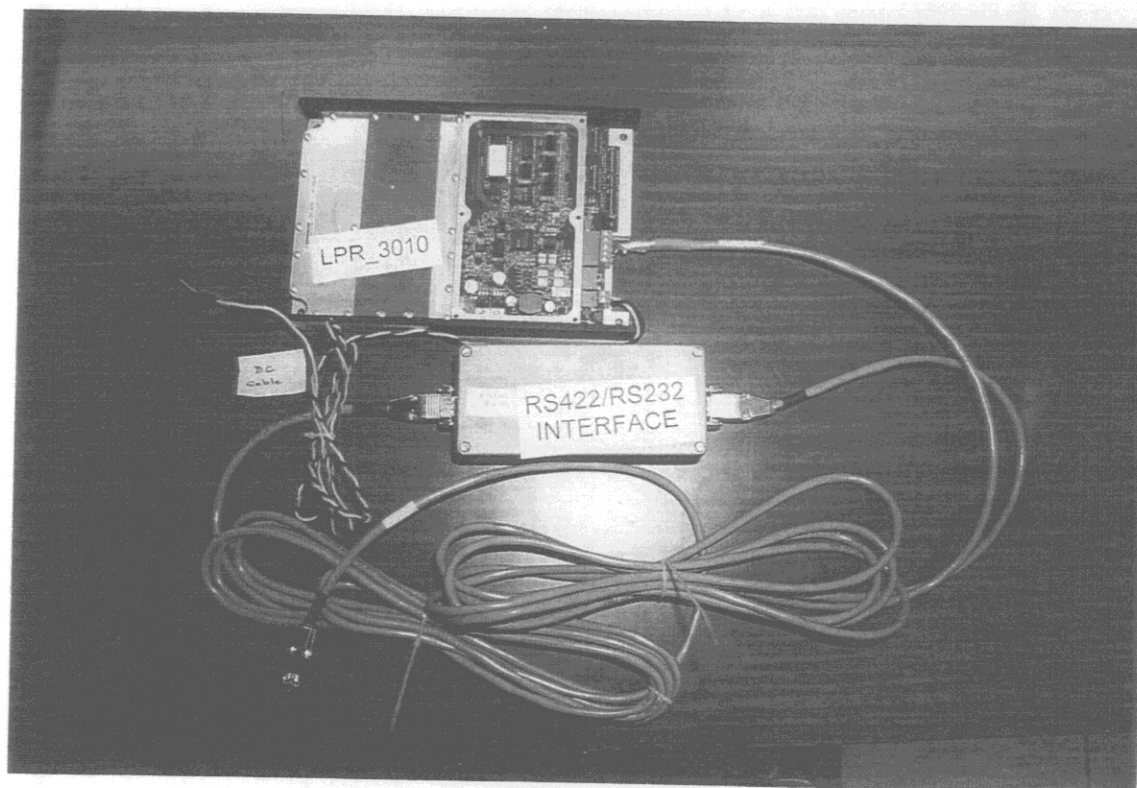


8-3 Reader LPR_3010 with RS422 interface box and cables

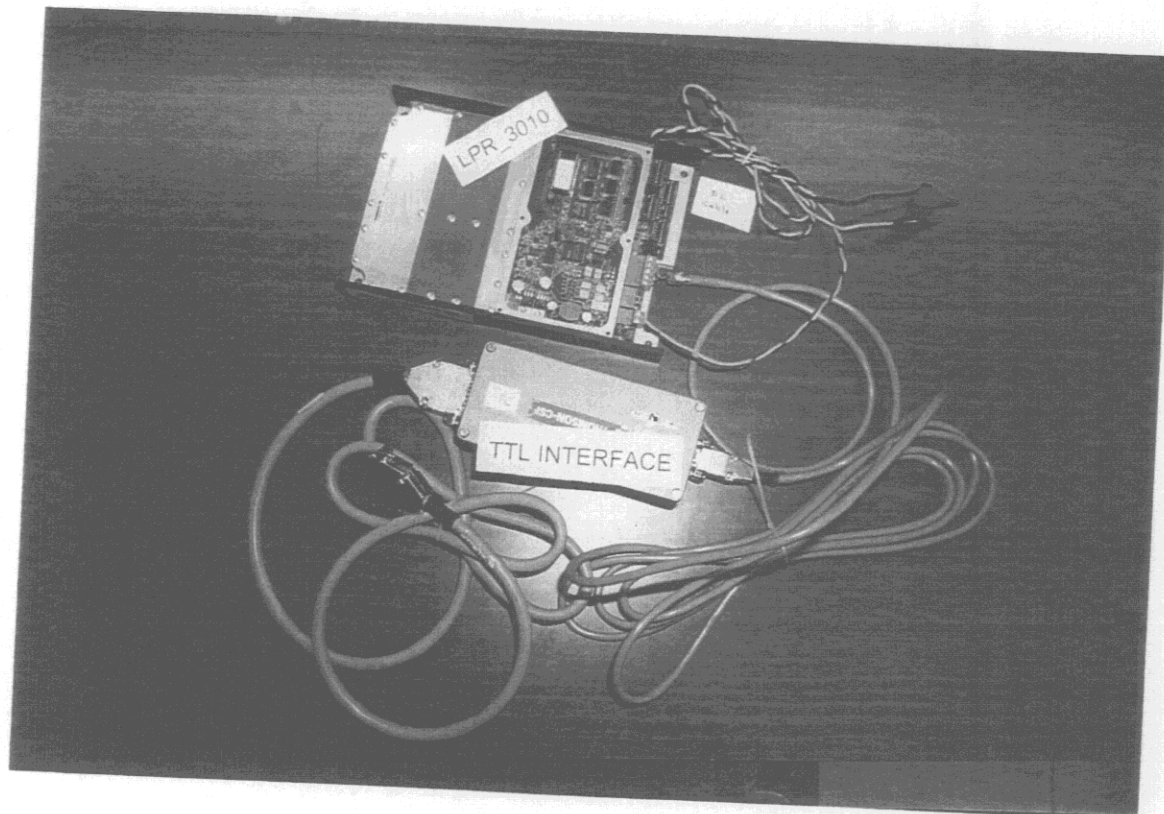


8-4 Reader LPR_3010 With TTL interface box and cables

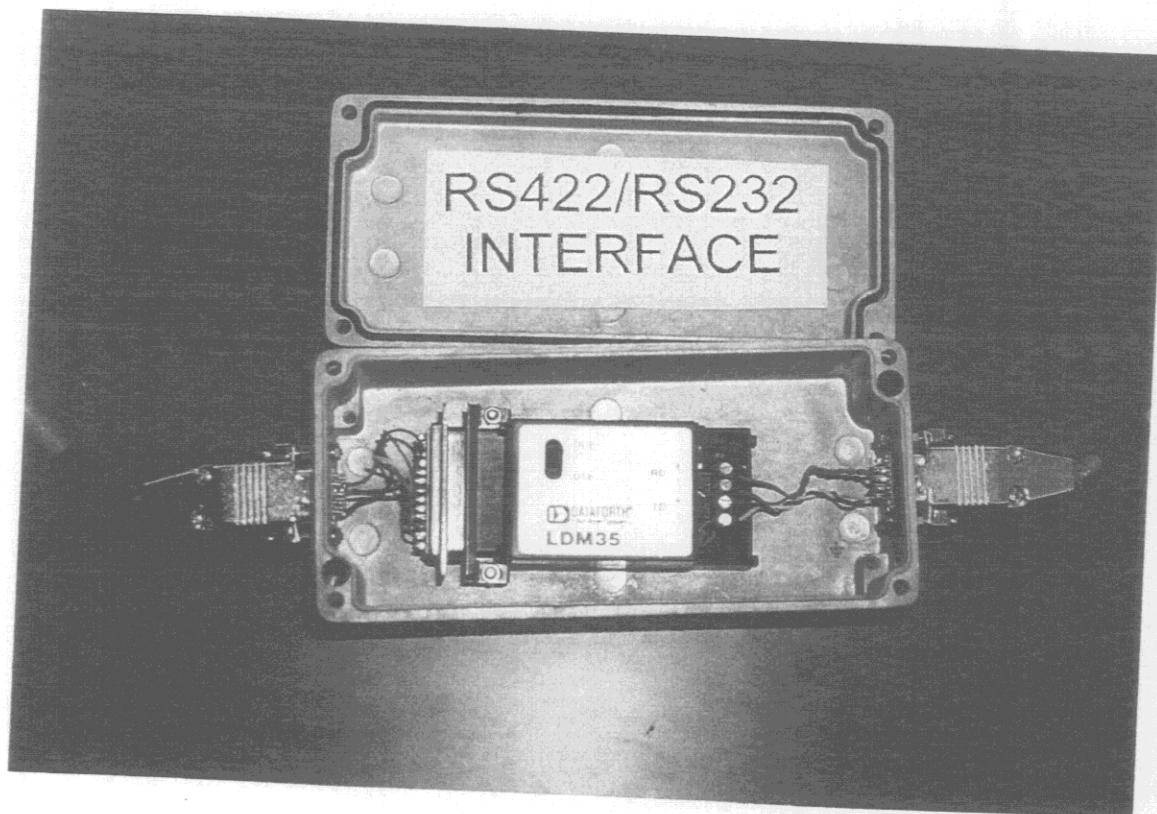


8-5 Inside RS422/RS232 interface box

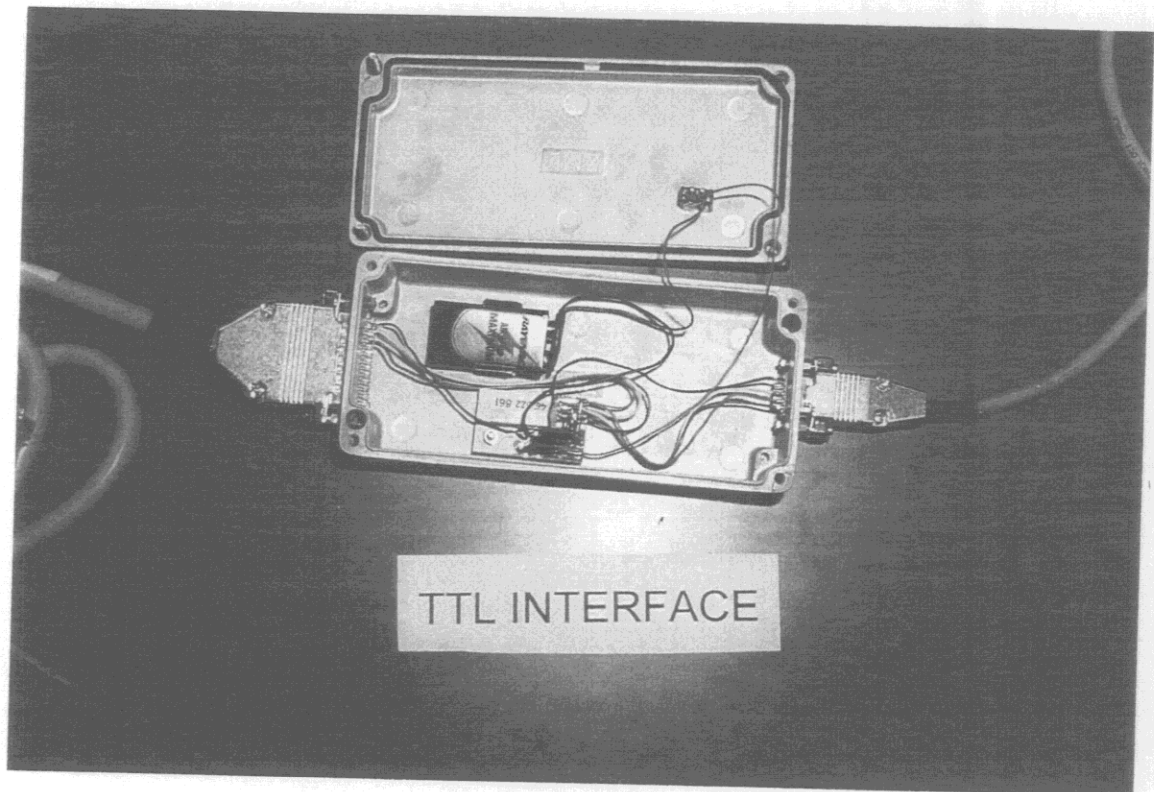


8-6 Inside TTL interface box

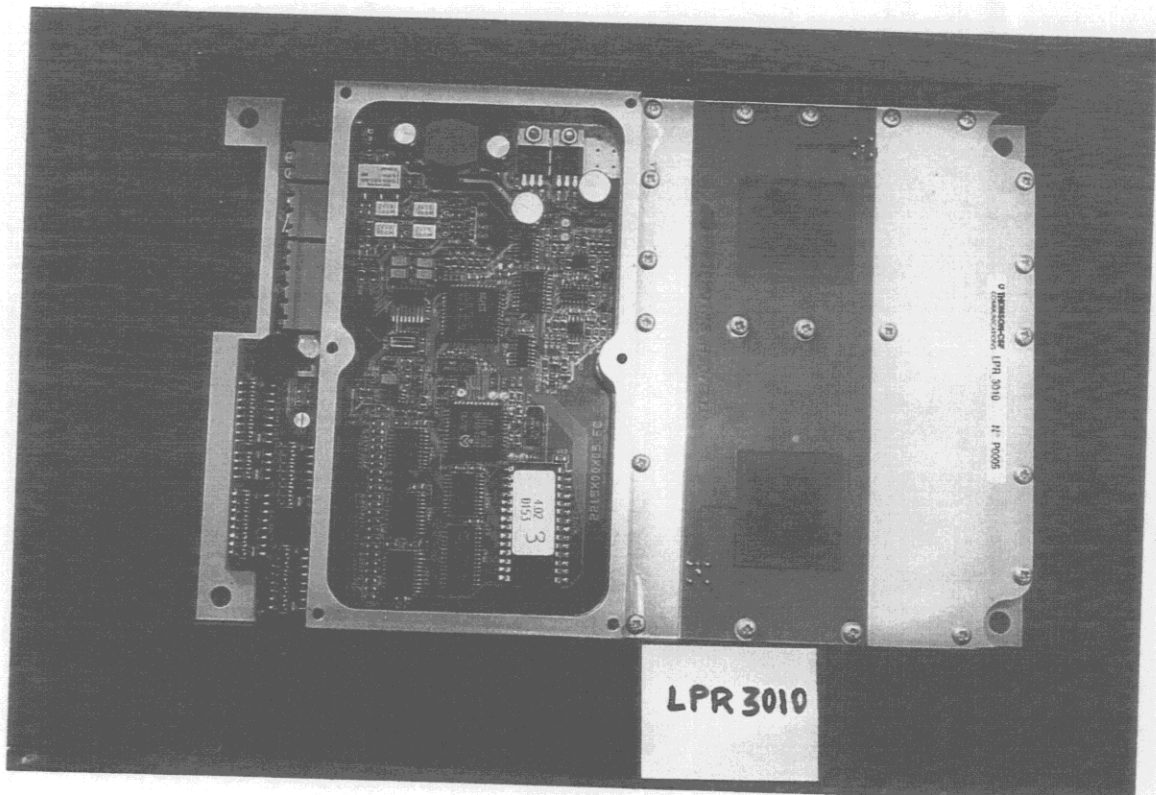


8-7 Inside reader LPR_3010

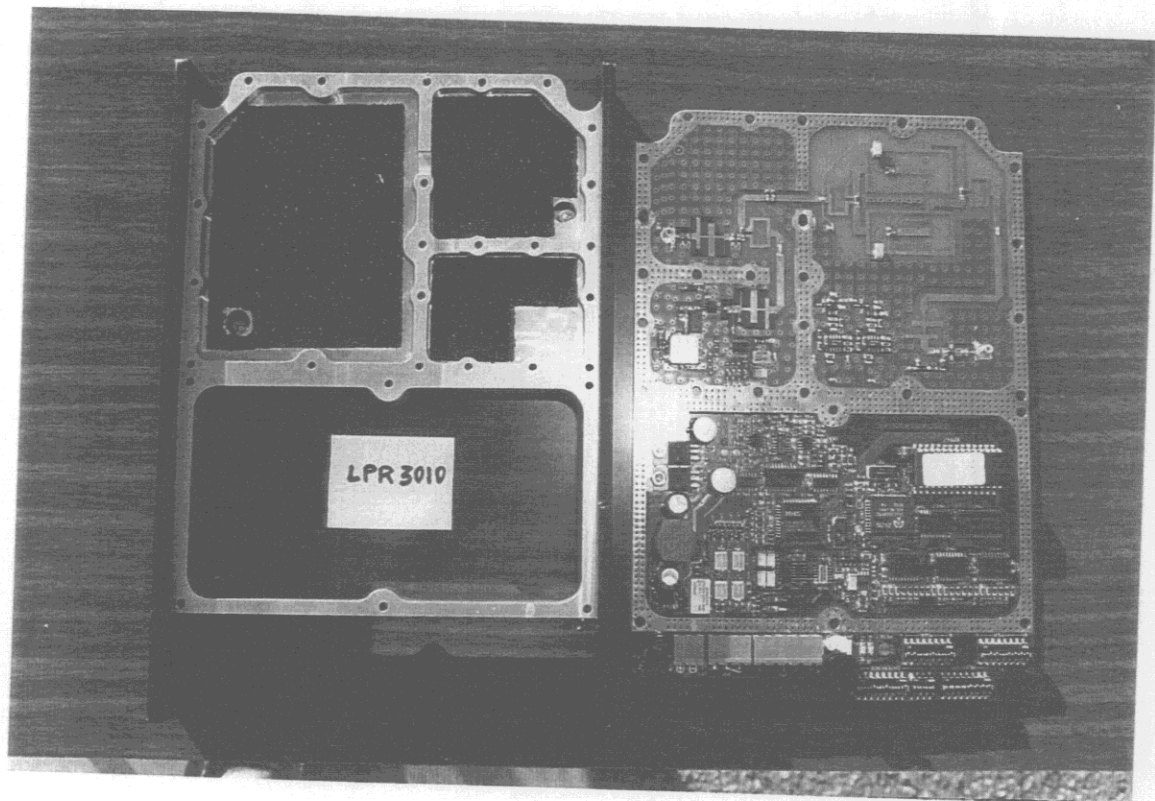


8-8 Inside reader LPR_3010, metallic frame removed

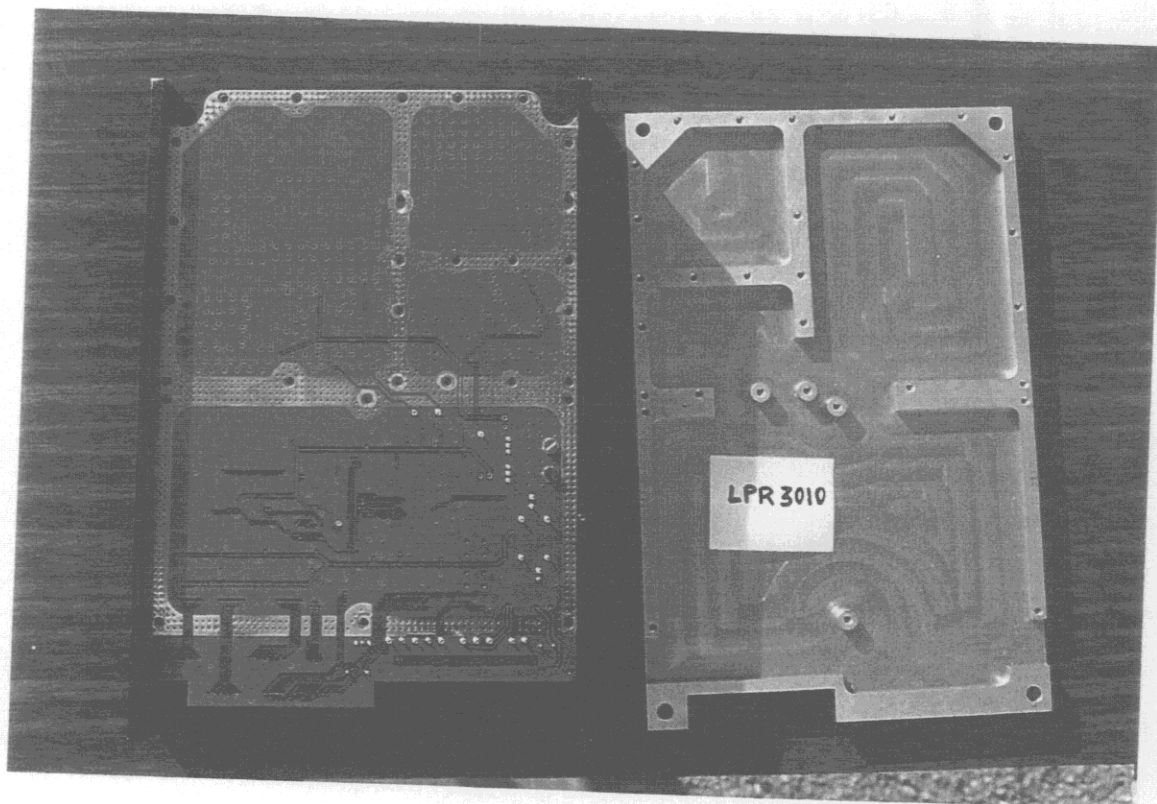

8-9 Alveolate mechanical system

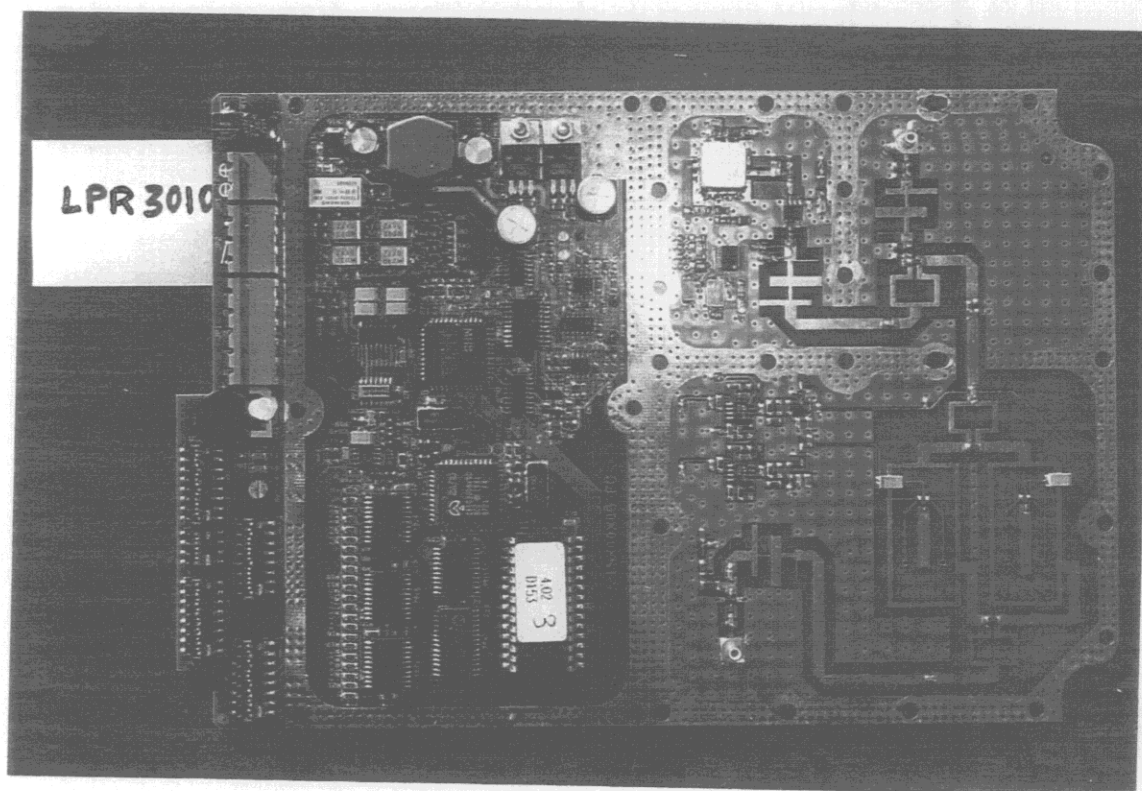

8-10 LPR_3010 component side board

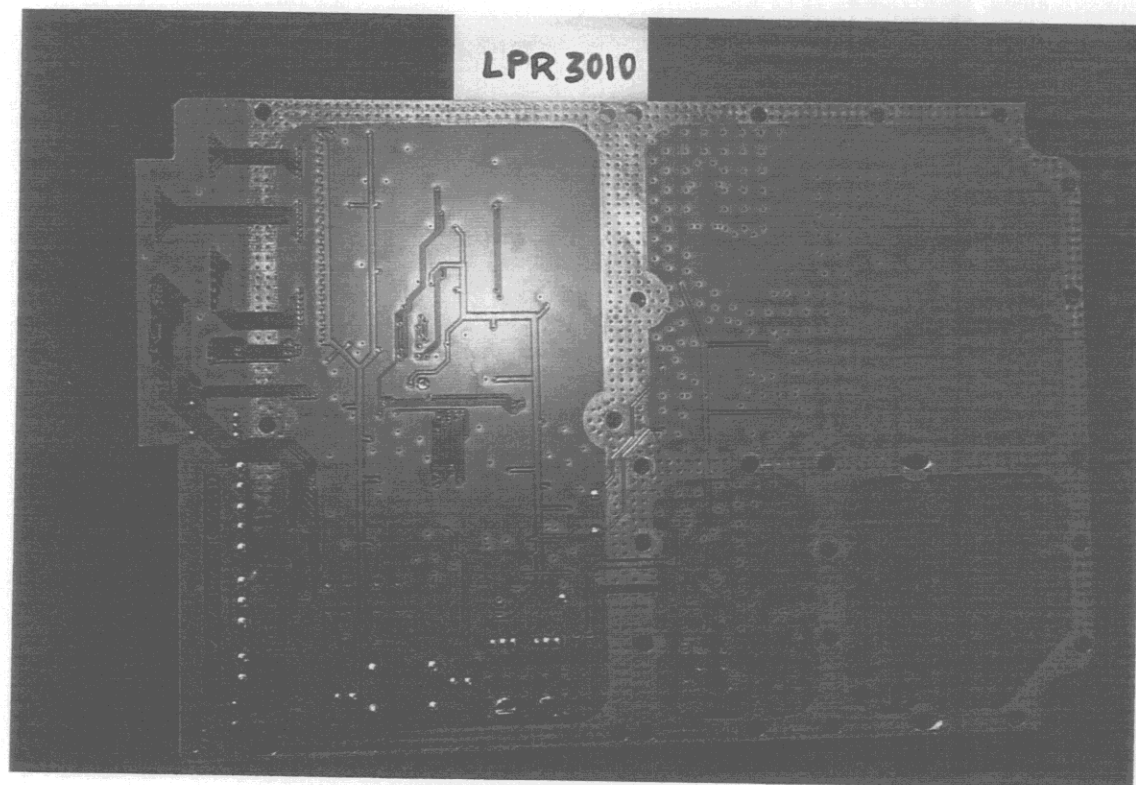

8-11 LPR_3010 foil side board