




Designed for operating in USA & Canada only.
When this product is used in areas other than the USA & Canada,
we cannot guarantee the product quality and performance.

Model
Modèle
Modelo

UR 18DSAL

Cordless Radio
Radio de chantier sans fil
Radio de obra a batería

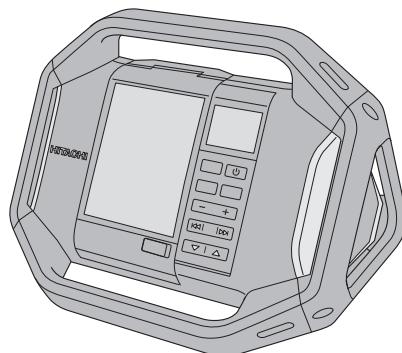

Bluetooth®

SAFETY INSTRUCTIONS AND INSTRUCTION MANUAL

WARNING

IMPROPER OR UNSAFE use of this radio can result in death or serious bodily injury!
This manual contains important information about product safety. Please read and understand
this manual BEFORE operating the radio. Please keep this manual available for other users
and owners before they use the radio.
This manual should be stored in safe place.

INSTRUCTIONS DE SECURITE ET MODE D'EMPLOI

AVERTISSEMENT

L'utilisation **INAPPROPRIÉE OU DANGEREUSE** de cette radio pourrait résulter en de
sérieuses blessures corporelles ou la mort !
Ce manuel contient des informations importantes de sécurité concernant ce produit. Merci de
bien lire et comprendre ce manuel AVANT de faire fonctionner la radio. Merci de garder ce
manuel disponible pour d'autres utilisateurs ou propriétaires avant qu'ils n'utilisent la radio.
Ce manuel doit être rangé dans un endroit sûr.

INSTRUCCIONES DE SEGURIDAD Y MANUAL DE INSTRUCCIONES

ADVERTENCIA

¡EL USO INADECUADO O INSEGURO de este radio puede resultar en heridas serias o la
muerte!
Este manual contiene información importante sobre la seguridad del producto. Por favor lea y
entienda este manual ANTES de operar el radio. Por favor mantenga este manual disponible
para todos los usuarios y dueños antes de usar el radio.
Este manual debe ser guardado en un lugar seguro.

Hitachi Koki

CONTENTS	
English	Page
IMPORTANT SAFETY INSTRUCTIONS	3
IMPORTANT SAFETY INFORMATION.....	3
MEANINGS OF SIGNAL WORDS AND SYMBOLS	3
SAFETY.....	4
GENERAL SAFETY RULES	5
SPECIFIC SAFETY RULES.....	5
IMPORTANT SAFETY INSTRUCTIONS FOR BATTERY CHARGER.....	6
IMPORTANT SAFETY INSTRUCTIONS FOR USE OF THE BATTERY AND BATTERY CHARGER	6
PROTECTING YOUR HEARING.....	8
PRECAUTIONS WHEN CONNECTING TO EXTERNAL EQUIPMENT.....	8
DISPOSAL OF THE EXHAUSTED BATTERY	8
REGULATORY GUIDELINES.....	8
FUNCTIONAL DESCRIPTION	10
NAME OF PARTS	10
SPECIFICATIONS	12
MAIN FUNCTIONS.....	12
ASSEMBLY AND OPERATION.....	13
BEFORE USE.....	13
LISTENING TO THE RADIO.....	15
LISTENING TO THE PORTABLE MUSIC PLAYER.....	16
CONNECTING WITH BLUETOOTH DEVICES.....	17
USING THE TIMER FUNCTION.....	17
CHARGING A SMARTPHONE OR CELL PHONE.....	19
MAINTENANCE AND INSPECTION	20
ACCESSORIES	21
STANDARD ACCESSORIES	21
OPTIONAL ACCESSORIES.....	21
PARTS LIST	64

TABLE DES MATIÈRES	
Français	Page
IMPORTANTES INSTRUCTIONS DE SÉCURITÉ	22
INFORMATIONS IMPORTANTES DE SÉCURITÉ	22
SIGNIFICATION DES MOTS D'AVERTISSEMENT ET SYMBOLES.....	22
SECURITE	23
REGLES GENERALE DE SECURITE	24
RÈGLES DE SÉCURITÉ SPÉCIFIQUES	25
CONSIGNES DE SÉCURITÉ IMPORATANTES POUR LE CHARGEUR DE BATTERIE.....	25
CONSIGNES DE SÉCURITÉ IMPORTANTES POUR L'UTILISATION DE LA BATTERIE ET DU CHARGEUR DE BATTERIE.....	26
PROTEGER VOTRE AUDITION	27
PRÉCAUTIONS À PRENDRE LORS DE LA CONNEXION À UN ÉQUIPEMENT EXTERNE	28
MISE AU REBUT D'UNE BATTERIE USÉE.....	28
DIRECTIVES RÉGLEMENTAIRES	28
DESCRIPTION FONCTIONNELLE	30
NOM DES PARTIES	30
CARACTERISTIQUES	32
FONCTIONS PRINCIPALES	32
ASSEMBLAGE ET FONCTIONNEMENT	33
AVANT UTILISATION.....	33
ÉCOUTER LA RADIO.....	35
ÉCOUTER SUR LE LECTEUR DE MUSIQUE PORTABLE	36
CONNEXION AVEC LES APPAREILS BLUETOOTH	37
UTILISATION DE LA FONCTION MINUTERIE	38
RECHARGER UN SMARTPHONE OU UN TÉLÉPHONE PORTABLE.....	39
ENTRETIEN ET INSPECTION	41
ACCESOIRES	42
ACCESOIRES STANDARD	42
ACCESOIRES EN OPTION	42
LISTE DES PIÈCES	64

ÍNDICE	
Español	Página
INSTRUCCIONES IMPORTANTES DE SEGURIDAD	43
INFORMACIÓN IMPORTANTE SOBRE SEGURIDAD.....	43
SIGNIFICADO DE LAS PALABRAS DE SEÑALIZACIÓN Y SÍMBOLOS	43
SEGURIDAD	44
NORMAS GENERALES DE SEGURIDAD.....	45
REGLAS ESPECÍFICAS DE SEGURIDAD.....	45
INSTRUCCIONES IMPORTANTES DE SEGURIDAD PARA EL CARGADOR DE BATERÍAS.....	46
INSTRUCCIONES IMPORTANTES DE SEGURIDAD PARA LA BATERÍA Y EL CARGADOR DE BATERÍAS	47
PROTEGER LA AUDICIÓN	48
PRECAUCIONES AL CONECTARLA A EQUIPO EXTERNO.....	48
ELIMINACIÓN DE LAS BATERÍAS AGOTADAS.....	49
PAUTAS REGLAMENTARIAS	49
DESCRIPCIÓN FUNCIONAL	50
NOMENCLATURA	50
ESPECIFICACIONES	52
FUNCIONES PRINCIPALES	52
MONTAJE Y OPERACIÓN	53
ANTES DEL USO	53
ESCUCHAR LA RADIO	55
ESCUCHAR EL REPRODUCTOR DE MÚSICA PORTÁTIL	56
CONEXIÓN CON DISPOSITIVOS BLUETOOTH	57
UTILIZACIÓN DE LA FUNCIÓN DE TEMPORIZADOR	58
CARGAR UN SMARTPHONE O TELÉFONO MÓVIL	59
MANTENIMIENTO E INSPECCIÓN	61
ACCESORIOS	62
ACCESORIOS ESTÁNDAR	62
ACCESORIOS OPCIONALES.....	62
LISTA DE PIEZAS	64

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10) Only use attachments/accessories specified by the manufacturer.
- 11) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

IMPORTANT SAFETY INFORMATION

Read and understand all of the safety precautions, warnings and operating instructions in the Instruction Manual before operating or maintaining this tool.

Most accidents that result from tool operation and maintenance are caused by the failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing a potentially hazardous situation before it occurs, and by observing appropriate safety procedures.

Basic safety precautions are outlined in the "SAFETY" section of this Instruction Manual and in the sections which contain the operation and maintenance instructions.

Hazards that must be avoided to prevent bodily injury or machine damage are identified by WARNINGS on the tool and in this Instruction Manual.

NEVER use this tool in a manner that has not been specifically recommended by HITACHI.

MEANINGS OF SIGNAL WORDS AND SYMBOLS

WARNING indicates a potentially hazardous situations which, if ignored, could result in death or serious injury.

CAUTION indicates a potentially hazardous situations which, if not avoided, may result in minor or moderate injury, or may cause machine damage.

NOTE emphasizes essential information.



This mark is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This mark is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

SAFETY

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE)

⚠ WARNING

To reduce the risk of fire, electric shock, or injury:

1. Use indoors only.
2. Use only the specified power supply voltage.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual.
5. Use only manufacturer's recommended attachments.
6. Do not handle appliance with wet hands.
7. Do not touch the power plug (AC adapter) with wet hands.
8. Do not use the radio in the bathroom or shower.
9. To reduce the risk of fire or electric shock, do not expose this radio to rain or moisture.
10. Radio shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on radio.
11. Do not operate radio in explosive atmospheres, such as in the presence of flammable or combustible liquids, gasses or dust.
12. Never use when the temperature is below 23°F (-5°C) or above 104°F (40°C).
13. Do not put any object into openings.
14. Avoid damaging the AC adapter cord.
Do not modify, forcibly bend, twist or pull the cord, place heavy objects on it or place it near heating appliances.
15. When not in use, remove the power plug (AC adapter) from the electric socket and from the radio. Failure to do so may lead to electric shock or fire.
16. Remove the AC adapter from the outlet during thunderstorms.
17. Do not touch the FM antenna during thunderstorms.

18. Do not disassemble or modify the radio.

Inspections and repairs should be performed by the store where purchased or by a Hitachi power tool service center.

19. Insert the power plug (AC adapter) securely as far as it will go.

Dust or dirt between the power plug and the electric socket may lead to fire. Remove the power plug periodically and wipe off any dust or dirt with a dry cloth.

20. Do not let any unspecified objects or water get inside the radio body.

With the exception of the AC adapter and the rechargeable battery, if any metal or flammable object or water gets inside the back door, it may lead to electric shock or fire.

Take care to prevent iron powder from the bass reflex speakers, dust or water getting into the radio.

21. Do not sit or stand on the radio.

22. Do not place the radio on an unstable surface or in a high place. Do not hang the radio from the handle or guard bar.

23. When no slide battery is loaded, attach the slide terminal cover to the terminal to prevent cuts and other injuries that may result from touching the terminal area.

24. Handle the backup batteries with care.

● Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

● Incorrect handling of the batteries may result in rupture or leakage, leading to fire, injury or pollution of the surrounding area. Be sure to observe the following precautions.

- Use only the specified batteries
- Do not heat or disassemble the batteries
- Do not throw the batteries into fire or water
- Do not charge the batteries

- Make sure the batteries are correctly oriented and avoid short-circuiting
- Do not reuse batteries or use different types of battery
- Remove the batteries when the radio is not in use

In the event of leakage from the batteries, wipe the battery case clean.

Should any battery fluid get on your body, wash it off carefully.

25. If  is displayed when you turn the power on with the rechargeable battery inserted, the battery power is low.

Power the radio from the AC adapter or insert a charged battery.

c) When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

d) Under abusive conditions, liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.

Liquid ejected from the battery may cause irritation or burns.

4) Service

a) Have your radio serviced by a qualified repair person using only identical replacement parts.

This will ensure that the safety of the radio is maintained.

b) If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

GENERAL SAFETY RULES

SAVE THESE INSTRUCTIONS

1) Work area safety

- a) Keep work area clean and well lit.**
Cluttered or dark areas invite accidents.
- b) Do not operate radio in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**

2) Electrical safety

- a) Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.**
There is an increased risk of electric shock if your body is earthed or grounded.
- b) Do not expose radio to wet conditions.**
Water entering a radio will increase the risk of electric shock.

3) Battery powered radio use and care

- a) Recharge only with the charger specified by the manufacturer.**
A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) Use radio only with specifically designated battery packs.**
Use of any other battery packs may create a risk of injury and fire.

SPECIFIC SAFETY RULES

1. Do not use in locations where inflammable materials such as lacquer, paint, benzene, thinner or gasoline are present.
Explosion or fires might result.

2. If you notice the unit is operating poorly or making abnormal noises, immediately stop using and shut off the power switch. Request an inspection and repair from the dealer where you purchased the unit or a Hitachi Authorized Service Center.
Continuing to use while operating abnormally might cause injuries.

3. If the unit is mistakenly dropped or strikes another object, make a thorough check of the unit for cracks, breakage or deformation, etc.
Injuries might occur if the unit has cracks, breakage or deformation.

4. Do not use near objects generating high heat such as stoves.

5. Handle radio correctly.

Operate the blower according to the instructions provided herein. Do not drop or throw the blower.

6. Keep all screws, bolts and covers tightly in place.

Keep all screws, bolts, and plates tightly mounted. Check their condition periodically.

7. NEVER use a radio which is defective or operating abnormally.

If the radio appears to be operating unusually, making strange noises, or otherwise appears defective, stop using it immediately and arrange for repairs by a Hitachi authorized service center.

8. Carefully handle radio.

Should a radio be dropped or struck against hard materials inadvertently, it may be deformed, cracked, or damaged.

9. Do not wipe plastic parts with solvent.

Solvents such as gasoline, thinner benzine, carbon tetrachloride, and alcohol may damage and crack plastic parts. Do not wipe them with such solvents.

Wipe plastic parts with a soft cloth lightly dampened with soapy water and dry thoroughly.

**IMPORTANT SAFETY INSTRUCTIONS
FOR BATTERY CHARGER**

⚠ WARNING

Death or serious bodily injury could result from improper or unsafe use of battery chargers. To avoid these risks, follow these basic safety instructions:

READ ALL INSTRUCTIONS

1. This manual contains important safety and operating instructions for battery charger Model UC18YKSL.

2. Before using battery charger, read all instructions and cautionary markings on (1) battery charger, (2) battery, and (3) product using battery.

3. Plug of battery charger must match the outlet.

Never modify the plug in any way.

Unmodified plugs and matching outlets will reduce risk of electric shock.

4. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the battery charger. Keep cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

5. To reduce risk of injury, charge HITACHI rechargeable battery type, BSL1830. Other type of batteries may burst causing personal injury and damage.

6. When charging slide battery BSL1830, always use charger UC18YKSL.

7. Do not expose battery charger to rain or snow.

8. Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.

9. To reduce risk of damage to electric plug and cord, pull by plug when disconnecting battery charger.

10. Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.

11. Do not operate battery charger with damaged cord or plug-replace them immediately.

12. Do not operate battery charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified serviceman.

13. Do not disassemble battery charger; take it to a qualified serviceman when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.

14. To reduce risk of electric shock, unplug charger from receptacle before attempting any maintenance or cleaning. Removing the battery will not reduce this risk.

**IMPORTANT SAFETY INSTRUCTIONS
FOR USE OF THE BATTERY AND
BATTERY CHARGER**

You must charge the battery before you can use the radio. Before using the model UC18YKSL, be sure to read all instructions and cautionary statements on it, the battery and in this manual.

⚠ CAUTION

**USE ONLY HITACHI BATTERY TYPE,
BSL1830. OTHER TYPES OF BATTERIES MAY
BURST AND CAUSE INJURY!**

**Danger of explosion if battery is incorrectly
replaced.**

**Replace only with the same or equivalent
type.**

Follow these instructions to avoid the risk of injury:

⚠ WARNING

Improper use of the battery or battery charger can lead to serious injury. To avoid these injuries:

1. **NEVER** disassemble the battery.
2. **NEVER** incinerate the battery, even if it is damaged or is completely worn out. The battery can explode in a fire.
3. **NEVER** short-circuit the battery.
4. **NEVER** insert any objects into the battery charger's air vents. Electric shock or damage to the battery charger may result.
5. **NEVER** charge outdoors. Keep the battery away from direct sunlight and use only where there is low humidity and good ventilation.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
6. **NEVER** charge when the temperature is below 32°F (0°C) or above 104°F (40°C).
7. **NEVER** insert foreign objects into the hole for the battery or the battery charger.
8. **NEVER** store the battery or battery charger in places where the temperature may reach or exceed 104°F (40°C).
9. **ALWAYS** operate charger on standard household electrical power (120 volts). Using the charger on any other voltage may overheat and damage the charger.
10. **ALWAYS** wait at least 15 minutes between charges to avoid overheating the charger.
11. **ALWAYS** disconnect the power cord from its receptacle when the charger is not in use.
12. The manufacturer's specified charging instructions shall be included for secondary batteries. Primary batteries shall include instructions indicating that the batteries shall not be charged.

Furthermore, please heed the following warning and caution.

⚠ WARNING

In order to prevent any battery leakage, heat generation, smoke emission, explosion and ignition beforehand, please be sure to heed the following precautions.

1. Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.

2. Do not pierce battery with a sharp object such as a nail, strike with a hammer, step on, throw or subject the battery to severe physical shock.
3. Do not use an apparently damaged or deformed battery.
4. Do not use the battery in reverse polarity.
5. Do not connect directly to an electrical outlets or car cigarette lighter sockets.
6. Do not use the battery for a purpose other than those specified.
7. If the battery charging fails to complete even when a specified recharging time has elapsed, immediately stop further recharging.
8. Do not put or subject the battery to high temperatures or high pressure such as into a microwave oven, dryer, or high pressure container.
9. Keep away from fire immediately when leakage or foul odor are detected.
10. Do not use in a location where strong static electricity generates.
11. If there is battery leakage, foul odor, heat generated, discolored or deformed, or in any way appears abnormal during use, recharging or storage, immediately remove it from the equipment or battery charger, and stop use.
12. Caution-Risk of fire and burns.
The battery used in this device may present a risk of fire or chemical burn if mistreated. Do no disassemble, crush, heat above 104°F (40°C), or incinerate. Follow manufacturer's instructions. Replace battery with HITACHI battery type, BSL1830 only. Use of another battery may present a risk of fire or explosion.
13. Dispose of used battery promptly.
Keep away from children. Do not crush disassemble and do not dispose of in fire.

⚠ CAUTION

1. If liquid leaking from the battery gets into your eyes, do not rub your eyes and wash them well with fresh clean water such as tap water and contact a doctor immediately.
If left untreated, the liquid may cause eye-problems.
2. If liquid leaks onto your skin or clothes, wash well with clean water such as tap water immediately.
There is a possibility that this can cause skin irritation.

3. If you find rust, foul odor, overheating, discolor, deformation, and/or other irregularities when using the battery for the first time, do not use and return it to your supplier or vendor.

PROTECTING YOUR HEARING

Continuous exposure to loud noise may result in permanent hearing loss. The louder the volume, the shorter the time in which hearing loss may occur. If you listen to large volume sound over a long period of time, your ears will become accustomed to it. This creates the illusion that the volume level is appropriate, despite the fact that it may be damaging your hearing.

Observe the following to prevent hearing loss.

⚠ CAUTION

1. **Make sure you give your ears a rest by taking regular breaks and not listening for long periods of time.**

Even when set at safe volume levels, listening continuously over long periods of time may cause hearing loss.

2. **Be careful not to increase the volume as your hearing adapts to the sound output.**

Beware of being accustomed to a certain volume level. Adjust the volume to a safe level before your ears become accustomed to loud volumes.

3. **If your ears begin to ring, if you feel any discomfort, or if conversation seems faint or indistinct, discontinue listening to music and have your ears examined by a doctor.**

PRECAUTIONS WHEN CONNECTING TO EXTERNAL EQUIPMENT

Unexpected problems may result in the loss or corruption of data stored in smartphones and other peripheral equipment connected to the radio. With this possibility in mind, a backup of the data should always be made in advance.

Note that Hitachi Koki cannot be held responsible for the corruption or loss of data stored within smartphones and other peripheral equipment connected to the radio, nor any damage to the equipment itself.

DISPOSAL OF THE EXHAUSTED BATTERY

⚠ WARNING

Do not dispose of the exhausted battery. The battery must explode if it is incinerated. The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

REGULATORY GUIDELINES

— For the USA — FEDERAL COMMUNICATIONS COMMISSION

⚠ WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

— For Canada —

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

**SAVE THESE INSTRUCTIONS
AND
MAKE THEM AVAILABLE TO OTHER USERS
AND
OWNERS OF THIS RADIO!**

FUNCTIONAL DESCRIPTION



NOTE


The information contained in this Instruction Manual is designed to assist you in the safe operation and maintenance of the radio.

NEVER operate, or attempt any maintenance on the radio unless you have first read and understood all safety instructions contained in this manual.

Some illustrations in this Instruction Manual may show details or attachments that differ from those on your own radio.

NAME OF PARTS

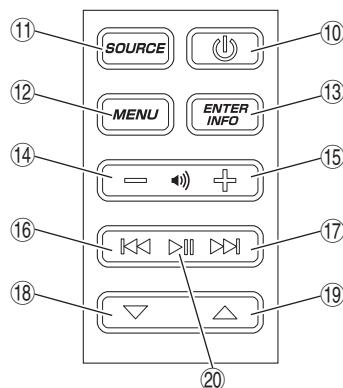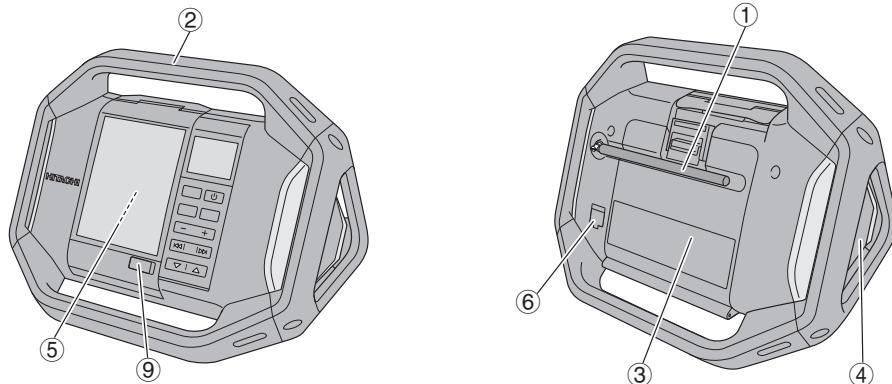

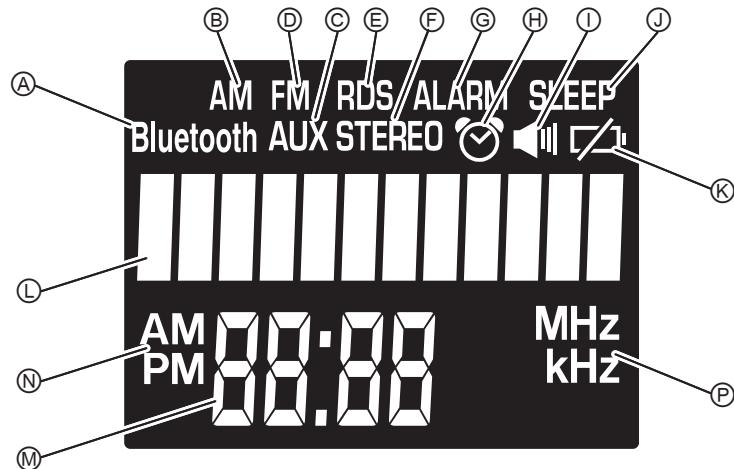

①	FM antenna	⑬	Enter / Information button	⑭	RDS indicator
②	Handle	⑭	Volume button (-)	⑮	Stereo indicator
③	Rear cover	⑮	Volume button (+)	⑯	Alarm indicator
④	Speaker	⑯	Search button (-)	⑰	Buzzer alarm indicator
⑤	Storage case for external devices	⑰	Search button (+)	⑱	Radio ON alarm indicator
⑥	AC adapter port	⑱	Select button (-)	⑲	Sleep timer indicator
⑦	AUX input port	⑲	Select button (+)	⑳	Battery exhausted indicator
⑧	USB charging port	⑳	Play / Stop button (for bluetooth mode)	Ⓐ	Information indicator
⑨	Cable access hole	Ⓐ	Bluetooth indicator	Ⓜ	Clock
⑩	Power button	Ⓑ	AM broadcast indicator	Ⓝ	AM / PM indicator
⑪	Source select button	Ⓒ	AUX indicator	Ⓟ	MHz / KHz indicator
⑫	Menu button	Ⓓ	FM broadcast indicator		

SPECIFICATIONS

Model	UR18DSAL	
Frequency band	FM: 87.5 to 108 MHz AM: 530 to 1710 KHz	
Antenna	FM: Rubber antenna AM: Ferrite bar antenna (built-in)	
Speaker	3 – 17/32" (90 mm) (8 Ω) × 2	
Input terminal	AUX IN (3.5 mm dia.)	
Output terminal	USB Charging jack (5 V 1 A)	
Maximum available output	AC adapter: 5 W × 2 18 V: 7 W × 2	
Power supply	Slide battery: DC 18 V Backup batteries: DC 3 V, two AA batteries Household power supply: AC 120 V (using provided AC adapter)	
Bluetooth	Bluetooth Ver. 2.1 + EDR Profile: A2DP (Advanced Audio Distribution Profile) AVRCP (AV Remote Control Profile) Send/receive Sensitivity: Class 2	
Exterior dimensions Length × width × height (with antenna retracted)	14 – 13/32" × 11 – 15/16" × 10 – 9/32" (366 mm × 303 mm × 261 mm)	
Weight	7.5 lbs. (3.4 kg)	
Standard accessories	AC adapter (DC 12 V 1.2 A), two AA batteries	
Usable batteries (Optional accessories)	Model	BSL1830 (Slide battery)
	Type	Lithium – ion battery
	Voltage	DC 18V
	Charging & discharging frequency	about 1,300
Usable charger (Optional accessories)	Model: UC18YKSL	

NOTE**Rechargeable battery**

Do not use any battery other than an 18V rechargeable battery with this radio.

SERVICE TIME PER BATTERY CHARGE

Battery capacity	Service time*
3.0 Ah	Approx. 11 hours

* The service time is approximate (at 0.05W × 2 output, FM Radio). It varies depending on the type of battery, charging condition and conditions of use.

MAIN FUNCTIONS

- Playback of Bluetooth devices
- Manual/Auto select
- Save (Memory) (10 AM + 10 FM stations)
- Radio On/Off/Alarm
- Dock for playing audio from smartphones and portable audio players.
- Smartphone and cell phone recharging
- Compatibility with Hitachi power tool rechargeable battery and AC adapter

ASSEMBLY AND OPERATION

BEFORE USE

Inserting the backup batteries

Time settings and radio station frequencies can be saved by installing batteries in the unit.

1. To access the storage box for the backup batteries, unlatch the tab and open the rear cover. (Fig. 1)

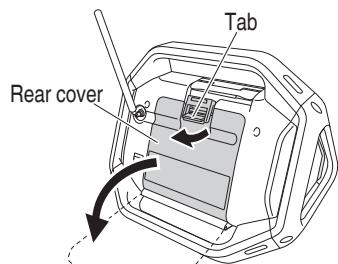


Fig. 1

2. Open the backup battery storage box and insert the two AA batteries (included) into the storage box in the direction indicated. (Fig. 2)

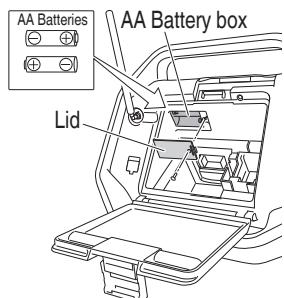


Fig. 2

⚠ CAUTION

- Make sure that the batteries are correctly oriented.
- Replace all the batteries at the same time. Do not use old batteries and new batteries at the same time.
- Do not discard the batteries with household garbage or throw them into fire.

AC adapter installation

Power can be supplied by plugging the AC adapter (included) into a standard household outlet.

Pull back the rubber cover and connect the AC adapter to the AC adapter port. (Fig. 3)

Next, plug the AC adapter into an electrical outlet.

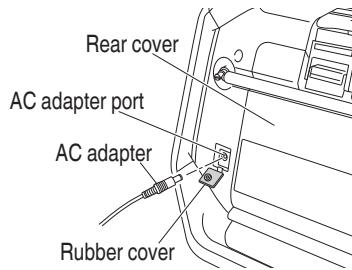


Fig. 3

NOTE

- When used together with the batteries, the AC adapter is the main power source and no battery power is consumed.
- When used together with the AC adapter, the batteries will not recharge as this device has no recharge function.

Storing the AC adapter

The AC adapter can be stored in the compartment behind the rear cover. (Fig. 4)

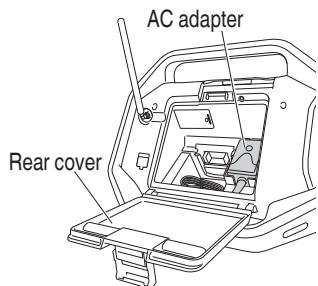


Fig. 4

Loading the rechargeable battery

⚠ CAUTION

When no slide battery is loaded, attach the slide terminal cover to the terminal to prevent cuts and other injuries that may result from touching the terminal area.

NOTE

- When inserting the battery, do not use unnecessary force. If the battery does not go in easily, it is not being inserted correctly. Check that the battery is correctly oriented and that no foreign object has been trapped.
- The radio has no charging function. Using the AC adapter and rechargeable battery simultaneously will not charge the battery. If  is displayed when you turn the power on with the rechargeable battery inserted, the battery power is low. Power the radio from the AC adapter or insert a charged battery.

Loading a slide battery (Fig. 5)

Match the battery with the grooves in the radio body and insert the battery as far as it will go.

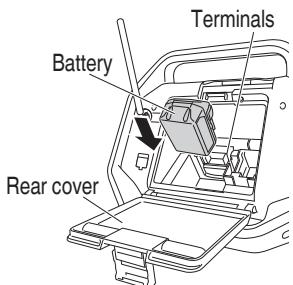


Fig. 5

Changing the date display

The following selections are available for date display.

YYYY/MM/DD (Year/Month/Day)
MM/DD/YYYY (Month/Day/Year)
DD/MM/YYYY (Day/Month/Year)

1. Press the Menu button.



2. Press the Select button and display "DATE DISP".



3. Press the Enter / Information button.



4. Press the Select button and display the date display selection of your choice.



5. Press the Enter / Information button.



Set the date

Using the control panel, follow the steps below to set up the date.

1. Press the Menu button.



2. Press the Select button and display "DATE ADJ".



3. Press the Enter / Information button.



4. Press the Select button and adjust "year" digits.



5. Press the Enter / Information button.



6. Press the Select button and adjust "month" digits.



7. Press the Enter / Information button.



8. Press the Select button and adjust "day" digits.



9. Press the Enter / Information button.



Set the time

Using the control panel, follow the steps below to set up the time.

1. Press the Menu button.



2. Press the Select button and display "CLOCK ADJ".



CLOCK ADJ

3. Press the Enter / Information button.



4. Press the Select button and adjust "hour" digits.



12 : 00

5. Press the Enter / Information button.



6. Press the Select button and adjust "minute" digits.



12 : 55

7. Press the Enter / Information button.



8. Press the Select button and select "12H" or "24H".



12H 24H


9. Press the Enter / Information button.

**LISTENING TO THE RADIO****Selecting FM or AM bandwidth**

 1. Power ON.



2. Press the Source select button and select the radio's bandwidth (FM/AM).




AM

FM

Selecting stations**Auto station selection**

 A long press of the Search button will automatically scan and search clear station broadcast frequencies. To select the next station broadcast, long press the Search button again.



(Long Press)

Manual station selection

Press the Search button to change frequencies and select a station.

**Preset station selection**

Press the Select button to quickly switch between preset stations.



At the time of purchase, there are no preset stations. Follow the steps below to register preset stations.

<Manual preset registration>

1. Tune into a radio station of your choice and press the Menu button.



2. Press the Select button and display "PRESET".



PRESET

3. Press the Enter / Information button.



4. Press the Select button and select a preset number from 0 to 9 for registering the station.



PRESET 2

5. Press the Enter / Information button to register the station.

**<Auto preset registration>**

This feature allows the automatic registration of available radio stations in the area of use.
(Maximum of 10 stations)

1. Press the Menu button.



2. Press the Select button and display "AUTO SCAN".



AUTO SCAN

3. Press the Enter / Information button to begin auto preset registration of available radio stations.

**NOTE**

- A broadcasting radio station will not be registered if its frequency is weak.
- Depending on location of use, non-radio signals such as noise may be registered.
- See page 19 when recharging with USB in "FM" mode.

For better reception

FM broadcasts

Adjust reception by changing the facing and angle of the antenna.

"STEREO" will be displayed when receiving a stereo broadcast.

Switching to monaural reception can reduce noise.

<Switching to monaural reception>

1. Press the Menu button.



2. Press the Select button and display "STEREO".



STEREO

3. Press the Enter / Information button.



4. Press the Select button and display "OFF".



OFF

5. Press the Enter / Information button to complete setup.



AM broadcasts

Move the device and face it in a direction in which the reception is best.

<Volume adjustment>

Use the Volume button to adjust the volume from 0 to 30.



LISTENING TO THE PORTABLE MUSIC PLAYER

Audio can be played back from smartphones, portable music players and other external devices.

⚠ CAUTION

Make sure to lower the volume output of the player before playback.

NOTE

There are two types of connector cable, straight type and L type.

Use an L type cable when connecting or storing large external devices.

1. Open the external device storage area

Switch the radio's power OFF and open the front cover. (Fig. 6)

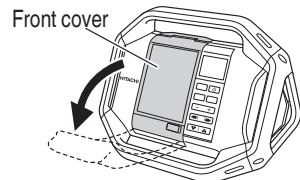


Fig. 6

2. Connect an external device

Using a commercially available stereo mini-plug connector cable (ø3.5 mm), connect the radio's AUX input port to the audio output port of the external device. (Fig. 7)

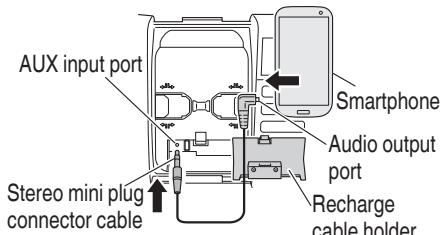


Fig. 7

3. Secure the external device

The right and left holders can be moved to the right or left by pinching the top and bottom of each holder.

Secure the external device between the two holders. (Fig. 8)

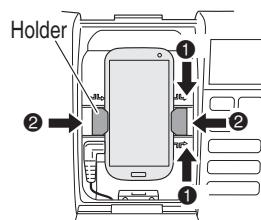


Fig. 8

4. Playback

 
With the radio's power switched ON, press the Source select button and display "AUX".



AUX

Make sure to lower the volume output of the external device before music playback.

Volume can be adjusted through the radio.



Close the front cover after selecting tracks and adjusting volume.

NOTE

You may be unable to raise the volume level if the volume level of the external device is too low.

NOTE

- When connecting a smartphone, please be aware that the ringtones of incoming calls for some models are not output to speaker.
- External devices may be damaged if used in locations exposed to the sun or hot temperatures.
- See page 19 when recharging with USB in "AUX" mode.

CONNECTING WITH BLUETOOTH DEVICES

If smartphones, portable music players and other devices are Bluetooth compatible, audio can be output from this product via Bluetooth communication.

1. Pairing (Registering devices)

Pairing is required for Bluetooth communication. Set your Bluetooth device to pairing mode. (For instructions on pairing, see the manual for the Bluetooth device to be used.)

2. Set the radio for pairing mode

Press the Source select button and display "Bluetooth".



Long press the Play / Stop button (located between the Search buttons) until the displayed "Bluetooth" is flashing.



Select "HITACHI_UR18DSAL" on your Bluetooth device's list of connected devices to complete the pairing.

3. Input pass key

Some Bluetooth devices may require pass key input when connecting.

If this should be the case, input "0000".

Also, if connection authorization is requested, input "authorized".

Connection is successful once "CONNECTED" is displayed.



NOTE

- Once paired, connection will be automatically established the next time the devices are switched on. If the Bluetooth connection is lost, re-pair the devices.
- No more than two devices can be paired simultaneously.
- Connection with all Bluetooth devices cannot be guaranteed. Before attempting connection, always check for compatibility.

4. Playback

Make sure to lower the volume output of the Bluetooth device before music playback. Volume can be adjusted through the radio. Use the Bluetooth device to select tracks. You can also select tracks with the radio's control buttons.



NOTE

- Some Bluetooth devices may not respond to the radio's control buttons.
- See page 19 when recharging with USB in "Bluetooth" mode.

USING THE TIMER FUNCTION

- The radio turns on/off at the preset time
- Use the radio as an alarm clock

Sleep Timer

Power can be set to automatically switch OFF after a certain amount of time has elapsed by using the sleep timer function.

1. Press the Menu button.



2. Press the Select button and display "SLEEP".



3. Press the Enter / Information button.



4. Press the Select button to adjust the time period to elapse (between "0 - 90" minutes) before the power is switched OFF.



5. Press the Enter / Information button.



- “SLEEP” will be displayed on the LCD.
- To check the remaining time, press the Menu button once again and select “SLEEP”.
- To cancel the sleep timer, set the time to switch OFF at 0 minutes.

 
Buzzer Alarm

The radio can be set up to activate a beeping alarm at a specific time.

- Press the Menu button.



- Press the Select button and display “BUZZER ALM”.




BUZZER ALM

- Press the Enter / Information button.



 - Press the Select button and display “ON”.




ON

- Press the Enter / Information button.



 - Press the Select button and adjust “hour” digits.



12 : 00

- Press the Enter / Information button.



- Press the Select button and adjust “minute” digits.



12 : 30

- Press the Enter / Information button.



- Press the Select button to set up repeat.



DAILY

- Press the Enter / Information button to complete setup.



will be displayed on the LCD.

- To cancel the alarm setting, go to “BUZZER ALM” once again and change the setting to “OFF”.
- The alarm sound will automatically switch off after 10 minutes. The sound can also be switched off by pressing any button.

NOTE

The volume of the buzzer alarm cannot be changed.

Radio Alarm

Using the radio ON alarm timer function, the radio can be set up to switch ON at a specific time to enjoy a station broadcast.

- Press the Menu button.



- Press the Select button and display “RADIO ALM”.



RADIO ALM

- Press the Enter / Information button.



- Press the Select button and display “ON”.

 


ON

- Press the Enter / Information button.



- Press the Select button and adjust “hour” digits.



12 : 00

- Press the Enter / Information button.



- Press the Select button and adjust “minute” digits.



12 : 55

- Press the Enter / Information button.



- Press the Select button to set up repeat.



DAILY

- Press the Enter / Information button.



Once	ONCE
Daily	DAILY
Weekdays only	WEEKDAY
Saturday and Sunday only	WEEKEND

DAILY

12. Select radio bandwidth.

Press the Select button to display "AM" or "FM".



13. Press the Enter / Information button.



14. Press the Select button to display a preset station.



To select a station by broadcast frequency, use the Search button.



15. Press the Enter / Information button to complete setup.



will be displayed on the LCD.

- To cancel the radio alarm setting, go to "RADIO ALM" once again and change the setting to "OFF".

NOTE

The radio's volume will be at the level when the radio was last switched OFF.

CHARGING A SMARTPHONE OR CELL PHONE

Devices such as a smartphone and mobile phone can be recharged by connecting the device to this radio.

The recharge function is only available for the "FM", "AUX" or "Bluetooth" mode. (Recharging cannot be done in "AM" mode.)

NOTE

- When recharging in "AUX" or "Bluetooth" mode, set the volume output at 20 or less. The radio is designed to deactivate USB output and disable the recharging of smartphones and mobile phones when the volume is at 21 or more. (For "FM" mode, USB recharging will continue even if the volume output is 21 or more.)
- On rare occasions, sound output may be interrupted or power could shutdown during USB recharging. If either should occur, lower the volume level or stop recharging with the USB.

- The radio is designed to deactivate USB output and disable the recharging of smartphones and mobile phones when the power level of the battery is low.

Should the aforementioned occur, recharge the battery or replace with a fully charged battery.

- If the voltage is low when the AC adapter is in use, the USB output may be cut off, discontinuing any recharging.

1. Using a commercially available USB connection/recharge cable, connect to the USB charging port located in the radio's storage case for external devices. (Fig. 9)

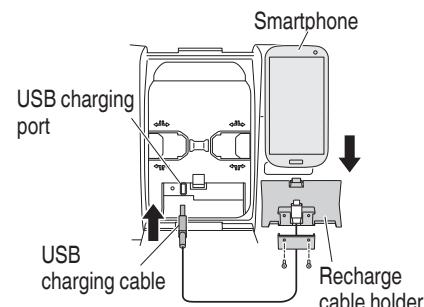


Fig. 9

2. Secure the smartphone with the holders and close the cover. (Fig. 8)
(See "Secure the external device" on page 16)

NOTE

- Use a fully charged battery when using a battery as this device's power source. You will not be able to recharge smartphones or mobile phones when the battery power level becomes low.
- The time required for charging varies in accordance with the smartphone or mobile phone being recharged.
- Do not use the recharge function for any devices other than a smartphone or mobile phone.
- The radio may not be able to recharge some smartphone or mobile phone models.

Two recharge cable holders, one for Android and the other for Apple (Lightning connector) are included. Select the holder that best suits your device.

- Should your device be too large for the radio's external device storage case, draw the cable through the cable access hole. (Fig. 10)

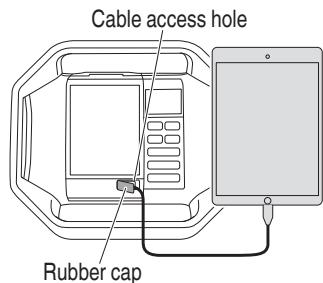


Fig. 10

NOTE

As the recharge cable holders are designed for standard size terminals, the holders may not be able to securely fasten certain terminals depending on the recharge cable used.

MAINTENANCE AND INSPECTION

⚠ WARNING: When not in use or during inspection and maintenance, be sure to remove the AC plug, rechargeable battery and backup batteries.

Inspecting the mounting screws

Regularly inspect all mounting screws and ensure that they are properly tightened. Should any of the screws be loose, retighten them immediately. Failure to do so could result in serious hazard.

Cleaning on the outside

When the radio is stained, wipe with a soft dry cloth or a cloth moistened with soapy water. Do not use chloric solvents, gasoline or paint thinner, for they melt plastics.

Storing the Radio

Do not store the radio in the following places.

- Within reach of or easily accessible to children
- In humid or dusty places
- In high temperature such as inside a car or exposed to direct sunlight
- In extremely cold places or directly exposed to cold draughts
- Where the temperature changes drastically
- Where it is exposed to smoke or steam such as near a cooking appliance or humidifier

Service parts list

⚠ CAUTION

Repair, modification and inspection of Hitachi Power Tools must be carried out by a Hitachi Authorized Service Center.

This Parts List will be helpful if presented with the tool to the Hitachi Authorized Service Center when requesting repair or other maintenance. In the operation and maintenance of power tools, the safety regulations and standards prescribed in each country must be observed.

MODIFICATIONS:

Hitachi Power Tools are constantly being improved and modified to incorporate the latest technological advancements.

Accordingly, some parts may be changed without prior notice.


ACCESSORIES

⚠ WARNING: **ALWAYS** use Only authorized HITACHI replacement parts and accessories. **NEVER** use replacement parts or accessories which are not intended for use with this tool. Contact HITACHI if you are not sure whether it is safe to use a particular replacement part or accessory with your tool.
The use of any other attachment or accessory can be dangerous and could cause injury or mechanical damage.

NOTE: Accessories are subject to change without any obligation on the part of the HITACHI.

STANDARD ACCESSOIRES

- AC adapter 1
- AA batteries 2
- Recharge cable holder (Code No. 338371) 1
(for Apple Lightning connector)
* Android holder is built into the main unit.

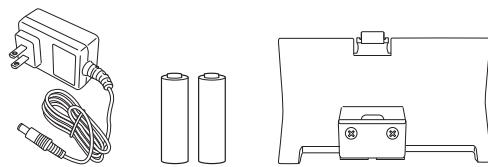


NOTE


Specifications are subject to change without any obligation on the part of the HITACHI.

OPTIONAL ACCESSORIES.....sold separately

1. Slide battery (BSL1830)
When charging slide battery (BSL1830), always use charger (UC18YKSL).





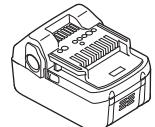






2. Charger (UC18YKSL)
Charging voltage: 14.4 V – 18 V

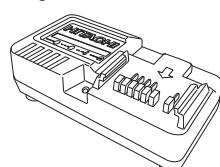

ITEM NO.	PART NAME	Q'TY	ITEM NO.	PART NAME	Q'TY
22	DC JACK BRACKET	1	47	NUT M3	8
23	DC JACK	1	48	HEX SOCKET HD. BOLT M4X8	6
24	CONNECTOR B	1	49	FRONT COVER SET	1
25	CABLE HOLDER (ANDROID)	1	50	USB EXIT COVER	1
26	SUPPORT	1	52	FRONT CABINET SET B	1
27	BRACKET SET	1	53	CONNECTOR D	1
28	SQUARE WASHER	7	71	MACHINE SCREW M5X30	6
29	TAPPING SCREW D2X6	6	72	NUT M5	12
30	LEFT LATCHING	1	73	DSAL FRAME (A) OUTER	3
31	LEFT LATCH MOUNTING	1	74	DSAL FRAME (A) INNER	3
32	LIGHT LATCHING	1	75	TAPPING SCREW D3X8	12
33	RIGHT LATCH MOUNTING	1	76	DSAL FRAME (B) OUTER	2
34	LATCHING PLATE	1	77	DSAL FRAME (B) INNER	2
35	PCB ASS'Y (USB)	1	78	MACHINE SCREW M5X20	6
36	PCB PLATE	1	501	AC ADAPTER	1
37	TAPPING SCREW D2x10	4	502	AA BATTERY	2
38	PCB ASS'Y (AUX)	1			
39	CABLE HOLDER (APPLE)	1			
40	PCB ASS'Y (A)	1			
41	SPEAKER RESISTNCE STRIP	2			
42	SPEAKER (DSAL)	2			
43	MACHINE SCREW M3X6	8			
44	TAPPING SCREW D2X7	2			
45	SIDE PLATE	2			
46	SPEAKER GRILL SET	2			

ITEM NO.	PART NAME	Q'TY	ITEM NO.	PART NAME	Q'TY
1	TAPPING SCREW (W/ FLANGE) D2.3X8	33	22	DC JACK BRACKET	1
2	ADAPTER STORAGE CASE	1	23	DC JACK	1
3	BATTERY COMPARTMENT SET	1	24	CONNECTOR B	1
4	MACHINE SCREW (W/FLANGE) M3X8	1	25	CABLE HOLDER (ANDROID)	1
5	CONNECTOR A	1	26	SUPPORT	1
6	TAPPING SCREW D4X12	7	27	BRACKET SET	1
7	RUBBER ANTENNA	1	28	SQUARE WASHER	7
8	TAPPING SCREW (W/FLANGE) D2X8	2	29	TAPPING SCREW D2X6	6
9	LOWER BACK COVER	1	30	LEFT LATCHING	1
10	UPPER BACK COVER	1	31	LEFT LATCH MOUNTING	1
10	BUTTON	1	32	LIGHT LATCHING	1
11	BACK COVER LATCHING B	1	33	RIGHT LATCH MOUNTING	1
12	NAME PLATE	1	34	LATCHING PLATE	1
13	SOCKET COVER	1	35	PCB ASS'Y (USB)	1
14	BACK CABINET SET	1	36	PCB PLATE	1
15	UPPER CONTACT BRAKET	1	37	TAPPING SCREW D2x10	4
16	BATTERY TERMINAL	1	38	PCB ASS'Y (AUX)	1
17	LOWER CONTACT BRACKET	1	39	CABLE HOLDER (APPLE)	1
18	INTERNAL WIRE (B)	1	40	PCB ASS'Y (A)	1
19	CONNECTOR C	2	41	SPEAKER RESISTNCE STRIP	2
20	BATTERY COVER	1	42	SPEAKER (DSAL)	2
21	SCREW M3	1	43	MACHINE SCREW M3X6	8
			44	TAPPING SCREW D2X7	2
			45	SIDE PLATE	2
			46	SPEAKER GRILL SET	2

  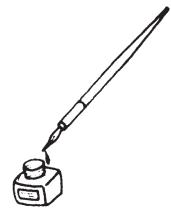  

    



Please contact HITACHI KOKI U.S.A. LTD. at 1-800-59-TOOLS (toll free), or HITACHI AUTHORIZED POWER TOOL SERVICE CENTER regarding COLLECTION.



Pour le RAMASSAGE, contacter HITACHI KOKI U.S.A. LTD. au 1-800-59-TOOLS (appel gratuit), ou UN SERVICE APRÈS-VENTE D'OUTILS ÉLECTRIQUE AGRÉÉ PAR HITACHI.



Con respecto a la RECOLECCIÓN de baterías, póngase en contacto con HITACHI KOKI U.S.A. LTD. número 1-800-59-TOOLS (llamada gratis), o con HITACHI AUTHORIZED POWER TOOL SERVICE CENTER.

Issued by

 **Hitachi Koki Co., Ltd.**

Shinagawa Intercity Tower A, 15-1, Konan 2-chome,
Minato-ku, Tokyo 108-6020, Japan

Distributed by

 **Hitachi Koki U.S.A., Ltd.**

PO Box 970
Braselton, GA 30517

 **Hitachi Koki Canada Corp.**

450 Export Blvd. Unit B,
Mississauga ON L5S 2A4

503
Code No. C99712961
Printed in China