


SWR-240U Receiver User Manual

■ System Requirements

Sejin USB Receiver required system below.

1. Hardware Requirements

The PC must have USB Port

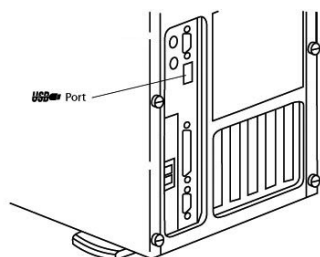

2. OS Requirements

Windows 98, Windows 2000, Windows XP, Windows Vista, Windows 7

■ How to use

1. Plug into the USB port of PC

■ Operating conditions

ELECTRICAL REQUIREMENTS	
Interface	USB
Operating voltage	DC 5 V
Operating current	100 mA (Max)

ENVIRONMENTAL REQUIREMENTS	
Operational ambient temperature and humidity	
Temperature	(0 ~ 40) °C
Humidity	85 % R.H. (None condensing)

Storage ambient temperature and humidity	
Temperature	(-20 ~ +60) °C
Humidity	95 % R.H. (Max)

■ Warning USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operated the equipment under FCC rules.