

FCC ID: GJM1010

USER MANUAL

JML 1010

BATTERY INSTALLATION

1. Slide out the battery case lid.
2. Insert a 9V 6F22 battery (not included) in proper polarity shown.
3. Slide in the battery case lid for secure.

OPERATION

1. Hold the desired function button (Twin fluorescent lamps, single fluorescent lamp, blinking light or 'OFF') on the transmitter to activate the function.
2. Red LED turns on to show signal has been transmitted.

REMARK

User can not modify this product.