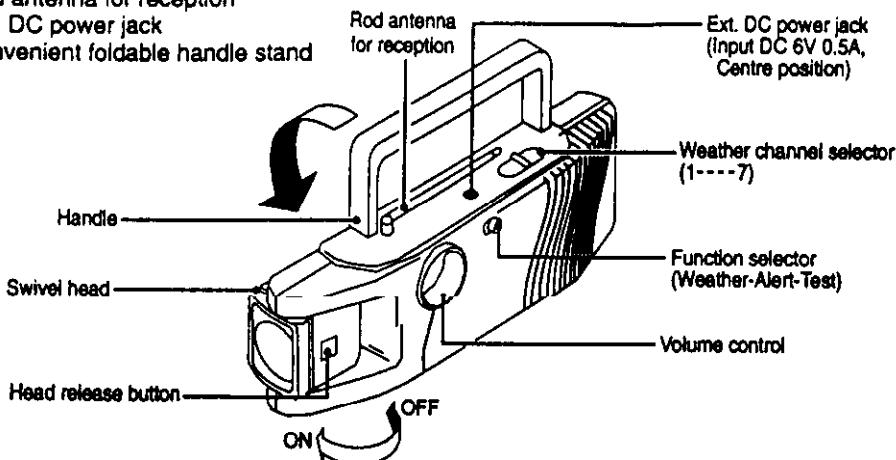


**FEATURE**

- Crystal controlled 7-channel weather radio with alert & test function
- Swivel head for spotlight
- Rod antenna for reception
- Ext. DC power jack
- Convenient foldable handle stand

**WEATHER FREQUENCY**

CHANNEL	1	2	3	4	5	6	7
FREQUENCY (MHz)	162.400	162.425	162.450	162.475	162.500	162.525	162.550

**BATTERIES INSTALLATION**

1. Slide out the battery cover and lift it up.
2. Insert four "AA" size (UM3) batteries, following the polarity mark on the case.
3. Slide back the battery cover. (batteries not included)

**OPERATION****SPOTLIGHT**

1. By turning the swivel head clockwise, the spotlight will turn on automatically.
2. Adjust the swivel head for your desired position.

**LISTENING TO WEATHER STATION AND WEATHER ALERT**

1. Set the volume control to the desired sound level.
2. Slide the function selector to "Weather" position.
3. Select your weather station by slide the "Weather channel" selector.
4. If you are ready to set the alert mode, slide the Function selector to "Test" position, listening to emergency siren sound, later slide the switch to "Alert" position, the unit will be into the alert mode, the LED light on to show the circuit is running.
5. To turn off the radio, turn the volume control counter-clockwise until you hear a "click" sound.

**BULB REPLACEMENT**

1. Press the head button to release the lock, then remove the head and reflector.
2. Pull out the burnt bulb and replace with a new one.

**MAINTENANCE**

1. Keep the lantern away from extreme temperature changes, excessive humidity, moisture, rain or other harsh environments.
2. Remove the batteries if the lantern is not in use for a long period.

068-1027

**REMARKS:**

User cannot modify this product.