



60-4385 Hummer H2

Thank you for purchasing your Hummer H2 from RadioShack. Be the first on your block to get behind the wheel of this big truck. It has double-spring suspension for a smooth ride, working headlights, and reaches speeds of up to 950 feet per minute. The Hummer H2 is appropriate for ages 8 and up.



what's included

Hummer truck transmitter user's guide

accessory

battery charger

 
Important: The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.



installing batteries

in the Hummer


1. Remove the battery compartment cover.
2. Insert one 7.2V battery pack and attach the battery pack's connector to the Hummer's connector.
3. Replace the cover.

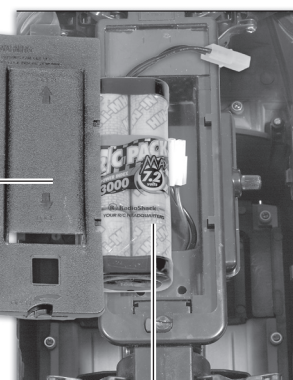

Charge the battery pack with a battery charger (not supplied), available at RadioShack.

in the transmitter

 1. Remove the battery compartment cover.
2. Insert one 9V battery in the compartment.
3. Replace the cover.

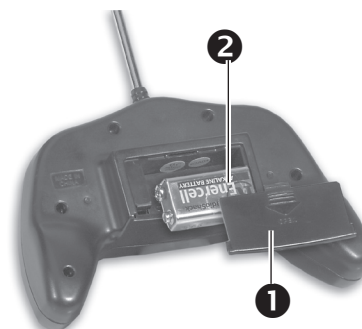

battery information

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Do not mix old and new batteries, or batteries with different capacities or different chemistries.
- If you do not plan to use the Hummer for a week or more, remove the batteries. Batteries can leak chemicals that can damage electronic parts.
- Be sure the battery pack's connectors and wires do not touch any of the Hummer's moving parts.
- Use only batteries of the recommended size and type, and the recommended battery pack.
- After charging the battery pack, disconnect it from the charger. Overcharging the battery pack might damage it.
- When you disconnect the battery pack from the charger, do not pull on the connector's wires. You might damage the battery pack.

driving your hummer

1. Fully extend the transmitter's antenna.
2. Turn on the transmitter and the Hummer. The Hummer's headlights turn on.
3. Use the transmitter's controls to drive your truck.

 
Push to drive forward.
Pull back to drive in reverse.
Release to stop.

Push left to steer left.
Push right to steer right.
Release to go straight.

4. If the Hummer does not drive straight, adjust its wheel alignment toward L if the Hummer pulls right, and toward R if it pulls left.

5. Slide the switch on the back of the Hummer to select two or four wheel steering.

6. When finished, turn off the transmitter and Hummer.

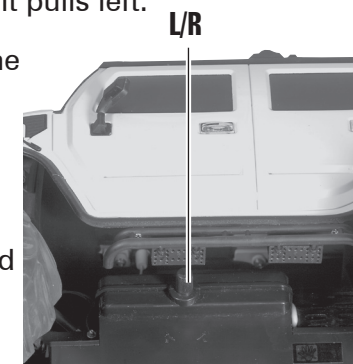

hints

- Driving your Hummer for long periods of time can generate high heat levels and cause wear and tear on the motor. To help keep heat levels down, when battery power dies, let the Hummer cool for 10 minutes before installing batteries.
- Do not touch the motor immediately after using the Hummer, as it may become hot during use.
- If the motor runs, but does not respond to the transmitter, move closer and try again.
- If someone uses a CB nearby, it might interfere with the control of your Hummer. If this happens, move away from the CB.
- You cannot operate your Hummer near devices with transmitters that use the same frequency (27 MHz or 49 MHz). Check the box to see which frequency you have.
- The Hummer might make a popping or grinding noise when you change gears. This is normal.

care

Keep the Hummer dry; if it gets wet, wipe it dry immediately. Use and store the Hummer only in room temperature environments. Handle the Hummer carefully; do not drop it. Keep the Hummer away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

service and repair

If your Hummer is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website (www.radioshack.com), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the Hummer's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

FCC Information

FCC Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product: Hummer H2
Model: 60-4385
Responsible Party: RadioShack
100 Throckmorton
Fort Worth, TX 76102
Phone: 817-415-3200

The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your Hummer.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

limited 90-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations
200 Taylor Street, 6th Floor, Fort Worth, TX 76102
04/04