

Nokia 8260

User Guide

Version 0.06

## Copyright information

Part No. 9352523, Issue 1, nn.nnnn

© 2000 Nokia Mobile Phones. All rights reserved.

Printed in Canada nn/2000.

Nokia, Nokia Connecting People, and the Original Accessories logos are trademarks of Nokia Corporation and/or its affiliates.

## FCC/Industry Canada Notice

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility.

This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

# Contents

|                                                     |    |
|-----------------------------------------------------|----|
| 1. For your safety.....                             | 1  |
| 2. Welcome .....                                    | 3  |
| Before you begin .....                              | 3  |
| Contacting Nokia .....                              | 4  |
| When you need to contact your service provider..... | 4  |
| 3. Prepare your phone for use .....                 | 5  |
| Install the battery .....                           | 5  |
| First, remove the back cover .....                  | 5  |
| Next, insert the battery .....                      | 5  |
| Last, replace the back cover.....                   | 5  |
| Charge the battery .....                            | 6  |
| When you need to remove the battery .....           | 6  |
| 4. Get to know your phone.....                      | 7  |
| Keys and screen.....                                | 7  |
| Navigation keys.....                                | 10 |
| Indicators and icons .....                          | 11 |
| 5. Make and answer calls .....                      | 14 |
| Make a call .....                                   | 14 |
| Answer a call.....                                  | 14 |
| Adjust the earpiece volume .....                    | 15 |

|    |                                                   |    |
|----|---------------------------------------------------|----|
|    | Redial the last-dialed number . . . . .           | 15 |
|    | Use caller ID . . . . .                           | 15 |
|    | Keep calls private . . . . .                      | 16 |
| 6. | Use phone menus . . . . .                         | 17 |
|    | Navigate menus . . . . .                          | 17 |
|    | Scroll through menus . . . . .                    | 17 |
|    | Use a shortcut . . . . .                          | 17 |
|    | Change menu levels . . . . .                      | 18 |
|    | Get help . . . . .                                | 18 |
|    | List of shortcuts . . . . .                       | 18 |
| 7. | Enter letters and numbers . . . . .               | 22 |
|    | Enter letters . . . . .                           | 22 |
|    | Edit names . . . . .                              | 23 |
|    | Change from capital (uppercase) letters . . . . . | 23 |
|    | Use punctuation and special characters . . . . .  | 23 |
|    | Enter numbers . . . . .                           | 24 |
|    | Use special characters in numbers . . . . .       | 24 |
|    | List of special characters . . . . .              | 24 |
| 8. | Use the phone book . . . . .                      | 25 |
|    | About the phone book . . . . .                    | 25 |
|    | Use phone book menus . . . . .                    | 25 |
|    | Change views . . . . .                            | 26 |
|    | Add names and numbers . . . . .                   | 27 |
|    | Change a stored telephone number . . . . .        | 27 |

|                                                    |           |
|----------------------------------------------------|-----------|
| Recall and redial numbers . . . . .                | 28        |
| Erase stored names and numbers . . . . .           | 29        |
| Erase the entire phone book. . . . .               | 30        |
| Check memory status . . . . .                      | 30        |
| <b>9. Use voice mail . . . . .</b>                 | <b>31</b> |
| When you have a message . . . . .                  | 31        |
| Set up your voice mailbox . . . . .                | 31        |
| Set greetings and passwords . . . . .              | 32        |
| Listen to your voice messages . . . . .            | 32        |
| <b>10. Work with the call log . . . . .</b>        | <b>33</b> |
| Check the call log . . . . .                       | 33        |
| Check missed calls . . . . .                       | 34        |
| Check previously dialed calls . . . . .            | 35        |
| Check received calls . . . . .                     | 35        |
| Clear call lists . . . . .                         | 35        |
| Check call timers. . . . .                         | 36        |
| Turn on a current call timer. . . . .              | 37        |
| Clear call timers . . . . .                        | 37        |
| <b>11. Use advanced calling features . . . . .</b> | <b>38</b> |
| Set in-call options. . . . .                       | 38        |
| Use call waiting. . . . .                          | 39        |
| Store the call waiting feature code. . . . .       | 39        |
| Manage calls . . . . .                             | 40        |
| Make a conference call . . . . .                   | 40        |

|                                                  |           |
|--------------------------------------------------|-----------|
| Use call forwarding . . . . .                    | 41        |
| Store the call forwarding feature code . . . . . | 41        |
| Activate call forwarding . . . . .               | 42        |
| Redial automatically . . . . .                   | 43        |
| Use a calling card . . . . .                     | 43        |
| Save calling card information (step 1) . . . . . | 43        |
| Save calling card information (step 2) . . . . . | 44        |
| Choose a calling card to use . . . . .           | 45        |
| Make a calling card call . . . . .               | 46        |
| Send your own number in caller ID . . . . .      | 46        |
| Store the Send Own Number feature code . . . . . | 46        |
| Select a phone system (NAM) . . . . .            | 47        |
| Select the NAM for your phone . . . . .          | 48        |
| Select digital or analog . . . . .               | 48        |
| Set touch tones . . . . .                        | 49        |
| Set manual touch tones . . . . .                 | 49        |
| Set touch tone length . . . . .                  | 49        |
| Store touch tone sequences (strings) . . . . .   | 50        |
| <b>12. Customize your phone . . . . .</b>        | <b>51</b> |
| What are profiles? . . . . .                     | 51        |
| Select a different profile . . . . .             | 51        |
| Customize a profile . . . . .                    | 52        |
| Set ringing options . . . . .                    | 53        |
| Set the ringing volume . . . . .                 | 54        |
| Set the ringing tone . . . . .                   | 54        |

|                                                            |    |
|------------------------------------------------------------|----|
| Set a vibrating alert . . . . .                            | 55 |
| Set keypad tones. . . . .                                  | 55 |
| Set warning and game tones. . . . .                        | 56 |
| Set the message alert tone . . . . .                       | 56 |
| Set your phone to answer automatically . . . . .           | 57 |
| Set the lights (car kit only) . . . . .                    | 57 |
| Rename profiles. . . . .                                   | 58 |
| Restore factory settings . . . . .                         | 58 |
| Set the display language . . . . .                         | 59 |
| Set and display the clock . . . . .                        | 59 |
| Set the clock . . . . .                                    | 59 |
| Display the clock. . . . .                                 | 60 |
| Select the time format. . . . .                            | 60 |
| Add a welcome note . . . . .                               | 60 |
| Use 1-touch dialing . . . . .                              | 61 |
| Assign a name or number to a 1-touch<br>dial key . . . . . | 61 |
| Change 1-touch dialing numbers . . . . .                   | 62 |
| Erase 1-touch dialing numbers . . . . .                    | 62 |
| Use emergency key 9 . . . . .                              | 62 |
| Activate the emergency key 9 . . . . .                     | 63 |
| Make an emergency call . . . . .                           | 63 |
| Use caller groups. . . . .                                 | 63 |
| Add names to a caller group . . . . .                      | 63 |
| Assign a ringing tone to a caller group. . . . .           | 64 |
| Rename a caller group . . . . .                            | 64 |

|                                                    |           |
|----------------------------------------------------|-----------|
| Remove names from a caller group . . . . .         | 65        |
| Display caller group graphics . . . . .            | 65        |
| <b>13. Security . . . . .</b>                      | <b>66</b> |
| Change your security code. . . . .                 | 66        |
| Protect your phone with the lock code. . . . .     | 67        |
| Turn on the phone lock . . . . .                   | 67        |
| Store an unlocked phone number. . . . .            | 68        |
| Call an unlocked phone number. . . . .             | 68        |
| Answer a call while using a lock code . . . . .    | 68        |
| Change your lock code . . . . .                    | 68        |
| Turn off the lock code . . . . .                   | 69        |
| Lock the keypad . . . . .                          | 70        |
| Activate keyguard . . . . .                        | 70        |
| Deactivate keyguard . . . . .                      | 70        |
| Answer a call while keyguard is active . . . . .   | 71        |
| Restrict calls . . . . .                           | 71        |
| Restrict outgoing calls. . . . .                   | 71        |
| Restrict incoming calls . . . . .                  | 72        |
| <b>14. Set network services features . . . . .</b> | <b>73</b> |
| Set up how your phone selects a system . . . . .   | 74        |
| Select a public system. . . . .                    | 75        |
| Switch from private to public system . . . . .     | 76        |
| Roaming . . . . .                                  | 76        |

|                                                |    |
|------------------------------------------------|----|
| 15. Send and receive text messages .....       | 77 |
| Write a message .....                          | 77 |
| About standard text input .....                | 77 |
| About predictive text input .....              | 78 |
| Turn on predictive text input .....            | 78 |
| Keys and tools for predictive text input ..... | 79 |
| Turn off predictive text input .....           | 79 |
| Notes about predictive text input .....        | 80 |
| Send a text message .....                      | 81 |
| Save a message in the outbox .....             | 82 |
| Resend a message from the outbox .....         | 82 |
| Receive a text message .....                   | 83 |
| Read a text message .....                      | 83 |
| Choose options for a message .....             | 84 |
| When your phone's memory is full .....         | 84 |
| Erase a message .....                          | 85 |
| Reply to a message .....                       | 85 |
| Forward a message .....                        | 85 |
| Retrieve a number .....                        | 85 |
| 16. Use your personal assistant .....          | 87 |
| Use the calendar .....                         | 87 |
| View the calendar .....                        | 87 |
| Move from day to day .....                     | 88 |
| Create a calendar note .....                   | 88 |
| View the day's notes .....                     | 92 |

|                                                 |            |
|-------------------------------------------------|------------|
| Erase notes . . . . .                           | 93         |
| When a calendar alarm goes off. . . . .         | 93         |
| Send or receive calendar notes. . . . .         | 94         |
| Send and receive business cards . . . . .       | 95         |
| Send a business card . . . . .                  | 95         |
| View a received business card. . . . .          | 95         |
| Save a viewed business card . . . . .           | 95         |
| Delete a viewed business card . . . . .         | 96         |
| Download ringing tones. . . . .                 | 96         |
| Notification of received ringing tone. . . . .  | 96         |
| Listen to received ringing tones . . . . .      | 96         |
| Save received ringing tones . . . . .           | 96         |
| Alarm clock . . . . .                           | 97         |
| Set the alarm clock . . . . .                   | 97         |
| Turn off the alarm clock when it rings. . . . . | 97         |
| Turn off the alarm clock altogether . . . . .   | 98         |
| Calculator . . . . .                            | 98         |
| Use the calculator . . . . .                    | 98         |
| Convert currency . . . . .                      | 99         |
| <b>17. Games . . . . .</b>                      | <b>101</b> |
| Memory . . . . .                                | 101        |
| Snake . . . . .                                 | 102        |
| Logic . . . . .                                 | 102        |
| Rotation . . . . .                              | 103        |

|                                                |     |
|------------------------------------------------|-----|
| 18. Reference information . . . . .            | 104 |
| Batteries, chargers, and accessories . . . . . | 104 |
| Important safety information. . . . .          | 106 |
| Traffic safety . . . . .                       | 106 |
| Operating environment . . . . .                | 106 |
| Electronic devices . . . . .                   | 107 |
| Potentially explosive atmospheres . . . . .    | 108 |
| Vehicles . . . . .                             | 109 |
| Emergency calls. . . . .                       | 110 |
| Make an emergency call . . . . .               | 110 |
| Radio frequency (RF) signals . . . . .         | 111 |
| Care and maintenance . . . . .                 | 111 |
| Accessories. . . . .                           | 113 |
| Battery . . . . .                              | 114 |
| Chargers and other accessories . . . . .       | 115 |
| Troubleshooting. . . . .                       | 117 |
| 19. Frequently asked questions (FAQ) . . . . . | 119 |
| 20. Glossary of terms. . . . .                 | 123 |
| 21. Technical information. . . . .             | 128 |
| Index. . . . .                                 | 133 |



# 1. For your safety

This section provides various safety guidelines. Read this information before using your mobile phone (called *phone* throughout this guide). Failure to comply with these guidelines could prove either dangerous or illegal.

For more detailed safety information, see “Important safety information” on page 106.



## Road safety comes first

Don't use a phone while driving. Park the vehicle first.



## Switch off in hospitals

Switch off your phone when you are in a hospital or when you are near medical equipment. Follow any regulations or rules that are in force.



## Switch off on aircraft

Do not use phones on airplanes as this can cause interference with the navigational equipment. Also, the use of phones on airplanes is illegal.



## Switch off when refueling

Do not use your phone at a refueling point or near fuels or chemicals of any kind.



## Switch off near blasting

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules that are in force.



## Interference

All phones are susceptible to interference, which could affect performance. This could impede the making of an emergency call.



## Use sensibly

Use only in the normal position (to ear). Avoid unnecessary contact with the antenna when phone is on.



## Qualified service

Only qualified service personnel can install or repair cellular phone equipment.



## Accessories and batteries

Use only approved accessories and batteries.  
Do not connect incompatible products.



## Calling

Make sure the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call press . To answer a call press .



## Emergency calls

Make sure the phone is switched on and in service. Press and hold at any time to clear the screen. Enter the emergency number, then press . Give your location. Do not end the call until told to do so.

Note: You can also press and hold the 9 key to make an emergency call.

## 2. Welcome

- Before you begin

This section provides information that you need to know before you begin using your phone.

This guide describes the Nokia 8260 phone, which is approved for use in the 800/1900 MHz TDMA/AMPS networks.

### Understand network services

A number of features known as *network services* are described in this guide. These are special services you arrange through your wireless service provider.

Before you can take advantage of these network services features, you must subscribe to them through your service provider. Your service provider will give you instructions on how to use these network services. This guide will instruct you on when you need to contact your service provider for more step-by-step information.

**Note:** Some networks may not support all language-dependent characters and/or services.

### Visit Nokia on the Web

The latest version of this manual may be available on Nokia's World Wide Web site at:

[www.nokia.com](http://www.nokia.com).

- ## Contacting Nokia

Customer Service, USA  
Nokia Mobile Phones  
7725 Woodland Center Boulevard, Suite 150  
Tampa, FL 33614  
Tel: 1-888-NOKIA2U (1-888-665-4228)  
or (1) 813-288-3800  
Fax: (1) 813-249-9619  
TTY: 1-800-24NOKIA (1-800-246-6542)

Customer Service, Canada  
Nokia Products Ltd.  
575 Westney Rd. South  
Ajax, Ontario L1S 4N7  
Tel: (1) 905-427-6654

- ## When you need to contact your service provider

Some service providers enable you to contact them by pressing and holding the 2 key on your phone. This feature can be helpful if you're having trouble dialing a number, especially when traveling outside your home area.

If your service provider deems your problem to be Nokia related, the service provider will let you know.

**Note:** This one-key feature might not be available on all systems. Contact your service provider for availability.

 
## 3. Prepare your phone for use

- Install the battery

### First, remove the back cover

To attach and remove the battery, you need to first remove the phone's back cover.


- 1 Press down on the tab on the bottom of the cover.
- 1 Slide the cover down and lift it off.



### Next, insert the battery

Before you can use your phone, you must insert the battery.

 - 2 Place the top of the battery on the phone, with the gold contacts toward the top of the phone.



- 3 Press down on the bottom of the battery until it is fully down.

### Last, replace the back cover

- 1 Place the cover on top of the battery so that none of the battery is showing.
- 2 Slide the cover up until it clicks into place.

## Charge the battery

Before you use your phone, and when the battery runs down, you need to charge it.

- 1 Connect the lead from the charger to the bottom of the phone.
- 2 Connect the charger to an AC wall outlet.

The messages **Charger connected** and then **Charging** appear. Then the battery power indicator bar starts to flash up and down (scroll).

- You can use the phone while the battery is charging.
- *Important:* Disconnect your phone from the charger if the phone becomes hot while you're making a call.
- If the battery is totally empty, it might take a few minutes before the charging indicator appears on the screen.
- The time it takes to charge the battery depends on the charger you use.

 
The battery is fully charged when the battery indicator bar stops scrolling and the **Battery full** message appears (if the phone is on).

- 3 Disconnect the charger from the AC outlet and the phone.

## • When you need to remove the battery


Later on, you may need to remove the battery.

- 1 Make sure the phone is off.
- 2 Remove the phone's back cover, grasp the ridge at the end of the battery with a fingernail, and lift the battery out.






## 4. Get to know your phone

 - Keys and screen

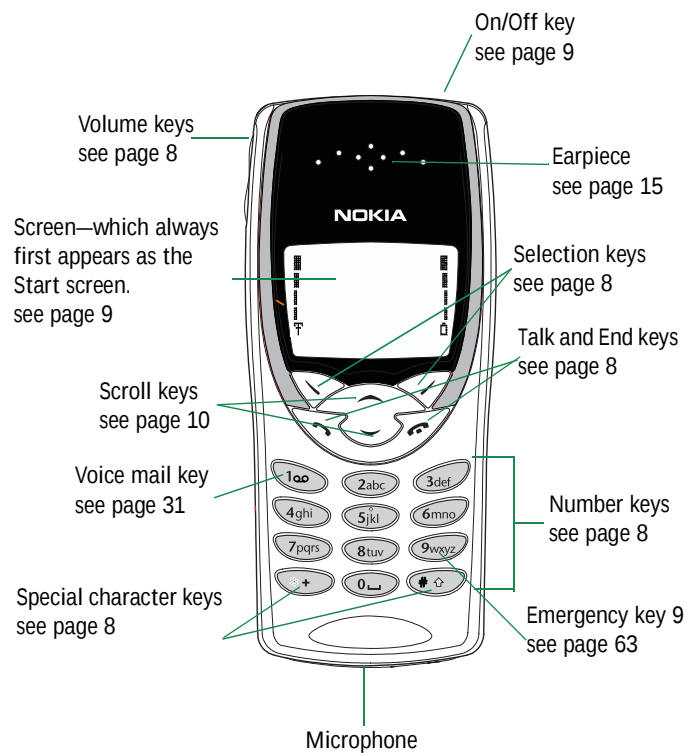

## Keys
  
|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p>On/off key: Press and hold the key to switch the phone on or off.</p> <p>Note: This key is on the top of the phone.</p>                                                                                                                                                                                                                                            |
|    | <p>Selection keys: Press to perform the function indicated by the text on the screen above the key.</p>                                                                                                                                                                                                                                                               |
|    | <p>Talk key: Press to make or answer a call.</p> <p>Tip: Press once to display a list that shows the last-dialed numbers.</p> <p>Tip: Press 9, then  to make an emergency call.</p>                                                                                                  |
|    | <p>End key: Press to end a call or silence the ringing for an incoming call.</p> <p>Tip: Press this key once to return to the Start screen.</p>                                                                                                                                                                                                                       |
|  | <p>Number keys: Use keys 2 through 9 to enter numbers and letters. Press and hold  to call your voice mailbox.</p> <p>Note: Press  if you want to insert a blank space while entering text.</p> |
 
|                                                                                   |                                                                                                                                                                                                                                                                                                                       |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Special character keys: Use  to enter special characters.</p> <p>For example: Pressing  while you are in alpha mode changes the letter case.</p> |
|  | <p>Scroll keys: Press to move through your phone's menu or phone book.</p>                                                                                                                                                                                                                                            |

## Power key

- Press and hold the Power key, which is located on the upper-right, top portion of the phone.



**Warning:** Do not switch on the phone where wireless phone use is prohibited, or where the use of a phone might cause interference or could be a danger.

## Start screen

When you turn on your phone, a Nokia welcome appears, and then you see is the Start screen. The Start screen is the "home base" for your phone.

If you have already made a feature choice and are no longer at the Start screen but wish to return to this screen:

- Press .



## • Navigation keys

### Selection keys

 
Use the selection keys to navigate through and select the phone's many options.

At the Start screen, two options appear: Menu and Names.

The selection keys (  and  ) are just below these options.

- The left selection key appears under Menu.
- The right selection key appears under Names..

When you press the *left* selection key , the first menu item, Messages, appears. The text above the left selection key becomes Select and the text above the right selection key becomes Exit.

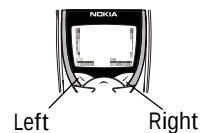

When you press the *right* selection key , the six options for the Names feature appear, along with the same Select and Exit options that appear when you select Menu.

This guide refers to the selection keys by the names that appear above them. *Example*: "Press Menu" means to press the selection key below the word Menu.

### Scroll key

Your phone has a scroll key with an up and a down arrow.

 
This guide refers to these arrows as if they were two separate keys:

(  and  ).

## Scroll bar

When you press Menu, a scroll bar appears on the far right side of the screen. This bar appears as a straight line with one tab, and it indicates your location in the menu.

As you progress through the menu, the tab moves lower on the scroll bar. If you move backward through the menu, the tab moves up.



Tab

Scroll bar: This view shows the scroll bar three tab positions from the beginning menu list. A number 3 appears above the bar, showing the tab position.

## Indicators and icons

On your phone, you have two types of identifiers: indicators and icons. Icons are graphical representations of a specific item or situation. For example, an icon appears when you have a voice message waiting to be heard.

Indicators show the status of something. The phone uses three types of indicators:

- Signal strength indicator
- Battery power indicator
- Handset volume indicator

Signal strength indicator



Battery power indicator

**Signal strength:** This indicator shows the signal strength of the wireless network at your current location. The higher the bar, the stronger the signal.

**Battery power:** This indicator shows the battery charge level. The higher the bar, the more power in the battery.

**Handset volume:** This indicator appears only during calls. It shows how loud (or not) the volume is during the phone call.

The list below shows what each icon means.



You have an active call.



The phone is waiting for you to enter a response.



.You have selected Silent as the current profile.



The keyguard has been activated to prevent any accidental key presses.



You have one or more voice messages waiting.



You have one or more unread text messages waiting.



Digital service is available.



Any alpha characters that you enter will be uppercase (capital letters). Press the  key to switch to lowercase.



Any alpha characters that you enter will be lowercase. Press the  key to switch to uppercase.



This appears when you press and hold the  key while storing names. After switching to this *numbers* mode, you cannot enter any alpha characters. You can only enter numbers.

*Get to know your phone*



This appears when you press the \* key while storing names. You are in *special character* mode, and you can select a special character by pressing Insert.



The alarm clock is set.



You have a reminder in your Calendar to do something.



You have a reminder in your Calendar that it's someone's birthday.



You have a reminder in your Calendar to call someone.



You have a reminder in your Calendar of a meeting.

## 5. Make and answer calls

### Make a call

- 1 Hold the phone as you would any other telephone, with the earpiece over your ear and the microphone near your mouth.
- 2 Deactivate the keyguard, if it is on.



Nokia recommends that you use the keyguard, so you need to check to see if it is on and deactivate it before you make a call.

- 3 Enter the phone number—including the area code—and press .

**Note:** Your phone has a built-in antenna. As with any other radio-transmitting device, *do not* touch the antenna unnecessarily while the phone is on. Contact with the antenna affects call quality and could cause the phone to operate at a higher power level than otherwise needed.

- 4 Press  to end the call or to cancel the call attempt.

**Note:** It is normal for your phone to become hot during use. If the phone becomes too hot, it automatically drops the current call and returns to the Start screen. Until the phone cools, you will be unable to receive or make calls.

### Answer a call

To answer a phone call:

- 1 Press any key to answer the call.
- 2 Press  to end the call.

**Tip:** You can mute the ringing of an incoming call by pressing .

## Adjust the earpiece volume

You can adjust the earpiece volume (while in a call or at any time) by pressing the volume keys on the upper left side of the phone.

- Press the key up to increase the volume.
- Press down to decrease the volume.

## Redial the last-dialed number

To redial the last-dialed number on your phone:

- 1 If not there, return to the Start screen by pressing Clear or . Otherwise, proceed to step 2.
- 2 Press  two times.

## Use caller ID

Caller ID is a network service that identifies incoming calls. Contact your service provider to find out how to get this feature.

When Caller ID is active, your phone shows the caller's phone number during an incoming call, as long as this number is a part of your service provider's wireless network.

If the wireless network doesn't recognize the calling number, one of the following two messages appears: Call ID unavailable or Caller ID unavailable.

If the calling party has blocked the Caller ID feature, one of the following two messages appears: Call ID blocked or Caller ID Blocked.

If you have stored the name and number of the calling party in your phone book and that number is supported by the wireless network, the caller's name might also appear.

## Keep calls private

The Voice Privacy feature encrypts the voice channel so that people cannot eavesdrop on your phone conversations.

Voice Privacy is a network service, so you must contact your service provider to obtain access to the feature.

To turn on Voice Privacy:

- 1 Press Menu 4 > 5 > 1 (Settings > Network services > Voice privacy).
- 2 Scroll to On and press OK.

During a call, Voice Privacy becomes active and notifies you with a beep. The message Voice privacy active also appears on the screen.

To turn off Voice Privacy:

- Repeat the steps above except, in step 2, scroll to Off.

**Note:** If you turn this feature on and Voice Privacy becomes inactive for any reason, your phone displays the message Voice privacy not active and beeps.

## 6. Use phone menus

- **Navigate menus**

A *menu* is a list of choices you can make. Your phone has 11 main menus. Each main menu contains numerous submenus that allow you to use the phone book, change the ringing tone, and so on. You can use menus and submenus two ways: by *scrolling* or by using *shortcuts*.

### Scroll through menus

- 1 From the Start screen, press Menu, and then scroll through the menus using the <<up>> and <<down>> keys.
- 2 Press Options or OK, using the selection keys, at the option you want.
- 3 Use the scroll and selection keys to navigate the submenus and to return to the Start screen.

### Use a shortcut

To get to options directly, without scrolling through lists, you can use a shortcut.

#### Example

Suppose you want to customize a ringing option.

- 1 From the Start screen, press Menu, and then press the number of the menu item you want.
- 2 For this example, press Menu 3 > 1 > 2 > 1 (the same as pressing Menu > Profiles > Customize > Ringing Options).
- 3 When the ringing options appear, scroll through them, select the one you want, and press OK.

**Note:** Don't pause too long between numbers. The phone remembers the last key pressed for only about 2 seconds. For example, if you press Menu 3 > 4, and pause too long between 3 and 4, the result is the same as pressing *only* Menu 3.

## Change menu levels

- To return to the previous menu level, press Back or Exit.
- To return to the Start screen, press .

No menu setting changes are saved.

## Get help

For most of the menu items in your phone, a brief help text is provided. To view the help text of a menu item, scroll to an item and wait 5 seconds.

## • List of shortcuts

Your phone's menu may differ from the following list, depending on the network services to which you have subscribed and the accessories you are using. If you have any questions, call your service provider.

### 1 Messages

- 1 Text messages (1 > 1)
  - 1 Inbox
  - 2 Saved
  - 3 Write new
  - 4 Outbox
  - 5 Erase all
    - 1 All read
    - 2 All in inbox
    - 3 All saved
    - 4 All in outbox
- 2 Voice messages
  - 1 Listen to voice messages
  - 2 Voice mailbox number
- 3 Welcome Note

*Use phone menus*

## 2 Call log

- 1 Missed calls
- 2 Dialed calls
- 3 Received calls
- 4 Clear call lists
- 5 Call timers

## 3 Profiles

- 1 Normal
  - 1 Select (not available for Headset or Car Kit)
  - 2 Customize (the following submenus appear in all profiles)
    - 1 Ringing options
    - 2 Ringing volume
    - 3 Ringing tone
    - 4 Vibrating alert
    - 5 Keypad tones
    - 6 Warning and game tones
    - 7 Message alert tone
    - 8 Lights (available only with Car Kit)
    - 9 Automatic answer (available only with Headset or Plug 'n Play hands-free accessory, part of the Car Kit)
  - 3 Rename a profile (not available for Headset or Car)
- 2 Silent
- 3 Meeting
- 4 Outdoor
- 5 Pager
- 6 Car (available only with Car Kit)
- 7 Headset (available only with Headset)

## 4 Settings

- 1 Call settings
  - 1 Emergency key 9
  - 2 Automatic redial
  - 3 Calling card
- 2 Phone settings
  - 1 Clock
  - 2 Alarm clock
  - 3 Touch tones
    - 1 Manual touch tones
    - 2 Touch tone length

- 4 Restore factory settings
- 5 Language
  - 1 English
  - 2 French
  - 3 Spanish
  - 4 Portuguese
  - 5 Russian
  - 6 Hebrew
  - 7 Traditional Chinese
- 3 Security settings
  - 1 Restrict calls
    - 1 Restrict outgoing calls
    - 2 Restrict incoming calls
  - 2 Access codes
    - 1 Phone lock
    - 2 Unlocked phone number
    - 3 Change lock code
    - 4 Change security code
    - 5 Hidden voice mailbox password
- 4 Auto update of date and time
  - 1 On
  - 2 Confirm first
  - 3 Off
- 5 Network services
  - 1 Voice privacy (must be added manually)
  - 2 Call forwarding (must be added manually)
  - 3 Call waiting (must be added manually)
  - 4 Send own number (must be added manually)
  - 5 Network feature setting
  - 6 NAM selection
  - 7 Public system selection (might not be available; see your service provider)
  - 8 Digital/analog selection (might not be available; see your service provider)
- 5 System
  - 1 Automatic
  - 2 Manual
  - 3 New search
- 6 Games
  - 1 Memory

*Use phone menus*

- 2 Snake
- 3 Logic
- 4 Rotation
- 7 Calculator
- 8 Calendar
  - 1 View day
  - 2 Make note
  - 3 Erase notes
  - 4 View all
  - 5 Go to date
  - 6 Set the date
- 9 Keyguard

# 7. Enter letters and numbers

You use the phone's keys to enter letters and numbers into your phone.

**Note:** For text messages and calendar notes, you can use predictive text input, which sounds complex but is actually simple and fast. This method is covered in "About predictive text input" on page 78.

- Enter letters

When you want to add new names or when you view names in the phone book, your phone automatically switches to the *ABC mode*. In *ABC mode*, your phone displays the **ABC** icon.



- Press a key once or several times to enter the letter(s) you want.

For example, press the 2 key three times to enter the letter C.

| Key | Characters | Key | Characters                 |
|-----|------------|-----|----------------------------|
| 1   | .?!-1      | 7   | PQRS7                      |
| 2   | ABC2       | 8   | TUV8                       |
| 3   | DEF3       | 9   | WXYZ9                      |
| 4   | GHI4       | 0   | Enters an empty space or 0 |
| 5   | JKL5       | *   | Special characters         |

Enter letters and numbers

| Key | Characters | Key | Characters                                                           |
|-----|------------|-----|----------------------------------------------------------------------|
| 6   | MNO6       | #   | Changes letter case; long press toggles between ABC/abc and 123 mode |

## Edit names

To edit a name in the phone book:

- Use the  scroll key to move the cursor to the left.
- Use the  scroll key to move the cursor to the right.
- Press Clear to correct any mistakes.

## Change from capital (uppercase) letters

To switch between capital letters (uppercase) and lowercase letters:

- Press the  key.

The **ABC** icon switches to **abc**, indicating that you are using lowercase.

- To switch back to uppercase, press the  key again.

## Use punctuation and special characters

When in ABC mode, you can enter special characters. To do so, press the  key. The following special characters appear:

. , ? ! : ; - + # \* ( ) ' " \_ @ & \$ £ % / < > , i \$ = □ j E ¥

- Press  or  to move to the character that you want to use and press Insert.
- Press # to move quickly up and down between rows of characters.

Tip: If you want to access a special character that appears toward the end of this list, press  for quicker access.

## • Enter numbers

You use the *123 mode* to enter numbers.

- If you are in **ABC** mode, press and hold the  key for about 2 seconds.

The **123** icon appears, enabling you to enter only numbers.

- To return to ABC mode, press the  key again for a couple of seconds.

## Use special characters in numbers

To insert special characters in the 123 mode:

- Press the  key until the special character that you want to insert appears.

These characters can be stored within the number sequence, and you can add as many special characters as you need.

## List of special characters

- \* Use as bypass key.
- + Use to precede an international telephone number.
- p Use to create a pause that will occur when a number is dialed. The numbers you enter after this special character are automatically sent as touch tones after a 2.5-second pause.
- w Use to create a "wait" when a number is dialed. This means that when your phone waits for you to press  before it sends the number as touch tones.



## 8. Use the phone book

- About the phone book

Your phone includes a phone book that can store up to 250 names and associated phone numbers. Stored numbers can be up to 32 digits long; stored names can be up to 26 characters long.

**Make entries unique**

You cannot store identical names into your phone.

*Example:* You can't have one entry for *John Jones* with a home number and another entry for *John Jones* with a work number. You need to store the names as, for example, *John Jones Work* and *John Jones Home*.

If you enter a name that's already in your phone book, the message Replace? appears, followed by the currently stored name.

- Press Exit to end this input.

- Use phone book menus

The phone book has several menus from which you can choose. These menus appear when you press Names. Use the scroll keys to move to the menu you want to use.

|         |                                                                          |
|---------|--------------------------------------------------------------------------|
| Search  | Enables you to search for a specific name.                               |
| Add new | Enables you to enter new names and numbers.                              |
| Options | Enables you to choose your scrolling view and to show the memory status. |

|                 |                                                                                                                                                                                |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1-touch dialing | Enables you to assign up to seven 1-touch dial locations.                                                                                                                      |
| Caller groups   | Enables you to rename or change the ringing tone for a caller group.                                                                                                           |
| Erase all       | Enables you to erase all names and numbers in the phone book. To erase only one name and number at a time, press Details, then Options while viewing a name in the phone book. |

## Change views

You can view your phone book in three different ways, listed below.

|             |                                                                                                                                                                  |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Name list   | Displays all the names that are stored in your phone book. Three names appear on the screen at a time.                                                           |
| Name+number | Displays individual names and numbers. Only one name appears on the screen at a time, with its corresponding phone number. Name + number is the default setting. |
| Name only   | Displays individual names only. You can view the corresponding phone number by pressing Details and then scrolling up or down.                                   |

In all views, you can use the scroll keys to move up and down through the list of names.

## Select a scrolling view

- 1 Press Names.
- 2 Scroll to Options, then press Select.

*Use the phone book*

- 3 At Scrolling view, press Select.
- 4 Scroll to the view that you want and press OK.

## • Add names and numbers

- 1 Press Names.
- 2 Scroll to Add new and press Select.
- 3 Using the keypad, enter the name. Use the  key to switch between upper and lowercase letters.
- 4 Press OK.
- 5 Enter the phone number and press OK.



### Shortcut

You can also enter numbers by using a shortcut from the Start screen.

- 1 Enter a phone number and press Save.
- 2 Enter a name at Name.  
Note: Step 2 is optional.
- 3 Press OK.



## • Change a stored telephone number

You can change a number without changing its associated name.

- 1 Press Names.
- 2 At Search, press Select.
- 3 Enter the first few letters of the first name of the person for whom you are searching and press OK.

If you chose Name only as your scrolling view, continue to step 4. If you chose Name+number as your scrolling view, proceed to step 5.

- 4 Press Details to view the number.

- 5 Press Options
- 6 If Edit is not highlighted, scroll to it and press Select.
- 7 Press OK.

The associated number appears.

- 8 Press and hold Clear to erase one number at a time.  
Use the  and  keys move within the digits in the number.
- 9 Enter the new number.
- 10 Press OK to save the new number.

## • Recall and redial numbers

You can recall and dial numbers using one of three methods.

To recall and dial a number:

- 1 At the Start screen, press  or  to display the names and associated numbers that are stored in your phone book.
- 2 Scroll to the appropriate name and press  to dial the associated number.

*Use the phone book*

OR

- 1 At the Start screen, press Names.
- 2 Begin entering the first few digits of the number that you want to call.
- 3 When the appropriate name/number appears on the screen, press  to dial this number.

OR

- 1 At the Start screen, press Names.
- 2 At Search, press Select.
- 3 Enter the name of the person that you want to call and press OK.
- 4 When the appropriate name/number appears on the screen, press  to dial this number.

## • Erase stored names and numbers

Note: You cannot undo Erase functions, so be careful!

- 1 Using one of the methods described in “Recall and redial numbers” on page 28, recall the stored name and its associated number.

If you chose Name only as your scrolling view, continue to step 2. If you chose Name+number as your scrolling view, proceed to step 3.

- 2 Press Details.
- 3 Press Options.
- 4 Scroll to Erase, then press Select.

The Erase? message appears.

- 5 Press OK to erase this name and associated number.

- **Erase the entire phone book**

You can erase the contents of your phone book. Note that this action cannot be reversed! Once you have performed this procedure, all the stored information in your phone book is erased.

To erase all the contents of your phone book:

- 1 Press Names.
- 2 Scroll to Erase all and press Select.

The message Are you sure? appears.

- 3 If you truly want to erase the entire contents of your phone book, press OK.

The Security code field appears.

- 4 Enter your security code and press OK.

- **Check memory status**

You can check to see how many free and in-use memory locations are in your directory.

- 1 Press Names and scroll to Options.
- 2 Press Select.
- 3 Scroll to Memory status and press Select again.

A message appears that says Phone: xx free, xx in use, where xx indicates the number of memory locations (phone entries) available and in use.

## 9. Use voice mail

Voice mail is a network services feature. This feature enables those who call you to leave a voice message that you can retrieve later.

- **When you have a message**

- Your phone beeps when you receive a voice message. Also, the message New voice message appears on your phone's screen, along with the  icon.
- If you have received more than one voice mail message, your phone displays the number of messages that you have received.

**Note:** To use voice mail, you need to learn the voice mail system's various greetings, passwords, and prompts. Your service provider can provide this information.

- **Set up your voice mailbox**

As part of your network's voice mail feature, your service provider gives you a voice mailbox phone number. Save this number in your phone to make getting your voice messages quick and convenient.

- 1 Press Menu 1 > 2 > 2 (Messages > Voice messages > Voice mailbox number).
- 2 Enter your voice mailbox phone number.
- 3 Press OK.
  - Press Yes if you want to save your voice mailbox password in your phone.
  - Press No if you don't.
- 4 If you selected Yes, enter your security code.

4 Press OK.

5 Enter your voice mailbox password and press OK.

Your voice mailbox number can be up to 32 digits long and is used until it's changed. Therefore, if your phone number changes, you may need to change your voice mailbox number along with it.

- ## Set greetings and passwords

These may vary in different wireless systems. If you need information about how to record your greeting or how to store your password, contact your service provider.

**Note:** If you store your voice mailbox password in your phone, the phone immediately sends the password after you dial your voice mailbox number. If you want the phone to wait before sending the password, enter a "wait" character as the first character of your password.

- ## Listen to your voice messages

1 When your phone alerts you to new voice messages, press Listen and follow the prompts.

2 If you'd rather listen to your messages later, press Exit.

3 To listen to your voice messages at a later time:

Press and hold the 1 key.

OR

Press Menu 1 > 2 > 1 (Messages > Voice messages > Listen to voice messages).

The message Calling voice mailbox appears on the screen. Follow the prompts to access your messages.

## 10. Work with the call log

The call log keeps track of the following information:

- Missed calls
- Numbers you've dialed
- Numbers from which you've received calls
- The amount of time you've spent on calls



### • Check the call log

Press Menu 2 to access Call log, then press Select.

The following submenus are available:

- Missed calls
- Dialed calls
- Received calls
- Clear call lists
- Call times

To select any of these options, press the Select key while the option is displayed on the screen. The Missed calls, Dialed calls, and Received calls menus include the following options (available when you press the Options key):

|             |                                                                                        |
|-------------|----------------------------------------------------------------------------------------|
| Call time   | Shows the date and time during which the call was connected—if the clock has been set. |
| Edit number | Enables you to edit the displayed number.                                              |
| Save        | Enables you to save the displayed number into your phone book.                         |

|             |                                                                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Erase       | Enables you to erase the displayed number from the call log.                                                                                                                       |
| View number | Enables you to view a number when an associated name appears on the screen.<br><br><b>Note:</b> This option works only if you have stored the associated number in the phone book. |

Tip: You can dial any numbers that appear on your phone's screen by pressing .

## Check missed calls

Your phone stores up to the last 10 numbers associated with calls you have missed. When you miss a call(s), the message Missed calls appears on your phone's screen, along with the number of calls missed.

You are notified of missed calls only if your phone was turned on in the service area from which the missed call originated.

To check missed calls:

- 1 Press List.

The phone shows the numbers of the calls you missed.

- 2 Either scroll through the list using the  or  keys until you reach a number that you want to dial and press , or press Back to return to the Start screen.

If you prefer, you can press Menu 2 > 1 (Call log > Missed calls), then scroll through the list of numbers.

**Note:** If you chose the Forward if not answered option in the Call Forwarding, then your phone treats these forwarded calls as missed calls.

## Check previously dialed calls

Your phone stores up to the last 10 numbers associated with calls that you have dialed. To check this list of numbers:



- 1 Press Menu 2 > 2 (Call log - Dialed calls).
- 2 Use or to scroll through the dialed numbers list and when you reach the number that you want to dial, press .

You can also access previously dialed numbers by pressing , then quickly pressing or to scroll through the list.

## Check received calls

Your phone stores up to the last 10 numbers associated with calls that you have answered. To check this list of numbers:

- 1 Press Menu 2 > 3 (Call log > Received calls).
- 2 Use or to scroll through the dialed numbers list and when you reach the number that you want to dial, press .

## Clear call lists

You can erase some or all of the numbers that appear in your phone's call log. You can erase dialed numbers, received call numbers, or missed call numbers.

**Warning:** You *cannot* undo this operation.

To erase some or all of the numbers listed in your call logs:

- 1 Press Menu 2 > 4 (Call log > Clear call lists).
- 2 Use  or  to scroll through the options list, which includes the following options: All, Missed, Dialed, and Received.
- 3 Stop at the appropriate option and press OK.

**Note:** The All option clears every number in every list, whereas the other options clear *only* the numbers associated with that option. For example, the Dialed option clears only the numbers associated with calls you previously dialed.

## • Check call timers

Your phone tracks the amount of time you spend on each call. To obtain information about time spent on phone calls:



- 1 Press Menu 2 > 5 (Call log > Call timers).
- 2 Use  or  to scroll through the options described in the following list:

|              |                                                                                             |
|--------------|---------------------------------------------------------------------------------------------|
| Last call    | Displays the call duration of the last made call.                                           |
| Dialed calls | Displays the duration of all outgoing calls since you reset the timers.                     |
| All calls    | Displays the call duration of all calls that have been made since you reset the timers.     |
| Life timer   | Displays the duration of all calls for the life of your phone. This option cannot be reset. |

|              |                                                                                                                                                                                |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Clear timers | Clears all call timers for the currently selected Number Assignment Module (NAM). Your phone includes separate timers for each NAM used, with the exception of the Life timer. |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Warning:** If you select the Clear timers option, the action cannot be undone. If you use the call timers to log or track the amount of time you are using your phone, you might want to record the call timers before you erase them.

## Turn on a current call timer

You can set your phone to display the running elapsed time while a call is active. To do so:

- 1 Press Menu 2 > 5 (Call log > Call timers).
- 2 Press Details.

The message Current call timer appears.

- 3 Press Select.
- 4 Use  or  to scroll to On.
- 5 Press OK.

From this point on, each call you make or receive will be timed. After a call has ended, press any key on your phone to clear the screen.

## Clear call timers

- 1 Press Menu 2 > 5 > 5 (Call log > Call timers > Clear timers). The Security code field appears.
- 2 Enter your security code and press OK.

## 11. Use advanced calling features

- Set in-call options

Your phone allows you to use a number of features during a call. These features are known as *in-call options*.



**Note:** Many in-call options are network services features. To use these options, you must contact your service provider.

You cannot use all these options at all times. This section tells you when you can use a certain option.

- 1 To access an option during a call, press Options.
- 2 Choose from some or all of the following options:

|             |                                                                                                                                                                                                                                                                                        |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Lock keys   | This option appears first only if your phone is connected to a headset. Otherwise, the Mute option (see next) appears first.                                                                                                                                                           |
| Mute        | Mutes the phone's microphone.<br>If, somehow, your phone's microphone has already been muted, End mute appears instead of Mute.<br>Press Select to choose either of these options.<br><b>Note:</b> These options can affect the microphones of any accessories connected to the phone. |
| Touch tones | Enables you to manually enter a touch tone string or search for a string in your phone.                                                                                                                                                                                                |

|          |                                                                                 |
|----------|---------------------------------------------------------------------------------|
| New call | Enables you to conference in another call while you are in the midst of a call. |
| Menu     | Enables you to access the Menu.                                                 |
| Names    | Enables you to access the phone book.                                           |

## • Use call waiting

If you have call waiting, your phone beeps during a call to let you know that someone else is calling you.

Depending on your caller ID setup, the phone might also display the number of the incoming call.

**Note:** Call waiting may not be available in all wireless systems. Contact your service provider for details and availability.

Before you can use call waiting, you must first store its feature code. Then you must activate the call waiting feature.

### Store the call waiting feature code

- 1 Press Menu 4 > 5 > 5 (Settings > Network services > Network feature setting).

The Feature code box appears.

- 2 Enter the feature code your service provider gave to you and press OK.
- 3 Make sure that Activate is highlighted and press OK.

### Activate call waiting

- 1 Press Menu 4 > 5 > 3 (Settings > Network services > Call waiting).
- 2 Use  or  to scroll to Activate and press OK.

Your phone calls the network to confirm the feature code you entered. After the network confirms the feature code, call waiting is activated.

## Manage calls

Call waiting works with both local and long distance calls.

- To answer an incoming call, press .
- To switch from one call to another, press .
- To end both calls, press .

## Make a conference call

While in a call, you can call another number and conference in a third party.

- 1 While in a call, you can either dial the number that you want to conference in and press .  
OR  
You can press Options, scroll to New call, press OK, enter the phone number, and press OK again.

If you don't remember the number of the party you want to include in the conference, and you know that this number is in your phone book, you can recall the number.

- 2 When the third party answers, press  to connect all three parties.

**Note:** To place one of the parties on hold, press  again. If you press  a third time, the party you placed on hold rejoins the call, and the second party is placed on hold. Once you place one of the parties on hold, you are unable to rejoin all three parties.

- 3 To drop all parties, press .

### Recall a number from the phone book during a conference call

If you don't remember a number that you need to call while in another call, and you know that this number is in your phone book, you can recall the number without having to quit your current call. To do so:

- 1 During the call, press Options.
- 2 Scroll to Names and press OK.
- 3 Press Select at Search.
- 4 Enter name and press OK, or scroll through the phone book.
- 5 Press .

## • Use call forwarding

With call forwarding, you can forward incoming calls to another number. This way, if you are unable to receive calls on your phone, all calls going to that phone can be forwarded to another phone. You'll never have to miss an important call.

**Note:** The call forwarding feature might not be available in all wireless systems. Contact your service provider for details and availability.

Before you can use call forwarding, you must first store its feature code. Then you must activate the call forwarding feature.

You can use the call forwarding feature code manually as opposed to storing it. Each time you need to forward phone calls, you must enter the feature code before the phone number (for example, \*72 555 1212).

### Store the call forwarding feature code

- 1 Press Menu 4 > 5 > 5 (Settings > Network services > Network feature setting).

The Feature code field appears.

- 2 Enter the feature code your service provider gave you and press OK.

- 3 Use  or  to scroll to Call forwarding and press Select.

## Activate call forwarding

- 1 Press Menu 4 > 5 > 2 (Settings > Network services > Call forwarding).
- 2 Scroll to the desired call forwarding option, as described in the table below, and press Select.

|                         |                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Forward all calls       | Forwards all incoming calls.                                                                                                                                                                                                                                                                                                                                          |
| Forward if busy         | Forwards calls only when you're on your phone and do not have voice mail.                                                                                                                                                                                                                                                                                             |
| Forward if not answered | Forwards calls if you don't answer. This option is handy if you want to give your phone to someone for a short period of time, but you don't want them to answer the phone.<br><br>For example, you could use this option if you give your child the phone to take out, in case of an emergency, but you still want to receive any incoming calls made to this phone. |
| Forward if out of reach | Forwards calls if you are out of the serving wireless network.                                                                                                                                                                                                                                                                                                        |
| Cancel call forwarding  | Cancels all forwarding options that are currently active.                                                                                                                                                                                                                                                                                                             |

- 3 Highlight Activate and press OK.
- 4 At the Number field, either enter the number to which you want your calls forwarded or press Search to find this number in the phone book (if the number is indeed in your phone book).

- 5 Press OK.

Your phone calls the network to confirm the feature code that you entered in Menu 4 > 5 > 5. After the network confirms the feature code, call forwarding is activated.

## • Redial automatically

Automatic redial enables your phone to continue trying to call a number that was busy due to wireless network problems.

When you call a number and get a busy signal because of network problems, your phone redials this number up to 10 times. If you want to stop this process prior to the tenth attempt, press . This stops the automatic redialing.

Before you can use the Automatic Redial feature, you must activate it.

- 1 Press Menu 4 > 1 > 2 (Settings > Call settings > Automatic redial).
- 2 Use  or  to scroll to On.
- 3 Press OK.

## • Use a calling card

You can use a calling card when you dial long distance calls. First you must first store your calling card information in the phone. Your phone can store information about a maximum of four calling cards.

### Save calling card information (step 1)

To save your calling card(s) information:

- 1 Press Menu 4 > 1 > 3 (Settings > Call settings > Calling card).
- 2 Scroll to the A, B, C, or D calling card and press Options.
- 3 Scroll to Edit and press OK.

The Security code field appears.

- 4 Enter your security code and press OK.

The Dialing sequence field appears.

- 5 Press Select.
- 6 Use  or  to scroll through the list of dialing sequences, as described in the table below.

| Dialing sequence                        | Use for cards that require you to:                                                                                                         | Associated cards                             |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|
| Access no.<br>+ phone no.<br>+ card no. | Dial 1-800 access number, then phone number, then card number (+ PIN if required).                                                         | MCI, AT&T True Choice, Sprint Canada, Unitel |
| Access no.<br>+ card no.<br>+ phone no. | Dial 1-800 access number, then card number (+ PIN if required), then phone number.                                                         | networkMCI, WorldPhone MCI                   |
| Prefix<br>+ phone no.<br>+ card no.     | Dial the prefix (any numbers that must precede the phone number) and phone number you want to dial, then card number (+ PIN, if required). | GTE, PacBell, AT&T, Stentor                  |

\* The calling cards listed in this column are frequently used with the dialing sequences listed in the first column. However, this information might vary and it is subject to change at the phone companies' discretion.

- 7 Press Select.

## Save calling card information (step 2)

The order of the following steps may vary, depending on which dialing sequence your card uses.

- 1 Enter the number and, when prompted for the calling card's access number, enter the number and press OK.

### *Use advanced calling features*

This number is usually the 1-800 number that is listed on the back of the calling card.

You can also retrieve the access number from your phone book if you've stored it. Simply press Search, then use  or  to find the number.

- 2 When prompted to enter a calling card (usually shown on the front of the calling card) and PIN number, enter the number, and press OK.
- 3 Press OK again when the Save changes? message appears.
- 4 Use  or  to scroll to Card name, press Select, and enter the card name using your phone's keypad.
- 5 Press OK.

## Choose a calling card to use

If you have more than one calling card, you'll need to choose one before making a call.

- 1 Press Menu 4 > 1 > 3 (Settings > Call settings > Calling card).
- 2 Scroll to the desired card and press Options.
- 3 Press  or  to highlight Select and press OK.

The Security code field appears.

- 4 Enter your security code and press OK.

The message Card ready for use appears.

## Make a calling card call

To make a calling card call:

- 1 Enter the phone number, including any prefix (such as 0 or 1) your calling card might require when you make a calling card call. See your calling card for instructions.
- 2 Press and hold  until your phone displays the message Card call, wait for the message Wait for the tone, and press OK.
- 3 When you hear the tone from your calling card service, press OK.

**Note:** This procedure might not apply to all of the calling card options that are programmed into your phone. Please look on the back of your calling card for more information, or contact your long distance company.

## • Send your own number in caller ID

You can determine, for each call you make, whether your telephone number appears on another phone's caller ID.

In most service areas, when you call others, your name is presented to their caller ID (if they subscribe). With Send Own Number, you can block (or not) the display of your number to others' caller ID when you call them.

**Note:** Send Own Number might not be available in all wireless systems. Contact your service provider for details and availability. Also note that this feature is effective only when you call a number that is equipped with caller ID.

Before you can use Send Own Number, you must first store its feature code. Otherwise, this feature might not appear on your phone's menu.

## Store the Send Own Number feature code

- 1 Press Menu 4 > 5 > 5 (Settings > Network services > Network feature setting).

### *Use advanced calling features*

The Feature code field appears.

- 2 Enter the feature code your service provider gave you and press OK.
- 3 Use  or  to scroll to Send own number and press Select.

Your phone calls the network to confirm the feature code that you entered in Menu 4 > 5 > 5. After the network confirms the feature code, Send Own Number is activated.

#### **Set whether your number will appear (or not)**

- 1 Press Menu 4 > 5 > 4 (Settings > Network services > Send own number).
- 2 Scroll to Yes (to show your number) or No (not to show it).
- 3 Press OK.
- 4 Enter the number you wish to call (or press Search to retrieve the number from the phone book), and press OK.

## • **Select a phone system (NAM)**

Your service provider programs, into your phone's memory, its phone number and system information when you first activate your phone. The number assigned to your phone is called a *Number Assignment Module* (NAM). This NAM provides service for only one service area.

However, your phone can be activated in up to three different service areas. For example, your phone could be activated in Dallas, Chicago, and New York. Each service area would assign a different phone number or account to your phone.

You must select a NAM for your home system, and if you travel outside of your home system, you can choose another NAM.

Only one NAM can be active at a time.

**Note:** It might not be necessary to have up to three NAMs for your phone if your service provider has service or roaming agreements for each area in which you wish to use your phone. Contact your service provider for details.

## Select the NAM for your phone

- 1 Press Menu 4 > 5 > 6 (Settings > Network services > NAM selection).
- 2 Scroll to the phone number you want to use and press OK.

**Note:** The first phone number on this list is the currently selected number. You need at least one active number to make calls. You cannot change from one NAM to another during a call.

## Select digital or analog

Your phone can work in both digital and analog modes. The default mode is digital and analog, which appears on your phone as Digit. & analog when you press Menu 4 > 4 > 8 (Settings > Network services > Digital/analog selection).

**Note:** This feature is available only for certain phones. Contact your service provider for more information.

This mode means that your phone works in both digital and analog networks. The phone always tries to find a digital network first, but if a digital network is not available, the phone looks for an analog network.

After pressing Menu 4 > 4 > 8 (Settings > Network services > Digital/analog selection), you can also choose to use one of the other two modes:

|         |                                                     |
|---------|-----------------------------------------------------|
| Analog  | Forces the phone to use only AMPS analog networks.  |
| Digital | Forces the phone to use only TDMA digital networks. |

- ## Set touch tones

*Touch tones* are sounds that are produced when you press the keys on your phone's keypad. Sometimes, touch tones are called *DTMF tones*, but this guide calls them touch tones.



You can use touch tones for many automated over-the-phone services such as checking bank balances and airline schedules and using your voice mailbox. Touch tones can be sent only when a call is active.

### Set manual touch tones

- 1 Press Menu 4 > 2 > 3 > 1 (Settings > Phone settings > Touch tones > Manual touch tones).
- 2 Select one of the following options, then press OK:

|            |                                                                             |
|------------|-----------------------------------------------------------------------------|
| Continuous | The tone sounds for as long as you press and hold a key.                    |
| Fixed      | Sets the tone length to 0.1 second, regardless of how long you press a key. |
| Off        | Turns off the tones. No tones are sent when you press a key.                |

### Set touch tone length

You can also set the length of each touch tone. To do this:

- 1 Press Menu 4 2 3 2 (Settings - Phone settings - Touch tones - Touch tone length).
- 2 Use  or  to scroll to Short or Long. Short sets the tone length to .1 second; Long sets the tone length to .5 second.
- 3 Press OK.

## Store touch tone sequences (strings)

You store touch tone strings the same way that you store names and numbers in your phone book. You can store an entire digit sequence and send it as touch tones for frequently used strings of numbers.

### Store touch tone strings with phone numbers

- 1 Enter the phone number that you want associated with a touch tone.
- 2 Press \*\*\* (p) or \*\*\*\* (w).

w (wait): When you dial this phone number, your phone first dials the number, then waits (because of the w character) for you to press Send. When you press Send, the phone sends your password.



p (pause): If you include a p character instead of a w, your phone pauses for 2.5 seconds, then automatically sends your password as a touch tone.

- 3 Enter the touch tone string.
- 4 Store the number as you normally would.

### Send a touch tone string

- 1 Press Menu 4 > 2 > 3 > 1 (Settings > Phone settings > Touch tones > Manual touch tones).
- 2 Make sure that the setting is not set to Off.  
If it is, use  or  to scroll to one of the other options and press OK.
- 3 Then, during your call, press Options, scroll to Touch tones and press OK.
- 4 Enter the touch tone string or recall the string from the phone book, and press OK.

**Warning:** If you send touch tones while in the analog mode, be careful not to send confidential information.

## 12. Customize your phone

- **What are profiles?**

Profiles enable you to customize the following phone-related items:

- Ringing options
- Ringing volume
- Ringing tone
- Vibrating alert
- Keypad tones
- Warning & game tones
- Message alert



Your phone comes with seven profiles:

- Normal (default setting)
- Silent
- Meeting
- Outdoor
- Pager
- Car
- Headset

You can customize any of the profiles. If at any time you want to return to the original settings, you can do so.

- **Select a different profile**

- 1 Quickly press the Power key.
- 2 Quickly press the Power key again to scroll through each choice (or you can use the scroll keys).

- 3 Press and hold the power key for a second (or you can press OK) to select the highlighted profile.

Note: To select a different profile, your phone *cannot* be connected to a car kit or a headset, and your phone *must* be at the Start screen.

## • Customize a profile



- 1 Press Menu 3 (Profiles).
- 2 Use  or  to scroll to the desired profile in the list.

Note: The Car and Headset profiles do not appear unless your phone is connected to these accessories. If you connect your phone to a car kit or to a headset, these profiles remain in the menu, unless you choose to restore your phone's factory settings.

- 3 Press Options to view the options for the selected profile.
- 4 Select one of the following options, then press OK.

|           |                                                                                                                                                               |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Select    | Activates the currently highlighted profile.                                                                                                                  |
| Customize | Enables you to customize a profile by changing the current settings. <ul style="list-style-type: none"><li>• Press OK to choose from several lists.</li></ul> |
| Rename    | Enables you to rename the profile.<br>This option does not appear in the Normal, Headset, or Car kit profiles.                                                |

Note: When you change a setting in the current profile, it affects only that profile. Your phone's normal settings do not change.

## Set ringing options

You can choose the tone that your phone uses to notify you of an incoming call. This setting does not affect any incoming text message alert tones.

- 1 Press Menu 3 (Profiles).

Your phone lists each profile.

 
- 2 Use  or  to scroll to the desired profile in the list for which you want to set the ringing options, and press Options.
- 3 Highlight Customize and press OK.
- 4 Scroll to Ringing options and press Select.
- 5 Scroll to one of the ringing options, as described below, and press OK.

|               |                                                                                          |
|---------------|------------------------------------------------------------------------------------------|
| Ring          | The phone rings until it is answered.                                                    |
| Ascending     | Ringing volume increases (gets louder) if the phone is not answered.                     |
| Ring once     | The phone rings once to indicate an incoming call.                                       |
| Beep once     | The phone beeps once to indicate an incoming call.                                       |
| Caller groups | Sets the ring to a silent ring, unless a call comes from a number within a caller group. |
| Silent        | The phone makes no sound.                                                                |

- 6 Use  or  to scroll to the desired caller group(s), then press Mark to select or Unmark to deselect them.

## Set the ringing volume

You can set the default ringing volume for incoming voice calls and message alert tones.



- 1 Press Menu 3 (Profiles).
- 2 Use  or  to scroll to the profile for which you want to set the ringing volume, and press Options.
- 3 Highlight Customize and press OK.
- 4 Scroll to Ringing volume and press Select.
- 5 Scroll through the options. When you hear the volume level you wish to use, press OK.

The ringing volume setting is stored individually for the handsfree car kit and the headset.

## Set the ringing tone

You can set your phone's ringing tone to a specific sound—or tune—for incoming voice calls.

**Note:** If you have already chosen a ringing option of either Silent or Beep once ("Set ringing options" on page 53), the ringing tones are already turned off.

- 1 Press Menu 3 (Profiles).  
Your phone lists each profile.
- 2 Use  or  to scroll to the profile for which you want to set the ringing tones.
- 3 Press Options.
- 4 Highlight Customize and press OK.
- 5 Scroll to Ringing tone and press Select.
- 6 Scroll through the options, and, when you hear the tone you want to use, press OK.

## Set a vibrating alert

Instead of choosing to have your phone ring, you can have it vibrate to indicate an incoming call.

**Note:** If you have already chosen a ringing option of either Silent (“Set ringing options” on page 53), the phone does not vibrate.

- 1 Press Menu 3 (Profiles).
- 2 Use  or  to scroll to the profile for which you want to set the vibrating alert, and press Options.
- 3 Highlight Customize and press OK.
- 4 Scroll to Vibrating alert and press Select again.
- 5 Use  or  to scroll to On and press OK.

The phone does not vibrate when it is connected to or placed in any charging device.

## Set keypad tones

Keypad tones set the volume of the tone you hear when you press your phone's keys.

- 1 Press Menu 3 (Profiles).
- 2 Use  or  to scroll to the profile for which you want to set the keypad tones, and press Options.
- 3 Highlight Customize and press OK.
- 4 Scroll to Keypad tones and press Select again.
- 5 Use  or  to scroll to one of the levels and press OK. (If you choose Off, no keypad tones are made.)

If you chose the Silent profile in step 2, the keypad tones are turned off.

## Set warning and game tones

You can set warning tones and the tones used for the games in your phone.

*Warning tones* include the sounds your phone makes during error conditions, during confirmations, when you switch the phone on, when a battery is low, and when you need to recharge the battery.

- 1 Press Menu 3 (Profiles).
- 2 Use  or  to scroll to the profile for which you want to set the warning tones, and press Options.
- 3 Highlight Customize and press OK.
- 4 Scroll to Warning and game tones, then press Select.
- 5 Scroll to On and press OK.

If you do not want to use warning or game tones, you can turn them off by scrolling to Off and pressing OK.

## Set the message alert tone

You can set your phone to use a certain tone to indicate an incoming text message.

- 1 Press Menu 3 (Profiles).
- 2 Use  or  to scroll to the profile for which you want to set the message alert tone, and press Options.
- 3 Highlight Customize and press OK.
- 4 Scroll to Message alert tone, then press Select.
- 5 Use  or  to scroll through your choices.

The phone plays samples of each choice as you scroll to it.

- 6 When you find the tone you want, press OK.

## Set your phone to answer automatically

You can set your phone to answer incoming voice calls after one ring. This feature can be used only when your phone is connected to a headset or to an approved handsfree car kit that is equipped with the ignition sense option, with the ignition on.

- 1 Press Menu 3 (Profiles).
- 2 Use  or  to scroll to either the Car or Headset profile and press Options.  
**Note:** Car and Headset do not appear unless your phone has already been connected to a car kit or headset at least one time.
- 3 Highlight Customize and press OK.
- 4 Scroll to Automatic answer and press Select again.
- 5 Scroll to On and press OK.

## Set the lights (car kit only)

While your phone is connected to a car kit, you can set the phone's lights two ways. You can either have the lights on only when you use the phone or have them on the whole time the phone is connected to the car kit.

This feature works *only* when your phone is connected to a car kit.

- 1 Press Menu 3 (Profiles).
- 2 Use  or  to scroll to Car and press Options.  
**Note:** Car does not appear in the list unless the phone is connected to a car kit.
- 3 Highlight Customize and press OK.
- 4 Use  or  to scroll to Lights and press Select.

- 5 Scroll through your choices, which are listed and described in the table below, and press OK.

|           |                                                                                                         |
|-----------|---------------------------------------------------------------------------------------------------------|
| Automatic | Instructs the phone to turn off the lights within 15 seconds if no keys are pressed.                    |
| On        | Instructs the phone to leave the lights on the entire time that your phone is connected to the car kit. |

- ## Rename profiles

- 1 Press Menu 3 (Profiles).
- 2 Use  or  to scroll to the desired profile and press Options.
- 3 Scroll to Rename and press OK.
- 4 Enter the new name and press OK again.

**Note:** You cannot rename the Normal, Headset, and Car kit profiles.

- ## Restore factory settings

As was described in “Customize your phone” on page 51, you can change the defaults that come with your phone. These defaults are known as factory settings.

However, just as you can change some of these defaults, you can also return them back to their original settings.

 
**Note:** The memory, timers, language selection, security code, and lock codes are not reset. However, any profiles you have modified are reset when you restore your settings.

- 1 Press Menu 4 2 4 (Settings - Phone settings - Restore factory settings)
- 2 Enter your security code and press OK.

- **Set the display language**

You can set your phone to display a certain language.  
To do this:

- 1 Press Menu 4 > 2 > 5 (Settings > Phone Settings > Language).
- 2 Use  or  to scroll to the language you want to use and press OK.



You can choose from English, French, Spanish, Portuguese, Russian, Hebrew, and Chinese Traditional.

- **Set and display the clock**

Your phone has an internal clock that you can set to appear on the phone's screen.

The clock is connected to an alarm clock. Refer to "Alarm clock" on page 97 for more information.



### Set the clock

To set the clock to the appropriate time:

- 1 Press Menu 4 > 2 > 1 (Settings > Phone settings > Clock).
- 2 Use  or  to scroll to Adjust time and press Select.

The Time field appears.

- 3 Enter the time using an xx:xx format and press OK.

For example, to set your clock to 9:30, enter 09:30. If you set the time format for 24-hour time, enter the number the same way: 09:30 or 23:12.

- If you set time format to am/pm, use  or  to scroll to am or pm and press OK.

- If you set the time format to 24-hour, the time is set as soon as you press OK after adjusting the time.

## Display the clock

- 1 Press Menu 4 > 2 > 1 (Settings > Phone settings > Clock).

You see the clock on the screen.

- 2 If you decide not to display the clock, press Select, then Hide clock, then Select.

Only one of these options appears at a time.

## Select the time format

You can change the way your clock shows the time, whether in am/pm format or using a 24-hour clock.

- 1 Press Menu 4 > 2 > 1 (Settings > Phone settings > Clock).
- 2 Use  or  to scroll to Time format and press Select.
- 3 Use  or  to scroll to either am/pm or 24-hour and press OK.

## • Add a welcome note

You can set your phone to display a welcome note each time you switch on your phone. This note could say, for example: *Hello*. It could include your name, a reminder, or more. The maximum length of this note is 36 characters.

- 1 Press Menu 1 > 3 (Messages > Welcome note).
- 2 Enter the text of the welcome note.

As you enter characters, they appear to the left of the cursor. Press Clear to delete characters to the left of the cursor. Press  or  to move the cursor right or left.

- 3 Press Options.



- 4 Use  or  to scroll to Save and press OK.

If you ever want to delete (erase) the welcome note, press Menu 1 > 3 (Options > Erase > OK).

## • Use 1-touch dialing

You must store names and numbers in your phone book before you can use 1-touch dialing.

You can assign a name from the phone book to a 1-touch dial location, using your phone's keys 2 through 8. When you press the key, the associated number is automatically dialed.

- Keys 1 and 9: The 1 key is used exclusively to dial your voice mailbox. The 9 key is used exclusively to make calls to the emergency number that is programmed into your phone.
- Key 2: You can use the 2 key to dial a customer care operator (refer to "When you need to contact your service provider" on page 4). You can overwrite this feature and assign a 1-touch dial location to the 2 key.

## Assign a name or number to a 1-touch dial key

- 1 Press Names and scroll to 1-touch dialing.
- 2 Press Select.
- 3 Use  or  to scroll to the first number that includes the message (empty) and press Assign.
- 4 Use  or  to scroll to the name and number to which you want to assign this key and press Select.

Repeat these steps as many times as necessary.

- 5 To call a number using 1-touch dialing, press and hold the appropriate key for a few seconds.

The phone dials the number.

## Change 1-touch dialing numbers

After you have assigned 1-touch dialing numbers to a key, you can change key and number associations at any time.

- 1 Press Names.
- 2 Use  or  to scroll to 1-touch dialing and press Select.
- 3 Use  or  to scroll to the key you want to change and press Options.
- 4 Use  or  to scroll to Change and press Select.
- 5 Use  or  to scroll to through phone book.
- 6 When you reach the new number, press Select.

## Erase 1-touch dialing numbers

You can erase 1-touch dialing key assignments at any time.

- 1 Press Names
- 2 Use  or  to scroll to 1-touch dialing and press Select.
- 3 Use  or  to scroll to the key you want to erase and press Options.
- 4 Use  or  to scroll to Erase and press Select.
- 5 Press OK.

## • Use emergency key 9

When the emergency key feature is turned on, the phone attempts to make an emergency call when you press 9 and . The phone dials the emergency number preprogrammed into your phone.

**Note:** You can also dial an emergency call by pressing and holding 9 until the phone indicates it is attempting to make an emergency call. This method *does not* work, however, when Keyguard is active or when the phone is connected to a modem.

## Activate the emergency key 9

Before you can use the emergency key feature, you must first activate it.

- 1 Press Menu 4 > 1 > 1 (Settings > Call settings > Emergency key 9).
- 2 Use  or  to scroll to On and press OK.
- 3 If you ever want to deactivate this feature, press Menu 4 > 1 > 1 and scroll to Off.

**Warning:** Official emergency numbers vary by location. Only one emergency number is programmed into your phone, and this is the number that is dialed when you press key 9. However, this might not be the proper number in all circumstances.

## Make an emergency call

- Press 9 and .

## • Use caller groups

You can create groups of names in your phone book and give each group a different ringing tone. This allows you to recognize who is calling you by the way your phone rings.

To use the caller group feature, you must also have access to caller ID. Caller ID is a network services feature (see your service provider).

## Add names to a caller group

Before you can create a caller group, you must include the names that will make up a caller group in your phone book.

- 1 At the Start screen, press  until you see the name or number you want to assign to a caller group.
- 2 Press Details, if shown; if not, press Options.
- 3 Use  or  to scroll to Caller groups and press Select.
- 4 Use  or  to scroll to the name/number that you want to add to the caller group and press Select.
- 5 Use  or  to scroll to the caller group to which you want to add this name and press Select.

## Assign a ringing tone to a caller group

After you have created a caller group, you can assign a specific ringing tone to this group. This way, when someone from that group calls you, you'll be able to identify whether they're a friend, a family member, or otherwise from the ringing tone.

- 1 At the Start screen, press Names.
- 2 Use  or  to scroll to Caller groups and press Select.
- 3 Use  or  to scroll to the group you want and press Select.
- 4 Use  or  to scroll to Group ringing tone, and press Select.
- 5 Use  or  to scroll to the tone that you want to assign and press OK.

Tip: You can set your phone to ring *only* when people from certain caller groups call you. Otherwise, the phone is silent.

## Rename a caller group

- 1 At the Start screen, press Names.
- 2 Use  or  to scroll to Caller groups and press Select.
- 3 Use  or  to scroll to the group you want and press Select.
- 4 Use  or  to scroll to Rename group and press Select.
- 5 Enter the group name and press OK.

## Remove names from a caller group

- 1 In the phone book, scroll to select the name you want to remove, and press Options.
- 2 Use  or  to scroll to Caller groups and press Select.
- 3 Use  or  to scroll to No group and press Select.

The name is removed from the group.

## Display caller group graphics

When someone calls you from a particular caller group, your phone can display a graphic to identify that person's caller group.

- 1 Press Names.
- 2 Use  or  to scroll to Caller groups and press Select.
- 3 Use  or  to scroll to the caller group for which you want to display a graphic and press Select.
- 4 Use  or  to scroll to Group graphic and press Select.
- 5 Use  or  to scroll to On. The graphic associated with that caller group is now set to display.

## 13. Security

Your phone is equipped with a versatile security system that prevents the unauthorized use of the phone.

You cannot activate or use certain phone features without having first successfully entered your phone's security code.

- The default security code is 12345.
- Nokia highly recommends that you immediately change this code. Then, write down and store the new code in a safe place, away from your phone.

When entering your security code, a \* appears on the screen each time you press a number key. This prevents others from seeing your code.

If you incorrectly enter a security code five times in a row, your phone won't accept any entries for the next 5 minutes. However, if you realize that you've entered the code incorrectly before pressing OK, you can use Clear to erase the code, digit by digit, beginning with the last digit.

When this guide describes an action that requires the entry of your security code, each step necessary to this action is provided.

### • Change your security code

- 1 Press Menu 4 > 3 > 2 > 4 (Settings > Security settings > Access codes > Change security code).

The Security code field appears.

- 2 Enter the default security code and press OK.
- 3 At the message Enter new security code, enter your new security code and press OK.
- 4 At the message Verify new security code, enter your new security code again and press OK.

The message Security code changed appears.

If you have changed your security code and don't remember the new code, contact your service provider. Once you have changed your security code, the default setting is no longer valid.

- ## Protect your phone with the lock code

The lock code enables you to activate and deactivate your phone. When the lock code is on, you cannot access most of your phone's memory or menu features. Also, you cannot make phone calls without first entering the lock code.

When you switch on the lock code, your phone locks after you switch it off. Then, each time you switch your phone on, it prompts you for a lock code when you press either Names or Menu.

**Note:** If you enter an incorrect lock code five times in a row, your phone prompts you for the security code.

The default lock code is 1234. However, Nokia recommends that you change this code immediately.

### Turn on the phone lock

- 1 Press Menu 4 > 3 > 2 > 1 (Settings > Security settings > Access codes > Phone lock).
- 2 Enter the lock code and press OK.
- 3 Scroll to On and press OK again.

When your phone is locked, it might be possible to place a call to the emergency number programmed into your phone, such as 911 or any other official emergency number. You can either dial this emergency number or press the emergency key 9 (if you have activated the 9 key to act as an emergency key).

You can also store a number in the Unlocked phone number location. This allows you to call the number even though your phone is locked.

## Store an unlocked phone number

- 1 Press Menu 4 > 3 > 2 > 2 (Settings > Security settings > Access codes > Unlocked phone number).
- 2 Enter the lock code and press OK.

The Number field appears.

- 3 Enter a phone number or press Search and scroll through the phone book until the number you want to store appears.
- 4 Press OK.

## Call an unlocked phone number

- Press  or  once, then .

OR

- Manually enter the phone number and press .

## Answer a call while using a lock code

- To answer a call while using a lock code, press any key except  and .

## Change your lock code

 
- 1 Press Menu 4 > 3 > 2 > 3 (Settings > Security settings > Access codes > Change lock code).

The message Enter lock code appears.

- 2 Enter the lock code and press OK.

Only numeric characters are accepted.

- 3 Enter the new lock code and press OK.



- 4 Verify the new lock code, and press OK.

When you change your lock code, make sure you store it in a safe place, away from your phone. Avoid entering access codes similar to emergency numbers to prevent accidental emergency calls.

## Turn off the lock code

- 1 Press Menu 4 > 3 > 2 > 1 (Settings > Security settings > Access codes > Phone lock).
- 2 Enter the lock code and press OK.
- 3 Scroll to Off and press OK again.

With the lock code feature turned off, you can use your phone without having to enter the lock code each time you turn your phone on.

- ## Lock the keypad

When you lock the keypad, you prevent accidental key presses—for example, when your phone is in a pocket or purse. This feature is called keyguard.

### Activate keyguard

There are three different ways to activate the keyguard:



At the Start screen:

- Press and hold .
- Press Menu .
- Press Menu 9 (Keyguard).

When Keyguard is turned on, you might be able to make calls to the emergency number that is programmed into your phone. For example, you could dial 911 and press . When keyguard is on, however, you cannot use the emergency key 9.

**Note:** Keyguard is automatically turned off when the phone is connected to a car kit.

### Deactivate keyguard

- 1 Press Unlock.
- 2 Press OK.

OR

- Press and hold  until the message Unlock keys? appears.
- Press OK.

## Answer a call while keyguard is active

During an incoming call, the keypad automatically unlocks.

- Press any key to answer the call.

After you end the call, keyguard automatically becomes active again.

- Press the Power key to quickly switch the lights on for 15 seconds.

## • Restrict calls

You can restrict incoming and outgoing calls. To restrict outgoing calls, you create a list of restrictions and apply the appropriate restriction.

Before you define restrictions for outgoing calls, only one restriction option is available:

- Add restriction, which enables you to create your own list of outgoing call restrictions. The maximum number of call restrictions that you can define is ten.

After you have used the Add restriction option to add at least one restriction, the following options are then available:

- Select: Allows you to select call restrictions from the outgoing calls list.
- Edit: Allows you to edit an existing outgoing call restriction.
- Erase: Erases any existing outgoing call restrictions.

When calls are restricted, you might be able to make calls to the emergency number that is programmed into your phone. For example, you could dial 911 and press . However, emergency key 9 might not work, depending on the type of restriction you choose.

## Restrict outgoing calls

- 1 Press Menu 4 > 3 > 1 (Settings > Security settings > Restrict calls).
- 2 Press Select.

- 3 Enter your security code and press OK.
- 4 Scroll to Add restriction and press OK.
- 5 Enter the number that you want to restrict and press OK.

For example: If you want to restrict all calls that begin with 1, enter 1. This will restrict all outgoing long distance phone calls. If you want to restrict all calls that begin with 972, enter 972, and so forth.

After you perform step 5, the Name field appears.

- If you want to add a name for the call restriction, enter the name using your phone's keypad and press OK.
- If you don't want to add a name, just press OK.

## Restrict incoming calls

To restrict incoming calls:

- 1 Press Menu 4 > 3 > 1 (Settings > Security settings > Restrict calls).
- 2 Use  or  to scroll to Restrict incoming calls and press Select.
- 3 Enter your security code and press OK.
- 4 Scroll to All calls and press Mark.

Press Unmark to remove an already-set restriction.

- 5 Press Back. The Save changes? message appears.
- 6 Press Yes.

Press No if you do not want to save the changes.

## 14. Set network services features

The following network services can be obtained from your service provider:

- Voice privacy
- Call waiting
- Call forwarding
- Sending own number

When you subscribe to any of these services, your service provider gives you a feature code that activates each service. Deactivation codes are used to deactivate each service.

After you store the appropriate code in your phone, the code is sent to the network to verify that you're using the correct feature code. The voice privacy feature does not require you to store a feature code before using it.

More than one number? If your phone has more than one phone number (or NAM) assigned to it, any stored feature codes apply only to your primary phone number (or NAM 1).

After you store a feature code, the respective service appears as a menu option on your phone's screen. You can use these menus to activate and deactivate the network services.

- **Set up how your phone selects a system**

Your phone is capable of working in residential, private, and public systems (such as your home system). You can choose how your phone selects a network to use.

Set up the way your phone selects a network

**1** Press Menu 5.

You see the following three options:

- **Automatic:** Your phone automatically searches for available networks and chooses the appropriate one. Every time you turn on your phone, it resets to Automatic.
- **Manual:** The phone searches for networks and then displays a listing of all of the possible networks on your phone's screen. Next to each network, one of the following appears: Available: or Not available:.. If a network is designated as Not available, you cannot use it.
- **New Search:** Your phone begins a new search for both private and residential systems. When it finds the best system available, your phone displays it on its screen. You can then select this system, or start another search by pressing Next.

**2** Use  or  to scroll through the choices, and press OK when you see the one you want.

If you have two phone numbers (or NAMs), the Manual and New search features are used only with your primary phone number (NAM 1).

## Select a public system

When you take your phone outside its home system, the phone is said to be "roaming." The phone can search for home-type systems—systems that are the same type as your home system. Or, the phone can search for non-home-type systems.

**Note:** The options described here may not be available for your phone. See your service provider for information.

Your service provider programs a list of preferred systems into your phone. These are systems with which your service provider has roaming agreements. Your phone looks for these systems when you're roaming.

- 1 Press Menu 4 > 4 > 7 to tell your phone how to choose a public system (network). Your selection remains active until you change it.
  - Any system: When service is not available in your home system, the phone searches for a preferred system of either type, then your phone searches for a home-type system, then it searches for a non-home-type system. The search continues until your phone finds a system that can be used.
  - Home type: When service is not available in your home system, the phone searches for a home-type system first. However, if a non-home-type system is found, then your phone will use this system.
  - Nonhome type: The phone searches for a non-home-type system only; the home-type system is *not* used).
  - Home only: The phone uses *only* its home system. It will not roam.
- 2 Scroll to the option you want and press OK.

## Switch from a private system to a public system

- 1 Press and hold Menu while you are not in a call.  
Your phone displays the message Search public systems?
- 2 Press OK and your phone uses the public system for the *next* (and *only the next*) outgoing call.  
After you complete this call, your phone returns to the Automatic system selection.

## • Roaming

The term *roaming* is used to indicate when your phone is not in its home area. Calls made or received while you are roaming are usually more expensive than calls made in your home area.

While roaming in some systems outside your home area, your phone may not be recognized by the host system, which is the system in which you're travelling. You may not be able to place a call.

Contact your service provider for more specific information on how roaming works with your phone and for information about coverage limitations.

### Roaming indicators

When your phone begins roaming:

- The phone beeps once and may display the word ROAM on your phone's screen, depending on how roaming works with your phone.

Contact your service provider for more details. If your phone is not roaming, it either displays the word HOME or the name of your service provider.

## 15. Send and receive text messages

With the text message network service, you can send and receive short text messages. You can also send and receive messages that contain a person's name and/or number (a "business card").

To get your messages, other phones must have text message capability. Or, you can ask the service provider to convert the message to other formats such as e-mail and fax.

The maximum length of a received text message is 160 characters. Your phone has space for up to 80 text messages, depending on the length of each message.

**Note:** Note: The maximum length of a text message differs, depending on the capabilities of the network from which it originated. Also, the text messages may appear different at different times. This happens because messages can originate in networks other than your own.

Contact your service provider for more information about this feature.

- **Write a message**

You can write a message two ways: using standard (ABC) text input or using predictive text input.

### About standard text input

Standard text input is the default mode for text entry. The ABC icon <<ABC>> appears as visual confirmation.

- 1 Find the key that is below the letter you want to enter.

- 2 Press it as many times as needed for the letter to appear on the screen.

For example, to enter the name *John*:

|       |                                                                                                                                                                                                                                                       |   |
|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| Press |                                                                                                                                                                      | J |
| Press |    | O |
| Press |                                                                                     | H |
| Press |                                                                                     | N |

## About predictive text input

This method of text entry works differently than the way phone book entries work. With predictive text input, you only need to press each number key once for each letter.

For example, to write *Nokia* with the English dictionary selected:

 (for N)  (for o)  (for k)  (for i)  (for a)

Since the displayed word changes after each key stroke, try to disregard the word until you have keyed in all the characters.

## Turn on predictive text input

- 1 Press Menu, then Select.
- 2 When Text messages appears, press Select.
- 3 Scroll to Write new and press Select.
- 4 Press Options and scroll to the dictionary you want (for example, English).
- 5 Press OK.

T9 dictionary activated appears. This means you can use predictive text input to enter messages. In the text message window where you write, the predictive text icon appears.



## Keys and tools for predictive text input

| Key                                                                                                                                                                   | Purpose                                                                                                                                                                                                        |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  -  | Use for word entry. Press each key only once for each letter.                                                                                                                                                  |
|                                                                                      | Press to view the next matching word if the underlined word is not the word you intended.                                                                                                                      |
| Spell                                                                                                                                                                 | If the dictionary sees a word it doesn't recognize, you see Spell above the left selection key. Press Spell, enter the word you want to enter, and press OK.                                                   |
|                                                                                      | Press once to accept a word and add a space.                                                                                                                                                                   |
|                                                                                      | Press once quickly to change the character case. <b>ABC</b> indicates uppercase. <b>abc</b> indicates lowercase.                                                                                               |
|                                                                                    | Press and hold to enter a number. <b>123</b> indicates 123 mode. Press and hold again to write text letters.                                                                                                   |
| Clear                                                                                                                                                                 | Press once to delete the character to the left of the cursor.                                                                                                                                                  |
|                                                                                    | Press once to add a punctuation mark. To change the underlined symbol, press  repeatedly until the symbol you want appears. |
| 160                                                                                                                                                                   | Maximum number of characters available. The character counter appears in the top right corner of the display and counts down for each character added.                                                         |

## Turn off predictive text input

- To switch from predictive text input to standard text input, repeat steps 1 through 4 above

- Scroll to Dictionary off and press OK.

## Notes about predictive text input

- To insert a symbol, press and hold . The symbol screen appears. Select the desired symbol and press Insert.
- When you've finished writing, make sure the underlined word is the word you intended to write.

Symbol screen

If the word is correct

- Insert a punctuation mark, if needed.
- Press  to confirm the change and enter a space.
- Start writing the next word.

If the word is not correct

- Press  repeatedly until the desired word appears, then press  to confirm it.

OR

- Press Options, scroll to Matches, then press OK. Scroll to the correct word and press Use.
- Start writing the next word.

When you enter a period to end a sentence, the phone switches to **ABC** mode so the that the first letter in the next word will be uppercase (a capital letter).

## Add a desired word to the match list

If the ? character appears after a word, the word you intended to write is not in the dictionary. You can add the word to the dictionary.

- 1 Press  repeatedly until Spell appears in place of Options.

### *Send and receive text messages*

- 2 Press Spell and enter the word(s) using standard text input.
- 3 Press OK to save the word(s).

#### **Insert numbers**

- 1 To add a number to the message, press and hold  until  appears.
- 2 Enter the desired numbers, then press and hold  to return to ABC mode.

#### **Insert symbols**

- 1 To put a symbol in the message, press Options and scroll to Insert symbol.
- 2 Select the desired symbol and press Insert.

#### **Write compound words**

- 1 Write the first part of the word and press  to accept it. Then press Clear once to remove the space.
- 2 Write the last part of the compound word and press  to enter the word in memory.

## • **Send a text message**

- 1 Press Menu 1 > 1 > 3 (Messages > Text messages > Write new).  
The message screen appears.
- 2 Enter a message of up to 160 characters.
- 3 When you've finished writing, press Options, scroll to Send, then press OK.
- 4 Enter or recall the recipient's phone number, then press OK.  
Sending message appears
- 5 When the message is successfully sent, Message sent appears.

If you need to exit while writing the message, press  at any time. Later, press Menu 1 > 1 > 3 to return and finish writing the message. If you turn off the phone without saving the message, the message will be lost.

## Save a message in the outbox

When writing a text message, it's a good idea to save it in the outbox. Then if there is a message delivery problem, you can easily resend the message.

- 1 While writing the message, press Options.
- 2 Scroll to Save, then press OK.

## Resend a message from the outbox

Messages in the outbox have one of two icons in front of them.

- The  icon in front of a message heading shows that you have attempted to send the message to the text message center.
- The  icon shows that you have not yet tried to send the message.

- 1 Scroll to the message, then press Read.
- 2 Press Options.

Send is selected.

- 3 Press OK.
- 4 Enter or find the number where you want to send the message, then press OK.

- **Receive a text message**

When you receive a text message, the phone sounds a message alert tone and the text message icon  appears, along with one of the following messages:

- **Message received:** Indicates that you have an unread message or page. If you have more than one message or page, the appropriate number is listed before this message.

When you receive the above message along with another message Call, followed by a name and/or number, the Call message is a page. Only the names of people who are stored in your phone book appear.

- **New emergency message:** Means that an emergency message or page was sent by someone via the service provider. Emergency messages are sent only in situations where life and/or property are in immediate danger. Emergency messages are listed first and override all other messages.
- **Urgent:** Means the message has a high priority.

## **Read a text message**

- 1 Press Read.

This takes you to the Inbox, with the new message selected.

- 2 Press Read again to read the message.
- 3 Press Options for a list of choices you have while reading the message (see the list following this section).
- 4 Press Select when the option you want is highlighted.

In your inbox, text messages are shown in the order in which they were received, unless one is an emergency message. An emergency message overrides any order and appears first.

## Choose options for a message

When you press Options while reading a message, the following choices are available.

|               |                                                                                                                                                                                                                                                                                                                                                                       |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Read next     | Enables you to read the next message.                                                                                                                                                                                                                                                                                                                                 |
| Erase         | Erases the current message.                                                                                                                                                                                                                                                                                                                                           |
| Write message | Provides a space for you to create and send a message.                                                                                                                                                                                                                                                                                                                |
| Save          | Saves this message to the Saved folder.                                                                                                                                                                                                                                                                                                                               |
| Call back     | <p>Calls the person who sent you the text message, if their phone number is included in the message.</p> <p>You can also press &lt;&lt;talk&gt;&gt; while the message is displayed to dial the number.</p> <p>If more than one number is on the screen, the numbers appear in a list. Scroll to the phone number you want to call and press &lt;&lt;talk&gt;&gt;.</p> |
| Forward       | Forwards the call to another person. That person must have the appropriate message service.                                                                                                                                                                                                                                                                           |
| Reply         | Provides a screen where you can write a reply.                                                                                                                                                                                                                                                                                                                        |

- ## When your phone's memory is full

When your phone's message memory is full, one or more messages of the lowest priority are automatically deleted. These messages are usually deleted from your phone's inbox. An incoming emergency message could force a deletion from your phone's Saved folder.

If after deleting messages the memory is still full, your phone shows the message No space: message waiting.

- Clear the notification by pressing OK.

- **Erase a message**

- 1 While reading a message, press Options.
- 2 Scroll to Erase, then press OK.

Your phone asks you to confirm that you want to erase the message.

- 3 Press OK.

- **Reply to a message**

- 1 Press Options.
- 2 Scroll to Reply, then press Select.
- 3 Enter your message, then press Options.
- 4 Scroll to Send, then press OK.

The phone displays the return number.

- 5 Edit the number if needed, then press OK.

- **Forward a message**

- 1 Press Options.
- 2 Scroll to Forward, then press Select.
- 3 Enter or find the recipient's phone number, then press OK.

- **Retrieve a number**

You can save or dial a phone number that is included in a message.

- 1 Press Options.
- 2 Scroll to Get number, then press OK.

- 3 If more than one number is shown, scroll to the one you want, then press OK.

The phone displays the number on the screen. You can dial it or save it as if you had entered it yourself.

## 16. Use your personal assistant

Your phone can be your personal assistant. It can wake you up in the morning and remind you of meetings, birthdays, and tasks. You can check the current time, calculate a tip at dinner, and convert currencies.

With a calendar, clock, alarm clock, and phone book, you have everything at hand to use your phone effectively.

- **Use the calendar**

The calendar keeps track of birthdays, meetings, reminders, and call you need to make. It can even sound an alarm when it's time for you to make a call or go to a meeting.



Remember! Your phone must be switched on for the calendar to work. Do not switch on the phone, however, where wireless phone use is prohibited or where the use of the phone could cause interference or danger.

Alarm clock: You phone must remain on for you to use the calendar's alarm. If the phone is off, the alarm does not sound at the scheduled time.

### View the calendar

- 1 Press Menu > 8 (Calendar).

If you haven't already set the date, the phone prompts you to do so. To set the date, proceed to step 2. Otherwise, proceed to step 3.

- 2 Set the date using the mm/dd/yyyy format.

For example: If the date is 04 May 2001, type 04052001. The numbers you enter overwrite existing numbers.

- 3 Press OK.

Today's day and date appear.

## Move from day to day

After you set the date, whenever you press Menu 8, your phone displays the current date and day.

- 1 To move forward or backward through the calendar, use <<down>> or <<up>>.
- 2 When you reach the date you want, press Options and scroll to highlight the option you want.

## Create a calendar note

This option enables you to create a note and associate it with one of the following categories: Reminder, Call, Meeting, or Birthday. You can also set an alarm for any calendar note.

- 1 Go to the day you want, scroll to Make note, and press Select.  
The list of categories appears.

*Use your personal assistant*

2 Scroll to the category you want and press OK.

|          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Reminder | <p>The Subject field appears. Enter the info and press OK. The current date appears.</p> <ul style="list-style-type: none"><li>• If you want to change the date for this reminder, do so and press OK.</li><li>• If you do not want to change the date, just press OK. The message Set alarm for the note? appears.</li></ul> <p>Press Yes or No.</p> <p>If you press Yes, the Alarm date field appears.</p> <p>Enter the date on which you want the alarm to sound and press OK. The Alarm time field appears.</p> <p>Enter the time at which you want the alarm to sound using the hh:mm format and press OK. Select either am or pm and press OK. The message Calendar note saved appears.</p> <p>If you don't want to set an alarm, press No. The message Calendar note saved appears.</p> |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Call | <p>The Number field appears. You can either enter the number and press OK, or you can press Search and scroll through your phone book until you find the number that you want and press OK. The Date field appears.</p> <p>Enter the date on which you need to make this call and press OK. The Time field appears.</p> <p>Enter the time that you need to make this call using the hh:mm format and press OK.</p> <p>Select am or pm and press OK. The message Set alarm for the note? appears.</p> <p>Press Yes or No.</p> <p>If you press Yes, the Alarm date field appears. Enter the date on which you want the alarm to sound and press OK.</p> <p>The Alarm time field appears. Enter the time at which you want the alarm to sound using the hh:mm format and press OK.</p> <p>Select either am or pm and press OK. The message Calendar note saved appears.</p> <p>If you don't want to set an alarm, press No. The message Calendar note saved appears.</p> |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

*Use your personal assistant*

|         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Meeting | <p>The Subject field appears. Enter the information and press OK. The current date appears.</p> <p>If you want to change the date for this reminder, do so and press OK. If you do not want to change the date, just press OK. The Time field appears.</p> <p>Enter the time when need to make this call using the hh:mm format and press OK. Select am or pm and press OK. The message Set alarm for the note? appears.</p> <p>Press Yes or No. If you press Yes, the Alarm date field appears. Enter the date on which you want the alarm to sound and press OK. The Alarm time field appears.</p> <p>Enter the time at which you want the alarm to sound using the hh:mm format and press OK.</p> <p>Select either am or pm and press OK. The message Calendar note saved appears.</p> <p>If you don't want to set an alarm, press No. The message Calendar note saved appears.</p> |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Birthday | <p>The Name field appears. Enter the person's name whose birthday you want to be reminded of and press OK.</p> <p>The Date field appears. Enter the month and day of this person's birthday and press OK. The Year of birth field appears.</p> <p>Enter the year using the yyyy format and press OK. The message Set alarm for the note? appears.</p> <p>Press Yes or No.</p> <p>if you press Yes, the Alarm date field appears. Enter the date on which you want the alarm to sound and press OK. The Alarm time field appears. Enter the time at which you want the alarm to sound using the hh:mm format and press OK.</p> <p>Select either am or pm and press OK. The message Calendar note saved appears.</p> <p>If you don't want to set an alarm, press No. The message Calendar note saved appears</p> |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## View the day's notes

You can review notes you've written for certain days.

- 3 To review notes for a certain day, open the calendar and scroll to the day you want.
- 4 Press Options and then press View Day.
- 5 Again press Options.

The following options are available:

|       |                                                                                                    |
|-------|----------------------------------------------------------------------------------------------------|
| Erase | Clears a note from your calendar. An Erase note? message appears to confirm your choice. Press OK. |
|-------|----------------------------------------------------------------------------------------------------|

*Use your personal assistant*

|           |                                                                                                                                                                                                                                                             |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Edit      | Displays the note in the Subject field, when you're writing. Make the changes you want and press OK.<br><br>The date appears. Press OK again.<br><br>The Set alarm for the note? message appears. Press Yes or No. The message Calendar note saved appears. |
| Move      | Enables you to move the note to another date. When you press this option, the Date field appears.<br><br>Enter the date to which you want to move this note and press OK. The message Calendar note saved appears.                                          |
| Send note | Sends the note to another person's phone.                                                                                                                                                                                                                   |

## Erase notes

This option enables you to erase notes. You can choose from the following categories: Of chosen day, One by one, or All at once.

- After you choose a category, press Erase to delete the associated notes, or press Back.
- If you choose All at Once, your phone deletes every note that is saved in the calendar. When you're asked to confirm, press Yes or No.

## When a calendar alarm goes off

When an alarm goes off, you have two choices: you can either press OK or Postpone.

- If you press OK, the alarm shuts off.
- If you press Postpone, the following message appears: Alarm will be postponed for 10 min.

After 10 minutes, the alarm once again goes off. You can either:

- Press Postpone again OR

- Press OK to stop the alarm.

## Send or receive calendar notes

When someone sends you a calendar note, your phone displays Calendar note received. You can save the note in your calendar and work with it in the same way as any other note in your calendar, including setting an alarm.

### Send a calendar note

You can send a note to another phone user if the person has a phone that can receive calendar notes.

- 1 Create a new note, or scroll to the day where a note is stored.
- 2 Press Options and scroll to Send note.
- 3 In the Number box, enter the number to which you want to send the note.

If the number is in your phone book, enter the name you want and press Search to find the number.

- 4 Press Send.

The phone sends your message.

### Receive a calendar note

Caution: If you press Exit the calendar note will be deleted!

- 1 When your phone displays Calendar note received, press Options  
Show is selected.
- 2 Press OK and scroll through the note to read it.

### Save a received calendar note

- 1 After viewing the calendar note, press Back.
- 2 Scroll to Save, then press OK

*Use your personal assistant*

### Discard viewed calendar notes

After viewing the calendar note:

- Press Back, then press Back again.

## • Send and receive business cards

Your phone can send or receive electronic business cards consisting of a name and phone number. You can save received business cards in your phone book.

### Send a business card

- 1 Find the name in your phone book.
- 2 Press Options and scroll to Send bus. card.
- 3 Press Select.
- 4 Enter or recall the phone number to which you want to send the business card, and press OK.

### View a received business card

When you receive a business card, the phone displays Business card received.

**Note:** If you press Exit at any time before saving the business card, the business card will be deleted!

- 1 When your phone displays Business card received, press Options.
- 2 Show is selected. Press OK.
- 3 Scroll through the available information.

### Save a viewed business card

- 1 After viewing the business card, press Back, scroll to Save, then press OK.

- 2 At the Name: prompt, edit the name if you want to, then press OK.
- 3 At the Number: prompt, edit the number if you want to, then press OK.

## Delete a viewed business card

After viewing the business card, press Back, then press Exit.

## • Download ringing tones

You can download up to five ringing tones to replace the Personal entries in your list of ringing tones. For details about this network service, contact your wireless service provider.

## Notification of received ringing tone

If you have this service and your phone receives a downloaded ringing tone, your displays Ringing tone received.

## Listen to received ringing tones

**Note:** If you press Exit at any time before saving the ringing tone, the ringing tone will be deleted!

- 1 When your phone displays Ringing tone received, press Options.
- 2 Playback is selected. Press OK.

The phone plays the ringing tone.

 
## Save received ringing tones

- 1 After listening to the ringing tone, press Back.
- 2 Scroll to Save tone, then press OK.
- 3 Choose which ringing tone you want to replace (either an empty Personal placeholder, if any are remaining, or a previously

*Use your personal assistant*

- **Alarm clock**

The alarm clock operates off your phone's clock. You can set the alarm clock to ring at any time, provided your phone is turned on. The alarm clock's volume is determined by the current ringing volume and tone settings.



If you have selected the Silent or Beep once ringing tone, then your alarm clock quietly beeps once.

To set the time, see “Set and display the clock” on page 59.

## Set the alarm clock

- 1 Press Menu 4 > 2 > 2 (Settings > Phone settings > Alarm clock). The Set alarm time message appears.
- 2 Enter the time for which you want to set the alarm using the hh:mm format and press OK.

Any existing numbers are replaced with the newly entered numbers.

- 3 Select either am or pm and press OK. The Alarm on message appears.

Note: Step 3 appears *only* if you have selected the am/pm format.

## Turn off the alarm clock when it rings

- When the alarm clock rings:  
Press Stop to turn it off.
- Press Snooze to set the alarm to go off again in 10 minutes.

If you let the alarm ring for 1 minute or more without pressing a key, it stops ringing, waits 10 minutes, and then rings again. This continues until you press Stop.

*Reminder:* Your phone must be turned on for the alarm to sound.

## Turn off the alarm clock altogether

If you decide that you don't want the alarm to ever go off, you can turn it completely off.

- 1 Press Menu 4 > 2 > 2 (Settings > Phone settings > Alarm clock).
- 2 Use  or  to scroll to Off and press OK.

 
If you have selected the Silent or Meeting profile, your alarm beeps only once. The best profile to use when using the alarm clock is Normal or Outdoor, unless these profiles have been modified from their original settings.

Warning: Do not switch on the phone where wireless phone use is prohibited or where it might cause interference or danger.

## • Calculator

Your phone's calculator adds, subtracts, multiplies, divides, and converts currencies.

### Use the calculator



- 1 Press Menu 7 (Calculator) and then press Options. A listing appears.
- 2 Use  or  to scroll to one of the following categories: Equals, Add, Subtract, Multiply, Divide, To home, To visited, Exchange rate, and press OK.
- 3 Enter the first number in the calculation.

If you need to enter a number with a decimal point, press # to indicate it.

#### Use your personal assistant

- 4 Then, based on the type of calculation that you need to perform, use one of the following actions:

| If you want to... | then...                       |
|-------------------|-------------------------------|
| add               | press * (for + symbol)        |
| subtract          | press ** twice (for - symbol) |
| multiply          | press *** (for * symbol)      |
| divide            | press **** (for / symbol)     |

Instead of using the keystrokes listed in the above table, you can also return to the list of options and choose Add, Subtract, Multiply, or Divide and press OK. However, using the keystrokes is quicker.

- 5 Enter the second number in the calculation and press Options.  
**Note:** Repeat step 5 as many times as necessary. Press Clear to erase any mistakes.
- 6 Use  or  to scroll to Equals and press OK.

## Convert currency

You can use the calculator to first set the exchange rate and then to calculate the exchange rate.

### Set the exchange rate

- 1 Press Menu 7 (Calculator), then press Options.
- 2 Use  or  to scroll to Exchange rate and press OK.  
The message How many home units to a visited unit appears.
- 3 Press OK again.  
The Exchange rate field appears, with the number 1.

- 4 Enter the appropriate number

The number 1 is overwritten by the number you entered. To enter a decimal point, use the # key.

- 5 Press OK.

The Rate saved message appears.

### **Calculate the exchange rate**

- 1 Press Menu 7 (Calculator).

Above the Back key, the number 0 appears.

- 2 Enter number of units comprising the exchange rate.

The number 0 is overwritten by the number you entered.

- 3 Press Options and use  or  to scroll to one of the following categories: To home or To visited.

- 4 Press OK.

The converted currency rate appears above the Back key.

# 17. Games

Your phone includes four exciting games that you can play whenever the phone is turned on:

Memory  
Snake  
Logic  
Rotation



- 1 Press Menu 6 (Games) to display the listing of these games.
- 2 Use  or  to scroll to the game you want to play and press Select.

A list of options appears:

|              |                                                                                  |
|--------------|----------------------------------------------------------------------------------|
| New game     | Starts a new game.                                                               |
| Top score    | Displays the top score.<br>Note: This option is not available in the Logic game. |
| Instructions | Describes how the game is played.                                                |
| Level        | Sets the level of difficulty.                                                    |

- 3 Press Select to choose an option.

## • Memory

This game provides four black boxes, with pictures underneath. The object is to find picture pairs as quickly as possible. You can choose a higher level of play if you want to increase the number of boxes.

- 1 Press the 5 key to reveal a picture.

- 2 Try to find picture pairs in as few tries as possible.
  - Use the following keys to move around: 2 (up), 4 (left), 6 (right), and 8 (down).
  - Press the \* key to jump over pictures that have already been revealed or to move from the top left to the bottom right.
  - Press the # key to jump to the left over already-revealed pictures or to move from the bottom right to the top left.

Once found, pairs stay visible.

## • Snake

This game places an object, which represents a piece of food, in the middle of the screen. At the bottom of the screen is a line that represents the snake.

- 1 Use the following keys as cursors: 2 (up), 4 (left), 6 (right), and 8 (down).
- 2 Move the snake toward the food and watch the snake grow.

The longer the snake's tail grows, the higher the score. If the snake hits its own tail or the surrounding wall, the game is over.

## • Logic

This game asks you to find a secret combination of figures. At the beginning of the game, four figures appear on the top left portion of the phone's screen. Underneath the far left of these figures is a blinking bracket.

- 1 Press the 5 key to replace the bracket with a blinking figure.
- 2 Use the following keys as cursors: 2 (up), 4 (left), and 8 (down).
- 3 Try to find the secret combination of figures.

To copy a figure from a previously accepted row, start scrolling with the 4 key, move the cursor to the desired figure in the normal way, and accept the selection with the 5 key.

- 4 Once you think you have the right combination, press the \* key.

The result is presented as a set of marks over the row. A correct figure in the right place displays a rectangle. A correct figure in the wrong place displays a line.

The game ends when all the figures are correct and in the right place.

## • Rotation

This game asks you to put numbers in ascending order, as quickly as possible. At the beginning of this game, you see various numbers, four of which are surrounded by a box.

- 1 Use the following keys as cursors: 2 (up), 4 (left), 6 (right), and 8 (down).
- 2 Move the box up, left, right, and down.
- 3 Within the box, use the 1 key to rotate the numbers counter-clockwise, and use the 3 or 5 key to rotate the numbers clockwise.

The more quickly you put the numbers in order, the higher your score. The higher the level at which you play, the more time you have to complete a game.

## 18. Reference information

- Batteries, chargers, and accessories

This section provides information about the phone's batteries, accessories, and chargers. Be aware that the information in this section is subject to change as the batteries, chargers, and accessories change.

This phone is intended for use when supplied with power from an ACP-7U, an ACP-8U, LCH-8, or an LCH-9. Other usage could invalidate any approval given to this apparatus and might be dangerous.



**Warning!** When you purchase batteries, chargers, and accessories for your phone, use *only* batteries, chargers, and accessories that have received approval from the phone's manufacturer. The use of any other type of phone-related hardware will invalidate any approval or warranty applying to the phone, and could also be dangerous. For availability of approved batteries, chargers, and accessories, check with your dealer.

- When the battery is fully charged, the indicator will tell you that the battery is fully charged.
- When you are not using a charger, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging could shorten its lifespan. If left unused, a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge. Therefore, allow it to cool down or warm up before trying to charge it.

#### *Reference information*

When the battery is running out of power and your phone only has a few minutes of talk time remaining, a warning tone sounds and the Battery low message appears briefly. When no more talk time is left, a warning tone is sounded and the phone switches itself off.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object, like a coin, a clip, or a pen causes a direct connection of the + and - terminals of the battery, which are metal strips on the back of the battery.

An example of short-circuiting could occur if you carry a spare battery in your pocket or purse, where the battery could come into contact with such objects like a coin. Short-circuiting could damage either the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in either summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15 C and 25 C (59 F and 77 F).

A phone with a hot or cold battery might not work temporarily, even if the battery is fully charged. The performance of Li-Ion batteries is particularly limited in temperatures below 0 C (32 F).

The following list provides a guideline that you can follow:

- When the operating time (talk time and standby time) is noticeably shorter than normal, buy a new battery.
- Use the battery only for its intended purpose.
- Never use any charger or battery that is damaged and/or worn out.
- Batteries must be recycled or disposed of properly. Do not dispose of batteries by putting them in fire!
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

- ## Important safety information

This section provides additional safety information. A brief overview of safety can be found in "For your safety" on page 1.

### Traffic safety

Do not use a hand-held telephone while driving a vehicle. Always park the vehicle before using the phone.

After completing your phone conversation, always secure the phone back into its holder; do not place the phone on the passenger seat or place it where it can break loose in a collision or during a sudden stop.

**Note:** The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.

**Remember:** Safety—Your most important call.

### Operating environment

Remember to follow any special regulations that are in force in any area, and always switch off your phone wherever it is forbidden to use it. Otherwise, the use of your phone could cause interference or danger.

When connecting the phone or any accessory to another device, read the associated user guide first and obtain detailed safety instructions.

**Note:** Do not connect incompatible products.

As with other mobile radio transmitting equipment, you are advised that, for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the phone should only be used in the normal operating position. This position is when the phone is held to your ear with the antenna pointing over your shoulder.

## Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment might not be shielded against the RF signals from your wireless phone. The following four subsections provide more information about this topic.

### Pacemakers

Pacemaker manufacturers recommend that a minimum separation of six inches (20 cm.) should be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- should always keep the phone more than six inches (20 cm) from their pacemaker when the phone is switched on
- should not carry the phone in a breast pocket
- should use the ear opposite the pacemaker to minimize the potential for interference

**Note:** If you have any reason to suspect that interference is taking place, switch off your phone immediately.

### Hearing aids

Some digital wireless phones could interfere with some hearing aids. In the event of such interference, you might want to consult your service provider.

### Other medical devices

Operation of any radio transmitting equipment, including cellular phones, could interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy. Also contact these authorities if you have any questions.

Switch off your phone in health care facilities or where any posted regulations instruct you to do so. Hospitals or health care facilities could be using equipment that is sensitive to external RF energy.

### **Vehicles**

RF signals could improperly affect installed or inadequately shielded electronic systems in motor vehicles. These could include electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, or air bag systems.

Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### **Posted facilities**

Switch your phone off in any facility where posted notices so require.

## **Potentially explosive atmospheres**

Switch off your phone if you are in any area that has a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or even death.

You are advised to switch off the phone while at a refueling point (service station). And, you are reminded of the need to observe restrictions regarding the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often—but not always—clearly marked. These areas include the following: below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

## Vehicles

Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service could be dangerous and might invalidate any warranty that could apply to the unit.

Regularly check that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts, or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both the installed or the portable wireless equipment, in the area over the air bag or in the air bag deployment area. If the in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.

Failure to observe these instructions could lead to the suspension or the denial of telephone services to the offender, or it could result in legal action, or both scenarios could apply.

- ## Emergency calls



### IMPORTANT!

This phone, like any wireless phone, operates using radio signals, wireless and landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should *never* rely solely on any wireless phone for essential communications (e.g. medical emergencies).

Remember, to make or receive any calls, the phone must be switched on and be used in a service area that has adequate signal strength. Emergency calls might not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

Always ensure that your phone is properly charged before attempting any emergency calls. If you allow your battery to become empty, you will be unable to receive or make calls, including emergency calls. You must then wait a few minutes after the charging begins to place any emergency calls.

## Make an emergency call

- 1 If the phone is not on, switch it on.
- 2 Enter the emergency number for your present location (for example, 911 or any other official emergency number—emergency numbers vary by location).
- 3 Press .

If certain features are in use (Keyguard, fixed dialing, restrict calls, and so on), you might first need to turn those features off before you can make an emergency call. Consult this guide and your local cellular service provider.

### *Reference information*

When making an emergency call, remember to give all of the necessary information as accurately as possible. Remember that your wireless phone might be the only means of communication at the scene of an accident—do not terminate the call until given permission to do so.

## Radio frequency (RF) signals

Your wireless handheld portable telephone is a low-power radio transmitter and receiver. When it is on, it receives and sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines that included safety levels for handheld wireless phones. Those guidelines are consistent with safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992)\*, NCRP Report 86 (1986)\*, ICNIRP (1996)\*.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

\*American National Standards Institute, National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

## Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and allow you to enjoy this product for many years.

When using your phone, battery, charger, or any accessory:

- Keep it and all its parts and accessories out of the reach of small children.

- Keep it dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits.
- Do not use or store it in dusty, dirty areas as its moving parts can be damaged.
- Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store it in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which could damage the phone's electronic circuit boards.
- Do not attempt to open it. Non-expert handling of the device could damage it.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth that has been slightly dampened in a mild soap-and-water solution.
- Do not paint it. Paint can clog the device's moving parts and prevent proper operation.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

- **Accessories**

If you want to enhance your phone's functionality, a range of accessories is available for you. You can select any of these items to help accommodate your specific communication needs. For availability of these and other accessories, contact your service provider.



#### **A few practical rules for accessory operation**

- Keep all accessories out of reach of small children.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that any vehicle-installed accessories are mounted and are operating properly.
- Installation of any complex car accessories *must* be made by qualified personnel only.
- Use only batteries, chargers, and accessories that have been approved by the phone manufacturer. The use of any other types could invalidate any approval or warranty applying to the phone, and could be dangerous.

## • Battery

This section provides information about the phone's battery. Be aware that the information in this section is subject to change.

**Note:** This is a lithium ion (Li-Ion) battery. Dispose of used batteries in accordance with any local regulations.

The tables shown in this section provide information about battery options that are available for your phone, charging times with the Rapid Travel Charger (ACP-8U), the Standard Travel Charger (ACP-7U), talk times, and standby times. Consult your service provider for more information.

**Note:** The charging times listed in the next section are approximate.

### Charging times

| Battery Option               | ACP-7U Charger | ACP-8U Charger |
|------------------------------|----------------|----------------|
| BLB-3 Li-ion Battery 900 mAh | 2 hrs 40 min   | 65 min         |

- The times displayed above allow your battery to obtain approximately 80% of its capacity. When this happens, the battery scroll bars on your phone's screen stop scrolling.
- If you want to obtain 100% battery capacity, allow another 2 hours for a "trickle" or "maintenance" charge.

## Standby and talk times

| Battery Option               | Digital Talk Time  | Analog Talk Time  | Standby Time        |
|------------------------------|--------------------|-------------------|---------------------|
| BLB-3 Li-ion Battery 900 mAh | 120 min to 200 min | 60 min to 112 min | 96 to 200 hrs (dig) |

The above times are approximate. Battery operation times vary according to signal conditions, network parameters that are set by the service provider, and how you use your phone.

## • Chargers and other accessories

This section provides information about the phone's chargers and accessories. Be aware that the information in this section is subject to change as the chargers and accessories change.

The chargers and accessories that are described in this section are available for your phone. Contact your dealer for details. Also, refer to the accessories brochure that was included in your sales package for the entire line of Nokia Original Accessories.

 
### When a charger is not in use

- When a charger is not in use, disconnect it from the power source.
- Do not leave the battery connected to a charger for longer than a week, since overcharging the battery could shorten its lifespan. If left unused, a fully charged battery will discharge itself over time.

## Standard Travel Charger (ACP-7U)

This is a lightweight (187g) and durable AC charger.

- To use the Standard Travel Charger, plug it into a wall outlet and connect the lead from the charger to the base of your phone.

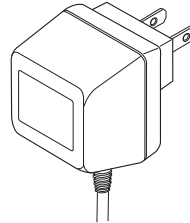


## Rapid Travel Charger (ACP-8)

This is a lightweight (100g) and durable AC charger. Calls can be made during charging, even with a fully discharged battery.

- To use the Rapid Travel Charger (ACP-8), plug it into a standard 120V or 220V AC wall outlet, and connect the lead from the charger to the base of your phone.

 
The charger can also be used together with the optional Desktop Charging Stand. Approximate charging times for discharged batteries are shown in “Charging times” on page 114.

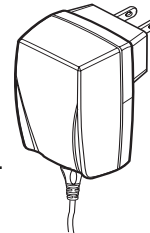

## Rapid Cigarette Lighter Charger (LCH-9)

You can charge your phone's battery from your vehicle battery by using the Rapid Cigarette Lighter Charger (LCH-9). You can also use this lightweight charger with the Desktop Charging Stand.

 Calls are possible during charging. A green light indicates that the charger is ready for charging (when not charging) or finished charging (if it has been charging). The battery charging times are the same as those for the Rapid Travel Charger (ACP-8).

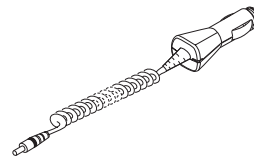

#### Reference information

The input voltage range is from 11 to 32V DC, negative grounding. Avoid prolonged charging with the Rapid Cigarette Lighter Charger (LCH-9) when the car engine is not running; this could cause your car battery to drain. Note also, that in some cars, the cigarette lighter plug is not provided with electricity if the ignition is not switched on.

### Desktop Charging Stand (DCV-11)

Used together with the Standard Travel Charger (ACP-7U) or the Rapid Travel Charger (ACP-8U), the Desktop Charging Stand is an economical choice when you need your phone close at hand, always ready for calls.

This charging stand allows you to charge your phone's battery in an upright, obtainable position on your desk.

- Charging is indicated by the scrolling battery bars that are located on the right side of your phone's Start screen.
- When the scrolling stops, the battery is approximately 80% charged. The battery is fully charged a couple of hours after this time.

## • Troubleshooting

This section provides a table that lists some of the most commonly-encountered problems and provides possible solutions.

| Problem                  | Possible cause                                        | Possible solution                                |
|--------------------------|-------------------------------------------------------|--------------------------------------------------|
| My phone isn't charging. | The charger and the phone are not properly connected. | Securely connect the charger to the phone.       |
|                          | The charger is not properly plugged in.               | Ensure that the charger is plugged in correctly. |

| Problem                                          | Possible cause                                                     | Possible solution                                |
|--------------------------------------------------|--------------------------------------------------------------------|--------------------------------------------------|
| My phone isn't making/answering calls.           | The battery is not charged.                                        | Charge the battery.                              |
|                                                  | The signal strength is poor.                                       | If you are indoors, move toward a window.        |
| I can't listen to my voice messages.             | You don't have voice mail service.                                 | Call your wireless service provider.             |
| I can't listen to my voice messages. (continued) | You have not set up your voice mailbox with your service provider. | Call your wireless service provider.             |
|                                                  | You have not saved your voice mail number in your phone.           | Refer to "Set up your voice mailbox" on page 31. |
|                                                  | The voice mail number you have saved is incorrect.                 | Call your wireless service provider.             |
|                                                  | You have forgotten your password or are entering it incorrectly.   | Call your wireless service provider.             |

## 19. Frequently Asked Questions (FAQ)

This section lists and answers the questions that you most frequently ask. Where necessary, the answers refer you to the appropriate text within this guide.

**Note:** Some of the answers tell you to use menu shortcuts. For a complete listing of these shortcuts, refer to “List of shortcuts” on page 18.

**Q.** How do I lock my phone?

**A.** Press Menu 4 > 3 > 2 > 1 (Menu > Settings > Security settings > access codes), enter your lock code, scroll to On, and press OK.

**Q.** How do I unlock my phone?

**A.** Press Menu 4 > 3 > 2 > 1 (Menu > Settings > Security settings > access codes), enter your lock code, scroll to Off, and press OK.

**Q.** What is my lock code?

**A.** The lock code enables you to lock your phone, thus preventing someone else from using it. The default lock code is 1234. However, it is suggested that you change this code immediately.

**Q.** What is my security code?

**A.** The default security code is 12345. However, it is suggested that you change this code immediately. Certain features can be used *only* after the correct security code has been successfully entered.

Q. How do I lock the keypad?

A. There are three ways you can lock the keypad: press and hold , press Menu , or from the Start screen, press Menu > 9 (Menu > Keyguard). The term Keyguard is also used in connection with this feature.

Q. How do I unlock the keypad?

A. There are two ways you can unlock the keypad: press and hold , and then press OK, or press Unlock and OK. The term Keyguard is also used in connection with this feature.

Q. How do I make the ringing louder?

A. Press Menu 3 > 1 > 2 > 2 (Menu > Profiles > Normal > Customize > Ringing volume), then choose a volume level.

Q. How do I change the ringing tone?

A. Press Menu 3 (Menu > Profiles) and scroll through the list of profiles until you find the one for which you want to set the ringing tone, then press Options.

- Highlight Customize and press OK.
- Scroll to Ringing tones, then press Select.
- Scroll through the options. After you hear the tone you want to use, press OK.

Q. How do I store my voice mailbox number?

A. Press Menu, enter your voice mailbox phone number, and press OK. The screen tells you that the number is saved. Then the following message appears: Save hidden voice mailbox password? Press Yes to save this number.

### *Frequently Asked Questions (FAQ)*

This voice mailbox number is valid unless your phone number changes. If your phone number changes, you will have to save a new voice mailbox number.

**Q. How do I call my voice mailbox number (retrieve voice messages)?**

When your phone alerts you to new voice messages, press Listen and follow the prompts. If you'd rather listen to your messages later, press Exit.

To listen to your voice messages at a later time, perform one of the following actions:

- Press and hold the 1 key.
- Press Menu 1 > 2 > > 1 (Messages > Voice messages > Listen to voice messages). The message Calling voice mailbox appears on the screen. Follow the prompts to access your messages.

**Q. How do I find my phone's model number?**

- A. Turn your phone off, then remove the battery from the back of the phone. On the sticker that is on the rear cover, after the word **Model**, your phone's model number is printed.

**Q. How do I redial the last-dialed number.**

- A. Press and hold , or you can press  twice, quickly.

**Q. How do I assign a key to 1-touch dialing?**

- A. Press Names and scroll to 1-touch dialing.

Press Select.

Use  or  to scroll to the first number that includes the message (empty) and press Assign.

Use  or  to scroll to the name/number to which you want to assign to this key and press Select.

Repeat these steps as many times as necessary.

Q. How do I find out how many memory locations the phone has?

A. Press Names and scroll to Options.

Press Select.

Scroll to Memory status and press Select again. A message appears that says Phone: xx free, xx in use where xx indicates the amount of memory locations.

Q. How do I find my phone's ESN (electronic serial number)?

A. Turn your phone off, then remove the battery from the back of the phone. On the sticker that is on the rear cover, after the letters ESN, your phone's ESN is printed.

Q. How can I change the contrast of my phone's display?

A. The contrast of your phone's display is fixed and *cannot* be changed.

Q. How do I clear my call timers?

A. **WARNING:** The clearing of call timers *cannot* be undone.

Press Menu 2 5 5 and when the Security code field appears, enter your security code and press OK.

## 20. Glossary

This section lists various terms and provides definitions.

|                                |                                                                                                                                                                        |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| antenna                        | The portion of the phone that sends or receives radio signals.                                                                                                         |
| battery                        | The power source for the phone.                                                                                                                                        |
| call forwarding                | A network services feature that enables you to forward incoming calls to another number.                                                                               |
| call waiting                   | A network services feature that enables your phone to beep in while you are in the midst of a call. This beep alerts you to the fact that someone else is calling you. |
| caller ID                      | A network services feature that identifies incoming calls.                                                                                                             |
| digital/analog selection       | A network services feature that enables you to switch your phone between digital and analog modes. This feature is available only for certain phones.                  |
| electronic serial number (ESN) | The identification number that is assigned to the phone.                                                                                                               |
| home system                    | The system in which your phone works without having to roam.                                                                                                           |

|                    |                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| icons              | <p>Small pictures that appear on your phone's screen and are representative of something.</p> <p>For example, the  icon indicates that you can enter alpha text into a specific field.</p>                                                                                                                                     |
| keys               | <p>Any key that appears on the phone. There are many types of keys. For example, the  key is a number key; the  key is a selection key.</p> <p>The Power key turns the phone on and off.</p>                                                 |
| keypad tones       | See <i>tones</i> .                                                                                                                                                                                                                                                                                                                                                                                              |
| message alert tone | See <i>tones</i> .                                                                                                                                                                                                                                                                                                                                                                                              |
| microphone         | The place on your phone into which you speak.                                                                                                                                                                                                                                                                                                                                                                   |
| network services   | <p>Special services to which your wireless service provider can give you access. These include:</p> <ul style="list-style-type: none"> <li>• Call forwarding</li> <li>• Call waiting</li> <li>• Caller ID</li> <li>• Digital/analog selection</li> <li>• Public system selection</li> <li>• Send own number</li> <li>• Selecting a phone system (NAM)</li> <li>• Voice mail</li> <li>• Voice privacy</li> </ul> |
| page               | A type of text message in which either a name, or a name and phone number, appears on the phone's Start screen.                                                                                                                                                                                                                                                                                                 |

## Glossary

|                             |                                                                                                                                                                                                                                                                                                      |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| public system selection     | A network services feature that enables you to switch from the default public system (home system) your phone uses to either a private or a residential system.                                                                                                                                      |
| ringing tone                | See <i>tones</i> .                                                                                                                                                                                                                                                                                   |
| ringing volume              | The volume level at which your phone rings. You can set this level to ring more or less loudly.                                                                                                                                                                                                      |
| roaming                     | Occurs when you take your phone to an area that is outside of your home system.                                                                                                                                                                                                                      |
| scroll                      | The act of moving through a list that is displayed on your phone, such as a menu list or a listing of phone numbers.                                                                                                                                                                                 |
| sending own number          | A network services feature that enables you to determine, on a per-call basis, whether you want your telephone number to display on another phone's caller ID.                                                                                                                                       |
| Selecting a NAM             | A network services feature that enables you to associate a number with your public (home) system.                                                                                                                                                                                                    |
| short message service (SMS) | <p>The feature that enables the phone to receive short text messages. Depending upon the service provider and their network capabilities, the message can be anywhere from 140 to 240 characters.</p> <p>This phone uses both MT-SMS (mobile terminated SMS) and MO-SMS (mobile originated SMS).</p> |

|                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| short message service ( <i>more</i> ) | <p>MO-SMS mean that you can receive text messages and reply to them. MT-SMS means that you can receive text messages from external sources, but you cannot reply to these messages.</p> <p>Since this phone uses both types of SMS, the MO-SMS overrides the MT-SMS. Therefore, you can reply to messages.</p>                                                                                                                                                                                                       |
| Start screen                          | The window on your phone on which information is displayed—phone numbers, text messages, icons, menu options, and more.                                                                                                                                                                                                                                                                                                                                                                                              |
| system                                | <p>A wireless network in which your phone works. There are three types of systems: residential, private, and public.</p> <p>The public system is also known as a home system, and it is in this system that your phone works. If you take your phone outside of this system, roaming occurs.</p>                                                                                                                                                                                                                     |
| tones                                 | <p>Sounds that the phone uses to indicate the sound:</p> <ul style="list-style-type: none"> <li>• When you press a key—keypad tone</li> <li>• When you receive a text message—message alert tone</li> <li>• When you receive a call—ringing tone</li> <li>• When a warning condition occurs (such as when a battery runs low) or when you're playing a game—warning and game tones</li> </ul> <p>You can choose the way the tone sounds. For example, you can choose a short ring, an ascending ring, or a beep.</p> |

## Glossary

|                        |                                                                                                                                                                                                                                           |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| voice mail             | A network services feature that enables people who call and miss you to leave a voice message on your phone. You can then retrieve these messages from your voice mailbox.                                                                |
| voice mailbox          | The area of the phone that collects and save the voice messages left by those who call and miss you.                                                                                                                                      |
| voice privacy          | A network services feature that encrypts the voice channel so that people cannot eavesdrop on your phone conversations.                                                                                                                   |
| volume                 | <p>The volume level you set for the earpiece. This controls how loud the sound is in the earpiece.</p> <p>You can adjust the volume (while in a call or at any time) by pressing the volume keys on the upper left side of the phone.</p> |
| warning and game tones | See <i>tones</i> .                                                                                                                                                                                                                        |

## 21. Technical Information

|                          |                                                                                                                                 |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Weight                   | 96.9g (3.41 oz) with BLB-3 900 mAh Li-ion Battery                                                                               |
| Size                     | 85 cc                                                                                                                           |
| Frequency Range          | Lowband824.04 - 848.97 MHz (TX)<br>869.04 - 893.97 MHz (RX)<br>Highband1850.04 - 1909.92 MHz (TX)<br>1930.08 - 1989.96 MHz (RX) |
| Transmitter Output Power | Up to 600mW                                                                                                                     |
| Battery Voltage          | 3.6 V nominal                                                                                                                   |
| Operating Temperature    | -4°F to + 104°F<br>(-20°C to + 40°C)                                                                                            |
| Number of Channels       | 832 lowband<br>1997 highband                                                                                                    |
| Number of NAMs           | 3                                                                                                                               |
| Memory Locations         | 250                                                                                                                             |
| Memory Capacity          | Alpha: 26 digits per location<br>Numeric: 32 digits per location                                                                |

*Technical Information*

USA

NOKIA MOBILE PHONES – 7725 Woodland Center Boulevard, Suite 150,  
Tampa, FL 33614

Tel: 1-888-NOKIA2U (1-888-665-4228)

Fax: (1) 813-249-9619

TTY: 1-800-24NOKIA (1-800-246-6542)

CANADA

NOKIA PRODUCTS LTD. – 575 Westney Rd. South,  
Ajax, Ontario L1S 4N7. Tel: (905) 427-6654

The information contained in this user guide was written for dual-mode TDMA and AMPS phones. The right to make changes and improvements to any of the products described in this guide without prior notice is reserved.

Issue No. 1      Printed in Canada      01/00

©2000 Nokia Mobile Phones. All rights reserved.

Nokia is a trademark of Nokia Corporation and/or its affiliates.

## 22. NOKIA One-Year Limited Warranty

Nokia Mobile Phones, Inc. ("NMP") warrants that this cellular phone ("Product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

1. The limited warranty for the Product extends for ONE (1) year beginning on the date of the purchase of the Product.
2. The limited warranty extends to the original purchaser of the Product ("Consumer") and is not assignable or transferable to any subsequent purchaser/end-user.
3. The limited warranty extends only to Consumers who purchase the Product in the United States.
4. During the limited warranty period, NMP will repair, or replace, at NMP's option, any defective parts, or any parts that will not properly operate for their intended use with new or factory rebuilt replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Consumer for any such parts. NMP will also pay for the labor charges incurred by NMP in repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts. NMP's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Consumer returns the Product for repair, determined by the price paid by the Consumer for the Product less a reasonable amount for usage. NMP shall not be liable for any other losses or damages. These remedies are the Consumer's exclusive remedies for breach of warranty.

*NOKIA One-Year Limited Warranty*

5. Upon request from NMP, the Consumer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.

6. The Consumer shall bear the cost of shipping the Product to NMP in Melbourne, Florida. NMP shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.

7. The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:

a) The Product has been subject to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of NMP, including damage caused by shipping.

b) The Product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, or damage caused by the connection to other products not recommended for interconnection by NMP.

c) NMP was not advised by the Consumer in writing of the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.

d) The Product serial number plate or the accessory data code has been removed, defaced or altered.

e) The defect or damage was caused by the defective function of the cellular system or by inadequate signal reception by the external antenna.

8. If a problem develops during the limited warranty period, the Consumer shall take the following step-by-step procedure:

a) The Consumer shall return the Product to the place of purchase for repair or replacement processing.

b) If "a" is not convenient because of distance (more than 50 miles) or for other good cause, the Consumer shall ship the Product prepaid and insured to:

Nokia Mobile Phones, Inc.  
Attn: Repair Department  
795 West Nasa Blvd.  
Melbourne, FL. 32901

c) The Consumer shall include a return address, daytime phone number and/or fax number, complete description of the problem, proof of purchase and service agreement (if applicable). Expenses related to removing the Product from an installation are not covered under this limited warranty.

d) The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer will be responsible for any expenses related to reinstallation of the Product.

e) NMP will repair or authorize the repair of the Product under the limited warranty within 30 days after receipt of the Product by NMP or an NMP authorized service center. If NMP cannot perform repair covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, NMP at its option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage.

f) If the Product is returned to NMP during the limited warranty period, but the problem with the Product is not covered under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned to NMP after the expiration of the limited warranty period, NMP's normal service policies shall apply and the Consumer will be responsible for all shipping charges.

# Index

## Numerics

1-touch dialing 61

## A

ABC text entry 77

ABC text entry mode 22

accessories 113

accessories, operating 113

adding names and numbers 27

alarm

    snoozing a calendar alarm 93

alarm clock 97

    setting 97

    turn off altogether 98

    turning off or snoozing 97

answering a call 14

answering calls automatically 57

automatic answer 57

## B

battery 114

    chargers 115

    charging 6

    installing 5

    removing 6

    standby and talk times 115

battery power indicator 11, 12

business cards 95

## C, D

calculator 98

calendar 87

    creating a note 88

    erasing notes 93

    turning off alarms 93

    viewing 87

calendar notes

    receiving 94

    sending 94

calendar notes, viewing 92

call forwarding 41

    activating 42

    store the feature code 41

call lists, clearing 35

call log 33

    checking 33

call timer

    clearing 37

    turning on 37

call timers, checking 36

call waiting 39

    activating 39

    storing the feature code 39

    using 40

caller groups

    adding names 63

    assigning ringing tone 64

    display graphics 65

    rename 64

caller groups with caller ID 63

caller ID 15

    Send own number or block 46

calling cards 43

- choosing 45
- using 46
- calls
  - answering 14
  - making 14
  - restricting incoming and outgoing 71
- chargers 115
- clock
  - changing time format (am/pm, 24-hour) 59
  - display on screen 60
  - set 59
- conference calls 40
- currency conversion 99
- digital/analog selection 20, 48

## E, F

- earpiece volume 15
- emergency calls 2, 110
- emergency key 9 62
- end key 8
- erasing stored numbers 29
- exchange rate, calculating 100

## G

- game tones 56
- games 101
  - logic 102
  - Memory 101
  - rotation 103
  - Snake 102
- glossary of terms 123

## H

- handset volume indicator 11
- handset volume marker 12

## I, J

- icons on the screen 11, 12, 13
- in-call options 38

## K

- keyguard 70
- keypad tones, setting 55
- keypad, locking 70
- keys 8, 9
  - Power 9
  - scroll 10
  - selection 10
- keys on the phone 7

## L

- language, setting the phone 59
- letters
  - ABC entry method 22
  - enter 22
  - uppercase and lowercase 23
- lights, setting (car kit only) 57
- listening to voice messages 32
- lock code 67

## M

- maintenance 111
- making a call 14
- memory 84

memory status, checking 30

menus

    navigate 17

    phone book 25

    scroll 17

    shortcuts 17

Menus, navigating using the scroll

method 17

message alert tone 56

missed calls, checking 34

## N

NAM 47

names

    editing 23

network services

    need to subscribe 3

    setting 73

Nokia

    contacting 4

    Customer Service 4

    World Wide Web 3

numbers

    enter 24

    special characters 24

## O

one-touch dialing 61

## P

personal assistant 87

phone

    accessories 113

    maintenance 111

    protecting with lock code 67

    reference information 104

    safety guidelines 106

    security 66

phone book 25

    adding names and numbers 27

    changing stored numbers 27

    erasing entries 29

    erasing whole 30

    menus 25

    unique entries 25

    views 26

phone safety guidelines 1, 2

phone system

    selecting 74

    selecting (NAM) 47

    selecting automatically 74

    selecting different 74

    selecting manually 74

    selecting public 75

    switching from private to public  
    76

Power key 9

predictive text

    character counter 79

predictive text input

    keys and tools 79

    turning off 79

    turning on 78

    using 78

previously dialed calls, checking 35

profiles

    customizing 52

    list 51

    renaming 58

- selecting different 51
- punctuation 23

## Q

- questions, frequently asked 119

## R

- radio frequency (RF) signals 111
- received calls, checking 35
- redialing automatically 43
- redialing same number 15, 28
- reference information 104
- restoring factory settings 58
- restricting incoming and outgoing calls 71
- ringing options 53
- ringing tone 54
- ringing tones, downloading 96
- ringing volume 54
- roaming 76
  - HOME 76
  - indicators 76

## S

- safety 1
- scroll bar 11
- scroll keys 9, 10
- Scrolling method 17
- security 66
- security code 66
  - changing 66
  - preset (default) 66
- service provider
  - contacting 4

- settings
  - restoring factory defaults 58
- shortcut
  - method 17
- shortcuts
  - list 18
- signal strength 11
- signal strength indicator 11
- special characters 23
- Start screen 9

## T, U

- talk key 8
- terms used in this guide 123
- text messages
  - erasing 85
  - forwarding 85
  - receiving 83
  - resending from the outbox 82
  - sending 81
  - sending and receiving 77
  - writing 77
- touch tones
  - setting 49
  - setting length 49
  - storing sequences (strings) 50
- troubleshooting 117
- troubleshooting (FAQs) 119

## V

- vibrating alert 55
- voice mail 31
  - greetings and passwords 32
  - listening to messages 32

- message received 31
  - setting up 31
- voice privacy 16

## W, X, Y, Z

- warning tones 56
- welcome note, adding 60

