



HANDBAND QUICK START

MANUAL

MI-021-05, MI-021-06, MI-021-07,
MI-021-08, MI-021-09, MI-021-10

WARNINGS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

PARENTS - We recommend that the transformer is periodically examined for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions are present, the transformer should not be used until properly repaired.

POWER ADAPTER INSTRUCTIONS AND CARE

Power Source - Operate this product using only the power source indicated on its marking label. If you are not sure of your home's power type, consult your product dealer or local power company.

Power Cord Protection – Route the power supply cord so it is not likely to be walked on or pinched by items placed on or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

TABLE OF CONTENTS

	Page
Introduction	4
Package Contents	4
Battery Placement and Recharging	4
Taking Care of Your HandBand™	8
Using your HandBand™	8
Demo Songs	9

Introduction

Thank you for your purchase of the HandBand™. We hope that you will enjoy hours of family entertainment with this product.

Package Contents

- 1 Pair of HandBand Gloves
- 1 Speaker Box
- 1 DC Adapter
- 1 Audio-Cable
- 1 Instructional CD-ROM
- 1 Quick Start Manual


Battery Placement and Recharging

The first thing to do after you unpack your HandBand™ is to install the batteries in the speaker box and make sure that the batteries in the gloves are fully charged.

Speaker Battery Placement:

1. Make sure the power of the speaker is off.

2. Unscrew one of the battery doors and install / replace 2 AA batteries as indicated by the diagrams.

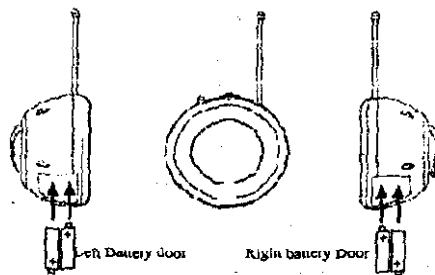

3. Replace the battery door and screw in place.
4. Repeat steps 2 and 3 with the other battery door.

Recharging the Glove Battery (recommended to be done by an Adult):

1. Make sure the power of both gloves is turned off.
2. Insert one of the DC jacks to one of the gloves (DO NOT Plug the adaptor first!)
3. Repeat Step 2 for the other glove.
4. Plug the Adaptor to the AC outlet.
5. The gloves will need to be charged for at least 4 hours. Please disconnect after this time. NOTE: When charging for the first time, please charge for at least 12 hours.

BATTERY AND RECHARGING ADAPTOR PRECAUTIONS:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc).
- Do not use rechargeable batteries unless otherwise stated.
- Adaptors or battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this transformer or battery charger until the damage has been repaired.
- The toy is not to be connected to more than the recommended number of power supplies.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Drained out batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not intended for children under 3 years old.
- The toy must only be used with the recommended transformer.
- The transformer is not a toy.
- Toys liable to be cleaned with liquid are to be disconnected from the transformer before cleaning.

Taking Care of Your HandBand™

If you need to clean you HandBand™ follow the following guidelines:

1. Only use a clean soft cloth to clean the unit.
2. Do not use any solvent to clean the unit.
3. Do not immerse in water.
4. Unplug the adapter before cleaning.

Using your HandBand™


Once the batteries are installed in the speaker and charged in the gloves you will be able to start using your HandBand™.

1. Clip the speaker to your belt and put on the gloves.
2. Turn on both gloves and the speaker.
3. Select if you are going to play on a surface (table) or on the air by sliding the switch on the speaker correspondingly.
4. Select the instrument you want to play by pressing the instrument button on the right hand console.
5. Start Playing.

For further information please watch the included instructional CD-ROM.

Demo Songs

Following you will find six songs that you can play with your HandBand™. For additional songs look for the official HandBand™ Songbook.

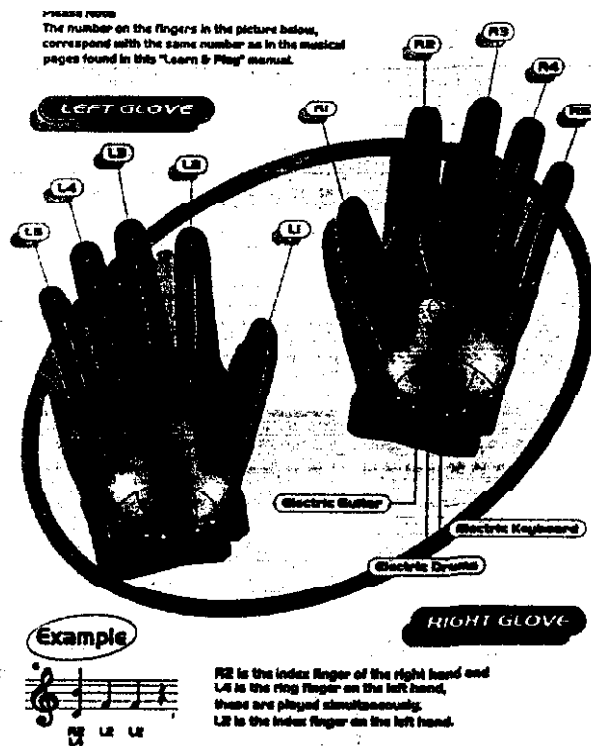

Drum Songs:

1st Drum Lesson

Play at your own pace

[illegible]

2nd Drum Lesson

Play at your own pace

Drum notation for the 2nd Drum Lesson, consisting of four staves. The notation uses letters R, L, and S to represent different drum parts, with numbers indicating the count or measure. The first staff contains 16 measures of notation. The second staff contains 16 measures of notation. The third staff contains 16 measures of notation. The fourth staff contains 16 measures of notation.

Staff 1: R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2

Staff 2: R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2

Staff 3: R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2

Staff 4: R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2 R2

Guitar Songs:

Horse Ride

Play with Drum FR 3

The musical score for 'Horse Ride' is written for guitar in standard notation. It consists of seven staves, each with a treble clef and a key signature of one sharp (F#). The music is in 4/4 time. The notation includes various rhythmic values (quarter, eighth, and sixteenth notes) and rests. Below the notes, there are fingerings indicated by numbers 1 through 5. The score is divided into measures by vertical bar lines. The first staff begins with a treble clef and a key signature of one sharp. The music is written in a style that suggests a folk or country influence, with a steady, rhythmic melody. The score ends with a double bar line and repeat dots.

Traveling South

Play with Drum Set 1

R1 R1 R1 R1 R1 R2 R2 R2 R2 R4 R2 R2 R2 R2 R4 R2 R1 R1 R1 R1
 R1 R1 R1 R1 R1 R2 R2 R2 R2 R4 R2 R2 R2 R1 R1 R1 R2 R1 L5 L4
 R4 R2 L5 L2 R4 R2 L4 L2 R2 R1 L5 L4 R1 R1 R1 R1 R1
 R2 R2 R2 R2 R4 R4 R2 R2 R1 R2 R1 R1 R1 R1 L5 L5
 R2 R2 R4 L4 L4 L2 R2 R2 R1 R1 R1 R1 L5 L5 R2 R2 R4 L4 L4 L2
 R2 L4 R2 L4 R1 L5 R1 L5

Keyboard Songs:

Don't Cry Little Girl

The musical score for "Don't Cry Little Girl" is presented in four staves. Each staff contains a sequence of notes with corresponding fingerings and pedaling instructions.

Staff 1: Notes are G4, A4, B4, C5, B4, A4, G4, F#4, E4, D4, C4. Fingerings: L5, R2, R2, R2, L2, R4, R5, R2, L2, R1, R1, R2, R1, R1. Pedaling: L5, L4, L3, L5.

Staff 2: Notes are G4, A4, B4, C5, B4, A4, G4, F#4, E4, D4, C4, B4, A4, G4, F#4, E4, D4, C4. Fingerings: R2, R4, R2, R1, R2, R2, R2, R1, R1, R2, R2, R2, R1, R1. Pedaling: L4, L5, L4, L5, L4, L5.

Staff 3: Notes are G4, A4, B4, C5, B4, A4, G4, F#4, E4, D4, C4, B4, A4, G4, F#4, E4, D4, C4. Fingerings: R1, R2, R1, R1, R2, R1, R2, R1, R1, R5, R1, R1, R1, L5, L5, L5. Pedaling: L5, L5, L4, L5.

Staff 4: Notes are G4, A4, B4, C5, B4, A4, G4, F#4, E4, D4, C4, B4, A4, G4, F#4, E4, D4, C4. Fingerings: R5, R1, R1, R1, L5, L5, L5, R1, R2, R1, R1, L2, L2, L2, L5, L5, L5. Pedaling: L5, L5, L5, L5, L5, L5, L5, L5, L5.

Helping Mom

Play with Drum Fill 3

The musical score consists of six staves of music. Below each staff, there are drum notation patterns. The patterns are as follows:

- Staff 1: R4 R5 R4 R5 R4 R2 R4 R2 R2 R4
- Staff 2: R2 R4 R4 R5 P2 L1 R4 R5 L1 R4 R5 R4 R2
- Staff 3: R4 R2 R2 L1 R2 R4 R5 L1 L1 R1 R2
- Staff 4: R2 L1 L2 L3 L5 L1 P2 P2 P2 R2 R2 R2 R4
- Staff 5: R2 L1 L2 L3 L5 L1 R4 R5 L1 R4 R5 R2 R2 R2 R4
- Staff 6: R2 L1 L2 L3 L5 L1 L1 L1

