

User manual

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE PLAYING AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RADIO CONTROL FREQUENCY

For interference-free results, do not operate this vehicle with other radio-controlled toys not included in this set within transmission range.

TRANSMITTER AND RECEIVER

Since radio waves control this vehicle and in order to avoid interruption, do not operate this vehicle near electrical or telephone lines, CB interference, CD players, mobile phones, elevators, steel girders, other electronic devices and near highways.

INSTALLING THE BATTERIES

- Remember to set the "ON-OFF" switch at bottom of the vehicle to "OFF" position before inserting the batteries.
- Unscrew battery compartment cover to insert batteries in the vehicle as shown in diagram. Make sure all batteries are at the correct polarity.
- Close the cover and tighten the screw.
- To insert battery in the controller, open battery compartment cover to insert battery as shown in diagram.
- Close the cover.
- Do not leave batteries in the vehicle and transmitter when the toy is not in use.
- Do not mix old and new batteries together.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Remove used batteries from the toy.
- To prevent supply terminal are short-circuit, keep battery compartment free of all materials except batteries.
- For best performance, alkaline batteries are recommended.
- Do not dispose of batteries in fire. Batteries may explode or leak.
- Batteries contain mercury, don't put in trash. Recycle or dispose as hazardous waste.

OPERATING THE VEHICLE

- For your safety, never play with this toy on the street.
- Turn the "ON-OFF" switch at the bottom of the vehicle to "ON" position, then the vehicle will be idle.
- Pull the trigger downward on the transmitter, the vehicle will respond in going forward.
- Release the trigger, the vehicle will stop.
- Push the trigger upward on the transmitter, the vehicle will turn in reverse.

OPERATION TIPS

- Operate only on smooth (but not slippery), dry and clean surface.
- Do not play with this toy on grass, sand or carpet.
- Do not drive the toy through water.
- Always point the controller antenna upward for better transmission.
- Do not make any physical contact with the controller antenna while operating.
- Keep the toy in a dry and cool place after playing. Do not leave it directly under sunlight.

CONFORMS TO TOY SAFETY STANDARDS ASTM F963-07

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Prüfbericht - Nr.:
Test Report No.:


14029821 001

Seite 7 von 7
Page 7 of 7

BATTERY INSTRUCTION DIAGRAMS

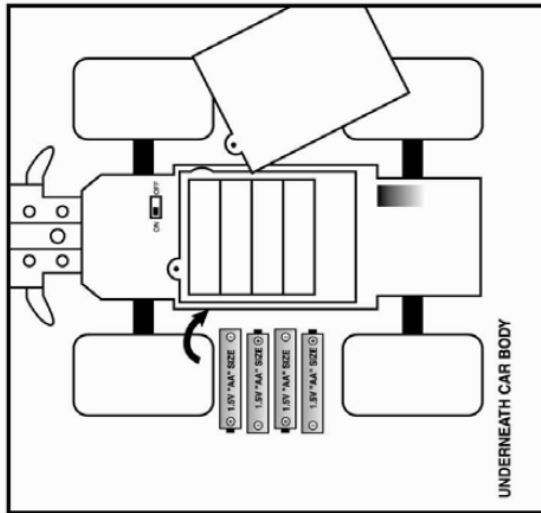

USES 4 X 1.5V "AA" SIZE BATTERIES. (NOT INCLUDED)

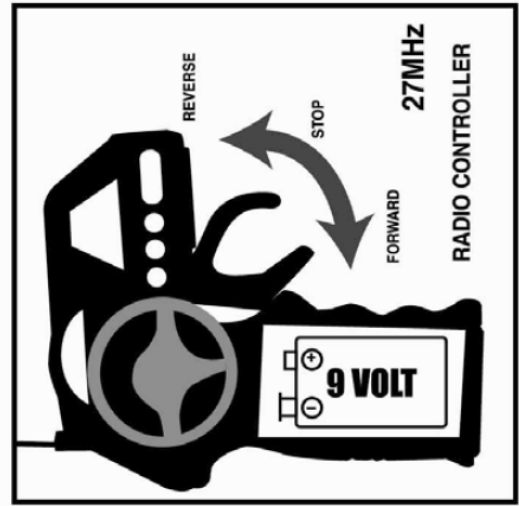

USES 1 X 9V SIZE BATTERY. (NOT INCLUDED)