

EXHIBIT C

User Manual

Getting Start For Using Wireless Keyboard and Mouse

1. Turn off your computer and all attached devices. Before starting up, please follow the direction marked in the battery compartment to insert two AAA batteries into the mouse and two AA batteries into the keyboard.
2. Plug the receiver into the USB port and start up the system.
3. Microsoft® Windows® Millennium Edition and Windows 2000 Professional will automatically recognize the Receiver. Windows 98 will require manual prompting. Click **Next** on all prompts and then click **Finish**.
4. Press one of the Windows keys and confirm customization launch. Move the mouse to confirm movement. If the above does not work, go to step 5. Otherwise, go to step 6.
5. With the USB connector inserted, press the channel search button on the top of the receiver and note the data LED will blink slowly. Press the channel change button on the rear side of mouse/keyboard to a new channel. Note the green LED on the receiver will blink faster to notify a new channel is identified. Press any mouse key (left, right, or middle) /keyboard key button for 1 sec to confirm the channel matching process. Repeat the same process for the keyboard.
6. See your system User's Guide for instructions on how to use your Wireless Mouse and Wireless Keyboard.

FCC GUIDELINES

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, Uses and can radiated radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Frequent Ask Question:

1. Q: Why the keyboard/mouse doesn't work?
A: See step 5 above for the channel matching process.
2. Q: Why the movement of the mouse is not smooth?
A: Current channel may be interfered. See step 5 above to select a new channel.

Printed in Taiwan © Copyright Lite On Group - Silitek Corporation 2001

Microsoft and Windows are trademarks or registered trademarks of the Microsoft Corporation in the United States, other countries or both.