

- This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

**Pre-Play Check Warning:**

- Not suitable for children under 36 months due to small parts. This toy is recommended for children age 6 and over. To ensure play is safe and fun, please review the operating instructions and safety rules with your child.
- Please note the user cannot modify this product.

#### **Battery Installation Transmitter**

- Set the power switch to the "OFF" position
- Remove the screw located on the battery compartment cover and slide the cover down
- Insert 1 x 9 V battery following the correct polarity + / -
- Replace the battery cover and tighten the screw



**IF THE VEHICLE IS NOT OPERATING PROPERLY,  
AFTER CHECKING THE BATTERIES ARE NOT  
THE FAULT, DO NOT RETURN THE VEHICLE TO THE STORE**

FIRST

#### **PLEASE CONTACT THE HITARI HELPLINE FOR FREE ADVICE AND AFTER SALES SERVICE**

TELEPHONE 01582 609853 9AM TO 5PM

**(THE CAR) OR THE TRANSMITTER'S COMPONENTS CAN CAUSE  
A MALFUNCTION AND MIGHT INVALIDATE**

 
**THE WARRANTY AND VOID YOUR AUTHORIZATION TO  
OPERATE THE PRODUCT.**

Please retain the instructions for future reference


**CE**




Remove screw to  
release battery  
cover



Insert Battery  
as indicated  
+ to + & - to -

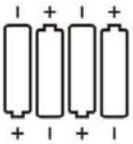

ABC channel selector


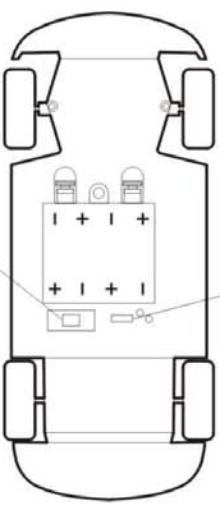


Power switch

**Battery Installation - Vehicle:**

- Set the power switch to the "OFF" position
- Remove the screw located on the underside of the vehicle, pull down the tabs to lift the battery compartment cover off.
- Insert 4 x A.A batteries following the correct polarity + / -
- Replace the battery cover and tighten the screw

Battery holder

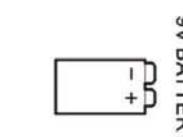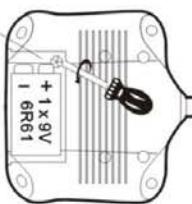

9V BATTERY


- +

Telescopic antenna

## **Operation Instructions**

- Switch the power switch on the transmitter and vehicle to the "ON" position
- Select your desired channel ABC located on the transmitter and the underside of the vehicle. This pairs the player with the vehicle. If more than one vehicle is playing in the same frequency band, the other player or players should also select another available channel. A maximum of 3 vehicles can be played with in the same frequency band.

- Press the **LEFT** control lever for **FORWARD**, **TURBO** or **REVERSE**.
- Press the **RIGHT** control lever for **RIGHT** or **LEFT** turns.
- After you have finished playing, switch the power to the "OFF" position

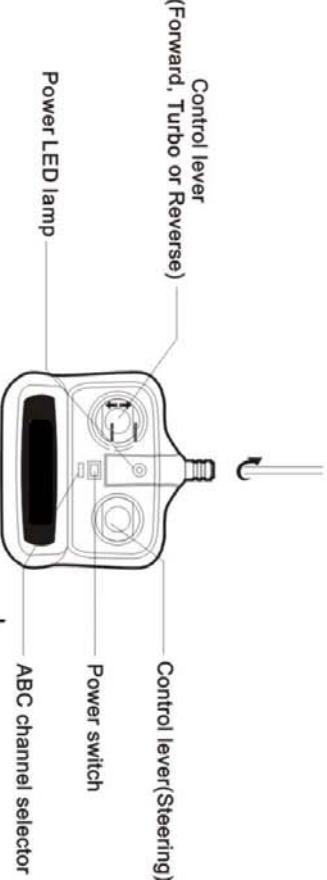

### **Battery Cautions:**

- Read instructions carefully and install the batteries correctly following the correct polarity + / -
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries
- Do not attempt to recharge non-rechargeable batteries
- Remove exhausted batteries to avoid leakage
- Always replace all of the batteries at the same time
- Rechargeable batteries are to be removed from the toy before being charged.
- Remove batteries from the product when it is not intended to be used for an extended period of time
- Do not short circuit the supply terminals
- Do not dispose of batteries in fire
- Do not immerse electrically operated products in water
- Batteries are harmful if swallowed, so keep away from young children
- Dispose of batteries properly. Do not burn or bury them
- Adult supervision is required when changing batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

### **CAUTION!**

- Do not pick up the vehicle whilst it is in motion, keep fingers, hair and clothing clear from the wheels
- Adult supervision is required
- Wires and antennas are not to be inserted into socket outlets.
- Do not use in extreme weather conditions
- If the vehicle does become wet. Ensure it is completely dry before Storing.

### **Useful Hints and Tips:**

- The vehicle can be operated up to 20 metres away over a flat open area.
- Range and performance of car can be affected / reduced by any surrounding structures and buildings.
- Battery life for controller - is much greater than the vehicle's Battery life and should last at least 120 minutes -Battery life depends on how the product is being used.
- Do not operate toy on sand, mud, water or thick carpets.
- Run on smooth flat surface.
- Remember to turn the controller and vehicle off after use.
- Keep packaging for reference as it contains important information.

## **Trouble Shooting:**

- The vehicle is not responding with the transmitter Check that the batteries have been inserted correctly and are making a good contact. Replace the batteries if you suspect they are exhausted.