



COMBAT FORCE JEEP INSTRUCTIONS

- **Pre-Play Check**

Warning:


Not suitable for children under 36 months due to small parts.

Battery Installation - Controller

To remove battery compartment lid - Slide lid down.

To insert 1 x 9V battery - Be guided by (+) & (-) markings and replace lid.

9V BATTERY

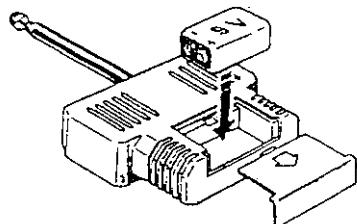

Battery Installation - Vehicle

Set power switch to off.


Turn screw to release and remove battery cover.

Insert batteries (4 x 1.5V) - Be guided by the (+) & (-) markings.

Replace battery compartment cover and turn screw to secure.

Note: Batteries may leak if left in toy for long periods of time - Remove batteries when not in use. Failure to do so renders warranty void.

VIEW FROM BELOW

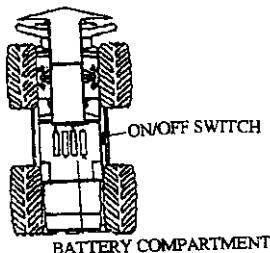

Caution

Do not pick up the vehicle while in motion.

Whilst product is switched on or in motion - Keep fingers, hair and clothing clear.

If child under 7 operates toy - Adult supervision required.

To avoid accidental operation - Remove batteries when not in use.

Operating Instructions



Set power switch(s) to on position.

Press right lever left - Wheels turn left.

Press right lever right - Wheels turn right.

Press left lever forward - Forward motion.

Press left lever back - Reverse motion.

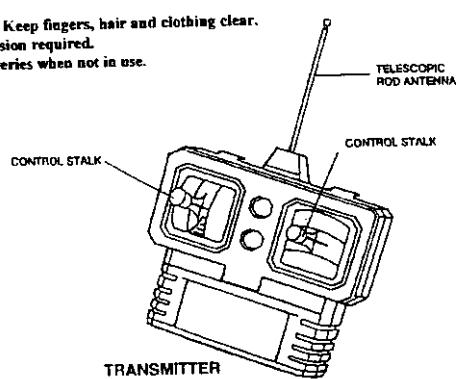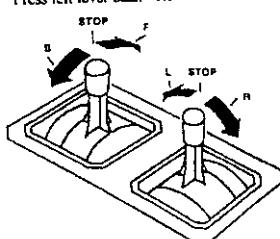

Useful Hints and Tips

- When not in use - Turn off and take all batteries out.

- For maximum battery life - After 20 mins play rest toy for half an hour.

- Average playing time for vehicle - 60 mins on fully charged set of batteries.

- Battery life for controller - This is much greater than the vehicle's battery life and should last at least 120 mins - Battery life depends on how the product is being used - Replace when vehicle stops responding.

- Do not operate toy on - Sand, mud, water or thick carpets.

- Run on smooth flat surface.

Battery Requirements - Vehicle 4 x AA Controller - 1 x 9V

- Use only new batteries - Capable of good connections with metal contacts.

- Do not use different types of batteries.

- Do not mix new and used batteries.

- Use only batteries of the same or equivalent type as recommended.

- Exhausted batteries are to be removed from the toy.

- Do not short-circuit the battery terminals.

Fault Finding

- Toy not responding - Replace controller battery.

- Toy slow and less responsive - Replace batteries in toy.

- New controller battery, still no response - Check battery makes good contact.

- New batteries, toy still slow to respond - Check batteries make good contact.

- See battery requirement check list and ensure compliance - See vehicle range and frequency.

- The vehicle/toy batteries are likely to fail before controller battery.

Vehicle Range and Frequency

- The vehicle can be operated up to 30 feet away over a flat open area.

- Range will be affected/reduced by any surrounding structures and buildings.

- Keep packaging for reference as it contains important information.

WARNING : Modifying or tampering with the transmitter/vehicle's components can cause a malfunction and invalidate the warranty and void your FCC authorization to operate the vehicle.