

onnn

2.0 Channel LED Soundbar

QUICK START GUIDE

SOUNDBAR

LIGHT

VOLUME UP

VOLUME DOWN

SOURCE

ON/OFF

STATUS LED

Figure 1

Standby	Solid Red
Optical	Solid Purple
Aux in	Solid White
USB	Solid Green
Bluetooth pairing mode	Flashing Blue
Bluetooth device connected	Solid Blue
Volume up/down	Corresponding source color flash 1 time
Maximum/minimum volume	Corresponding source color flash 3 times
Mute	Slow flash
Movie/Sound mode	Corresponding source color flash 2 times

Table 1

REMOTE CONTROL

POWER ON/OFF

SOURCE

PREVIOUS TRACK

VOLUME DOWN

MOVIE MODE

BASS DOWN

MUTE/UNMUTE

BLUETOOTH

VOLUME UP

NEXT TRACK

PLAY / PAUSE

SOUND MODE (MUSIC / TALK)

LIGHT MODE (6 MODES)

BASS UP

Figure 2

SOUNDBAR BACK

USB

OPTICAL AUDIO IN

AUX AUDIO IN (STEREO 3.5MM)

POWER

WALL MOUNTS

Figure 3

SETUP

TOOLS NEEDED

ACCESSORIES NEEDED (SUPPLIED)

Figure 4

Drill bit

Drill

#1 Phillips Screwdriver

Ruler

Level

Hammer

Figure 2

Part

Description

Picture

Qty

Table 3

A

Anchors

Figure 4

2

B

Screws

Figure 4

2

onnn

Wall Mounting Template

300mm (11.81inch)

Figure 4

(Wall mounting, optional)

PARTS

Part

Description

Qty

Table 4

1

Soundbar

Figure 5

1

2

Power cable

Figure 5

1

3

Optical cable

Figure 5

1

4

3.5mm AUX cable

Figure 5

1

5

AAA batteries

Figure 5

2

6

Wall mounting kit

Figure 5

1

7

Wall mounting template

Figure 5

1

8

Remote control

Figure 5

1

onnn

For product assistance & missing or replacement parts: WE CAN HELP

1-888-516-2630

7 DAYS/WEEK 7:00am- 9:00pm CST

Find more at Walmart.com

Manufactured in China for Walmart Inc.

SAVE THIS QUICK START GUIDE

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

First Time Setup

1. CHOOSE A CABLE

Connect one cable to Soundbar and TV

Optical* 3.5MM AUX

Better Good

Figure 6

2. CONNECT POWER

Figure 7

3. INSTALL BATTERIES

In remote control

Remove battery door

Insert batteries

Close battery door

Figure 8

WARNING

Do not mix old and new batteries.

WARNING

Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.

Bluetooth® Operation

1. POWER ON/OFF

Soundbar (Remote Control or Soundbar)

ON/OFF

SOURCE

OR

SOURCE

ON/OFF

Figure 9

2. SELECT SOURCE

To switch between audio sources (Remote Control or Soundbar) Or press & x1 on the remote control to go to the Bluetooth source directly

Press and hold

LED flashing blue

Figure 10

3. PAIR DEVICE

Press and hold the & button on remote control or the & button on the soundbar

4. SEARCH ON DEVICE

Select "onn 20" Soundbar" on device

Bluetooth

Bluetooth on

Bluetooth DEVICES

onn 20" Soundbar

Figure 11

Device is connected when Blue LED stops flashing and becomes solid.

5. PLAY AUDIO

From device

6. VOLUME

Controlled by Device, Remote Control or Soundbar

IMPORTANT

Soundbar does not include microphone and cannot operate as hands-free device.

WARNING

High-volume levels can damage your hearing. Reduce the volume levels before pressing Play.

Troubleshooting

Problem	Cause	Solution
No power	Power off	Press "O" button on remote control or on Soundbar. Ensure the power cord is securely connected
	Loose power cord	Plug a different device into the electrical outlet to verify that the outlet is working correctly
	Faulty outlet	Press "←" Increase volume
No audio	Low Volume / Mute	Press "←" Increase volume
	Some TVs do not Pass through Digital Audio	Change TV output to PCM
	Not All TVs have Audio outputs listed	Select different Input source
	TV set to variable audio output	Connect directly to another device (Blu-Ray, Game System, etc.)
Bluetooth break up or disconnect	Bluetooth source device	Set audio output to fixed or standard, NOT variable* Increase volume / unmute source device
	Source too far	Move the source device closer to soundbar
*Consult your TV's user manual for more detailed information.		

Table 6

Problem	Cause	Solution
Bluetooth break up or disconnect	Solid obstruction	Move source device into line-of-sight of soundbar
	Other wireless devices	Turn off / move devices away (wireless security cameras, wireless video baby monitors, cordless phones, and microwave ovens)
No voice prompt	Disabled the voice prompt	Press & hold + and - buttons simultaneously on the unit or remote control for 5 seconds to enable the voice prompt
Voice prompt is too noisy	Enabled the voice prompt	Press & hold + and - buttons simultaneously on the unit or remote control for 5 seconds to disable the voice prompt
Can not adjust the light brightness	Don't like the default light brightness	Press or Press & hold 5 seconds and + buttons simultaneously on the unit or remote control to lighten the light. Press or Press & hold 5 seconds and - buttons simultaneously on the unit or remote control to dim the light.


Table 7

F&D 奋达科技		规格与工艺要求		环保要求	公差与说明
产品型号	SB2533	料号	12.005.0004.08341	■ RoHs2.0、Reach	说明书类说明： 1、公差 (mm)：0<a≤50 (+0.3/-0.2)，50<a≤150 (+1/-0.5)，>150 (+1.5/-1。有特殊要求的，按标示公差执行。 2、要求图文清晰可辨，内容完整，折叠正确，无重影，墨屎、杂点、脏点、异物、粉点、套印不准。 3、尺寸按展开尺寸及成型外尺寸测量计算。
部件名称	说明书	尺寸 (mm)	展开尺寸：570x95，成型尺寸：95x95	■ 包装指令94/62/EC	
设计版本	A 0	材质	128g铜版纸	□ TPCH (美国)	
变更原因	初版发行	页码P数	12/p	□ 油墨中禁止使用矿物油 (法国)	
		颜色	单黑+1专 (PANTONE 285C)	□ 大豆油墨印刷	
包装工程师	肖成松	表面处理	■ 无 □光油 □哑油 □水性光油 □水性哑油 □UV油 □光胶 □哑膜 □防刮花哑膜	□ 无氯漂白工艺	
平面工程师	杨改改	工艺要求	■ 无 □封二 □封三 □封底 □按图纸排版 □其他	□ 粘合剂为非石油基	
审核	李宏	条码要求	■ 无条码 □有条码(清晰易扫描)	□ 其他	
批准	李继华	装订方式	■ 风琴折 □包心折 □骑马钉 □胶装 □线装 □其他		
日期	2024.12.05	参考	□ 无 ■ 有：12.005.0004.07729		

onn

2.0 Channel LED Soundbar
Model:100075108

Wall Mounting Template

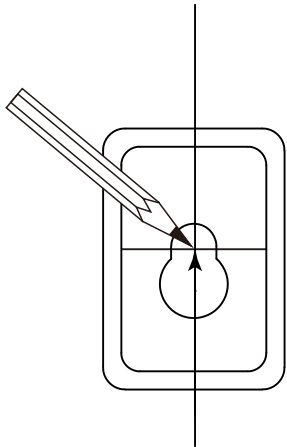


How to Wall-mount the Soundbar



1. Place the included wall mounting template against to the wall.
Mark the two bracket holes using a pencil (not included).



2. Line up the brackets with the marked holes and screw brackets to the wall.
Screw Size: 47 x 4mm (1.85 x 0.157inch)
Screw Bracket Size: 40 x 8mm (1.575 x 0.315inch)

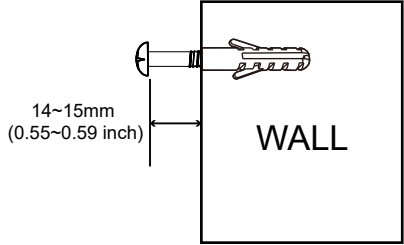

3. Hang the Soundbar on the wall mount screws then slide down to lock in place.

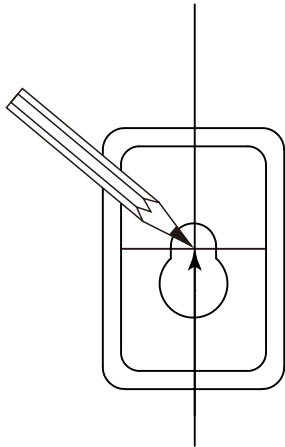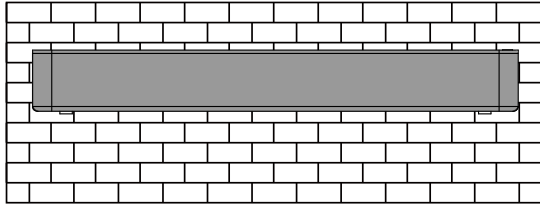

LEGAL & COMPLIANCE

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

3. RF Exposure Statement
To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.

2. Keep these instructions – The safety and operating instructions should be retained for future reference.

3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.

4. Follow all instructions – All operating and use instructions should be followed.

5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.

6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug the apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

17. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

18. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

IMPORTANT SAFETY INSTRUCTIONS

19.

- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



IMPORTANT SAFETY INSTRUCTIONS

20.The equipment shall be used at maximum 35 degree C ambient temperature.

21. WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

 
22. Batteries should not be exposed to excessive heat such as sunshine, fire, or the like.

WARNING: Danger of explosion if the remote control batteries are incorrectly replaced. Replace only with the same or equivalent type.

23. Keep new and used batteries away from children.

24. If the battery compartment does not close securely, stop using the product and keep it away from children.

25. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



IMPORTANT SAFETY INSTRUCTIONS

CAUTION:
Risk of explosion if the battery is replaced by an incorrect type
- replacement of a battery with an incorrect type that can defeat a safeguard (for example,in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

480x80mm folding to 80x80mm
18.9x3.15in folding to 3.15x3.15in

<div></div>		规格与工艺要求		环保要求	公差与说明
产品型号	SB2533	料号	12.005.0004.08340	<input checked="" type="checkbox"/> RoHs2.0、Reach	说明书类说明： 1、公差（mm）：0<a≤50 （+0.3/-0.2），50<a≤150（+1/-0.5），>150（+1.5/-1。有特殊要求的，按标示公差执行。 2、要求图文清晰可辨，内容完整，折叠正确，无重影，墨尿、杂点、脏点、异物、粉点、套印不准。 3、尺寸按展开尺寸及成型外尺寸测量计算。
部件名称	挂墙示意卡	尺寸（mm）	展开尺寸：480x80，成型尺寸：80x80	<input checked="" type="checkbox"/> 包装指令94/62/EC	
设计版本	A 0	材质	80g书纸	<input checked="" type="checkbox"/> TPCH（美国）	
变更原因	初版发行	页码P数	12/p	<input type="checkbox"/> 油墨中禁止使用矿物油（法国）	
		颜色	单色印刷		
包装工程师	肖成松	表面处理	<input checked="" type="checkbox"/> 无 <input type="checkbox"/> 光油 <input type="checkbox"/> 哑油 <input type="checkbox"/> 水性光油 <input type="checkbox"/> 水性哑油 <input type="checkbox"/> UV油 <input type="checkbox"/> 光胶 <input type="checkbox"/> 哑膜 <input type="checkbox"/> 防刮花哑膜	<input type="checkbox"/> 大豆油墨印刷	
平面工程师	杨改改	工艺要求	<input checked="" type="checkbox"/> 无 <input type="checkbox"/> 封二 <input type="checkbox"/> 封三 <input type="checkbox"/> 封底 <input type="checkbox"/> 按图纸排版 <input type="checkbox"/> 其他	<input type="checkbox"/> 无氯漂白工艺	
审核	李宏	条码要求	<input checked="" type="checkbox"/> 无条码 <input type="checkbox"/> 有条码(清晰易扫描)	<input type="checkbox"/> 粘合剂为非石油基	
批准	李继华	装订方式	<input checked="" type="checkbox"/> 风琴折 <input type="checkbox"/> 包心折 <input type="checkbox"/> 骑马钉 <input type="checkbox"/> 胶装 <input type="checkbox"/> 线装 <input type="checkbox"/> 其他	<input type="checkbox"/> 其他	
日期	2024.12.05	参考	<input type="checkbox"/> 无 <input checked="" type="checkbox"/> 有：12.005.0004.05564		