 


For use with Security+ 2.0® products. All Security+ 2.0® Garage Door Openers have a yellow Learn button and two yellow antennas. The code between the remote control and the receiver changes with each use, randomly accessing over a billion new codes. Refer to your product manual for the location of the learn button.

NOTE: Your product may look different than the products illustrated in this manual.

3-Button Remote Control
Model E943LA



! WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote controls.
- Activate gate or door **ONLY** when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.



WARNING: This product can expose you to chemicals including lead, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

PROGRAM USING THE GARAGE DOOR OPENER

1

Locate the Learn button.

2

Press and immediately release the Learn button. The Learn LED will glow steadily for 30 seconds. Within 30 seconds...

3

Press and hold the button on the remote control that you wish to use.

“click”
“click”

Release the button when the garage door opener lights blink **or** two clicks are heard. If programming to other products, press the button a second time to activate the product.

PROGRAM USING THE DOOR CONTROL

1

Press the LEARN button on the door control to enter Programming Mode.

The command LED will flash once.

2

Press the LEARN button again, the LED will flash once.

The command LED will flash once again.

3

Press and hold the button on the remote control that you wish to use.

“click”
“click”

Release the button when the garage door opener lights blink **or** two clicks are heard. If programming to other products, press the button a second time to activate the product.

TO ERASE ALL CODES FROM MEMORY


When deactivating any unwanted remote control code, all previous codes will be erased.

1

Press and hold the Learn button on garage door opener or other product until the learn LED goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each remote control you wish to use.

TO CONTROL THE GARAGE DOOR OPENER LIGHTS


This feature is only available on garage door openers equipped with a multi-function door control and a remote control with more than one button. Not available with external receiver. A remote control button can be programmed to operate the garage door opener lights without opening the door.

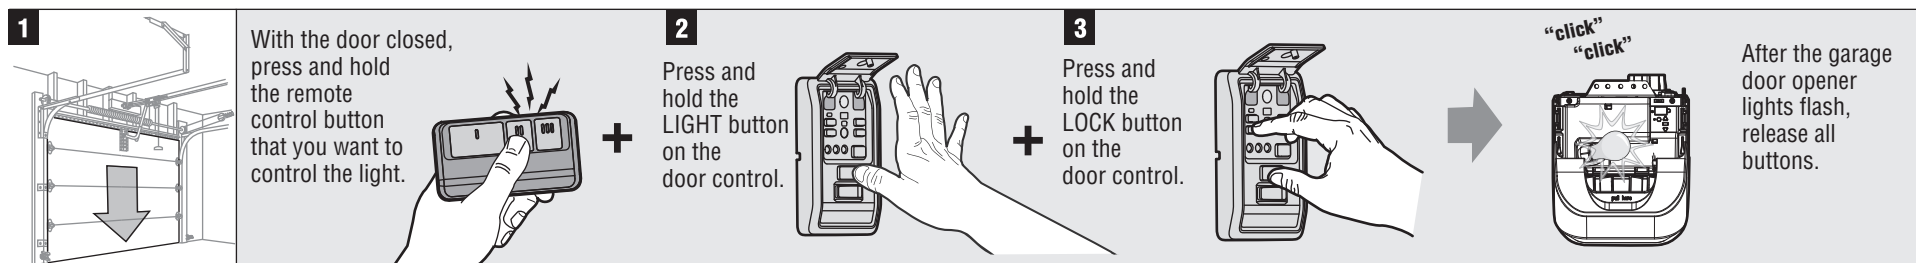

Test by pressing the remote control button. The garage door opener lights should turn on or off but the door should not move.

THE REMOTE CONTROL BATTERY

The Lithium battery should produce power for up to 3 years. If the battery is low, the remote control's LED will not flash when the button is pressed. To replace battery:

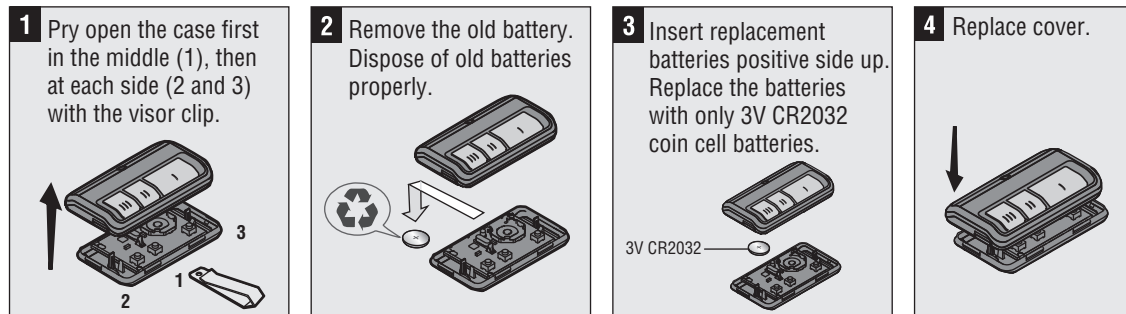

Make: MyQ
Model: E943LA
Description: Remote Control
Uses 1 3Vdc battery (CR2032)
Country of Origin: Mexico

Remote Control E943LA: IFT #: RCPLI8918-0755
Operation of this equipment is subject to the following two conditions: (1) This equipment or device may not cause harmful interference and (2) this equipment or device must accept any interference, including that which may cause undesired operation.

WARNING

To prevent possible SERIOUS INJURY or DEATH:


- NEVER allow small children near batteries.
 - If battery is swallowed, immediately notify doctor.
- To reduce risk of fire, explosion or chemical burn:
- Replace ONLY with 3V CR2032 coin batteries.
 - DO NOT recharge, disassemble, heat above 212° F (100° C) or incinerate.

NOTICE: To comply with FCC and or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


HOW TO USE THE REMOTE CONTROL

Press and hold the button down until the door or gate starts to move. The remote control will operate from up to 3 car lengths away on typical installations. Installations and conditions vary, contact an installing dealer for more information.

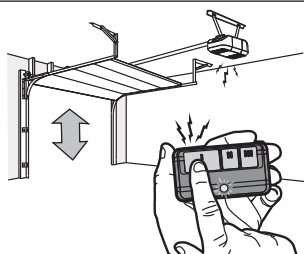

3-BUTTON REMOTE CONTROLS

Additional buttons on the remote control can be programmed to operate up to 3 devices such as additional garage door openers, light controls, gate operators or access control systems.

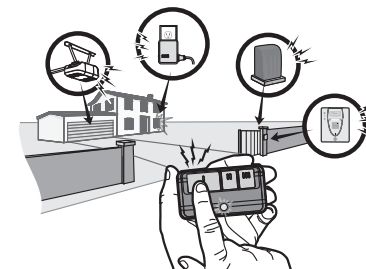

REPLACEMENT PARTS

3V CR2032 Lithium battery	10A20
Visor Clip	29B137

ONE YEAR LIMITED WARRANTY

LiftMaster warrants to the first consumer purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.

Para utilizar con los abre-puertas de garaje Security+ 2.0®. Los abre-puertas de garaje Security+ 2.0® tienen un botón amarillo "Learn" y dos antenas amarillas. El código entre el control remoto y el receptor cambia con cada uso, eligiendo aleatoriamente entre más de mil millones de códigos nuevos. Consulte el manual de su producto para conocer la ubicación del botón de aprendizaje.

NOTA: Su producto puede tener una apariencia diferente a las de los productos ilustrados en este manual.

Control remoto de 3 botones
Modelo E943LA



⚠ ADVERTENCIA

Para evitar la posibilidad de LESIONES GRAVES o incluso la MUERTE debido al movimiento de un portón o puerta de garaje:

- Mantenga SIEMPRE los controles remotos fuera del alcance de los niños. NUNCA permita que los niños utilicen o jueguen con los controles remotos.
- Active el portón o la puerta SÓLO cuando se pueda ver claramente, cuando esté ajustada adecuadamente y cuando no haya obstrucciones en su recorrido.
- Mantenga SIEMPRE a la vista el portón o la puerta del garaje hasta que cierre completamente. NUNCA permita que alguien cruce el camino de un portón o una puerta en movimiento.

⚠ ADVERTENCIA: Este producto puede exponerle a productos químicos (incluido el plomo), que a consideración del estado de California causan cáncer, defectos congénitos u otros daños reproductivos. Para más información, visite www.P65Warnings.ca.gov

PROGRAMACIÓN UTILIZANDO EL ABRE-PUERTAS DE GARAJE

1

2

Localice el botón "APRENDIZAJE".

Oprímalo y suéltelo inmediatamente. El DEL Learn se iluminará constante durante 30 segundos. Dentro de los 30 segundos...

3

Mantenga oprimido el botón del control remoto que desee usar.

"chasquido" "chasquido"

Suelte el botón cuando las luces del abre-puertas de garaje parpadeen o se oigan dos tonos. Si va a programar otros productos, oprima el botón una segunda vez para activarlos.

PROGRAMACIÓN UTILIZANDO EL CONTROL DE LA PUERTA

1

Oprima el botón "LEARN" (APRENDIZAJE) en el control de la puerta para entrar en el Modo de programación.

El DEL de comando parpadeará una vez.

2

Oprima de nuevo el botón "LEARN" (APRENDIZAJE) y el DEL parpadeará una vez.

El DEL de comando parpadeará una vez de nuevo.

3

Mantenga oprimido el botón del control remoto que desee usar.

"chasquido" "chasquido"

Suelte el botón cuando las luces del abre-puertas de garaje parpadeen o se oigan dos tonos. Si va a programar otros productos, oprima el botón una segunda vez para activarlos.

CÓMO BORRAR TODOS LOS CÓDIGOS DE LA MEMORIA

Cuando desactive cualquier código de control remoto no deseado, se borrarán todos los códigos anteriores.

1

Mantenga oprimido el botón de Aprendizaje en el abre-puertas de garaje u otro producto hasta que se apague el DEL de aprendizaje (aproximadamente 6 segundos). Ya estarán borrados todos los códigos anteriores. Programe de nuevo cada control remoto que desee utilizar.