

# Dual Portable Bluetooth Speakers

User's Guide for Model ISB614B v978-01



## Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
• Reorient or relocate the receiving antenna.  
• Increase the separation between the equipment and receiver.  
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
• Consult the dealer or an experienced radio/TV technician for help.

## Warnings and Precautions

- CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- Avertissement: Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- WARNING: Do not place this unit directly on furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- PRÉCAUTION: Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.
- WARNING: There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- WARNING: The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.
- WARNING: Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- WARNING: Shock hazard - Do Not Open.
- AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVrir
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

- Caution marking is located at the rear or bottom of the apparatus.
- Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.
- The marking information is located at the rear or bottom of apparatus.
- Le marquage est situé sur le panneau arrière ou inférieur de l'unité.
- La prise du secteur est utilisée pour déconnecter le système.
- La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Ne pas mélanger vieilles et nouvelles batteries.
- Ne mélangez pas des piles alcalines, standard (carbone-zinc) ou rechargeables (Ni-Cd, Ni-MH, etc) batteries.
- Piles doivent être recyclées ou éliminées selon les directives établies et locales.




Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



## FUNCTIONS AND CONTROLS

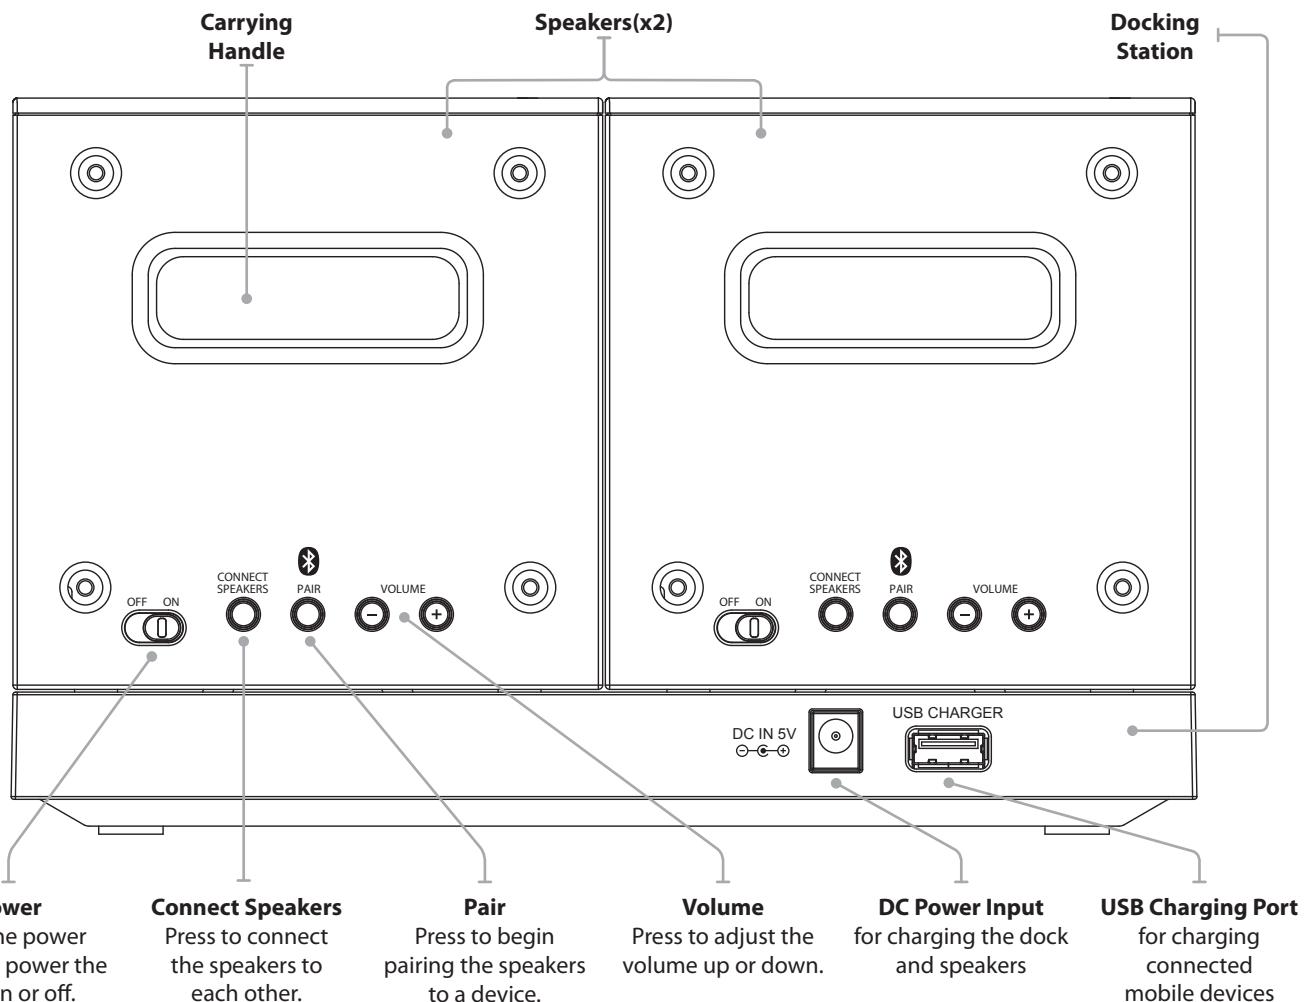


## OUT OF THE BOX

### Charging the Internal Batteries

Charging requires an AC/DC power adapter (included). Please charge each speaker for at least 5 hours before using. Charge time will increase if the dock is also charging a connected mobile device through the charging port.

1. Connect the small plug of the AC/DC power adaptor (included) to the docking station and the large plug to an AC power outlet.
2. Place the speakers on the docking station to charge the batteries.

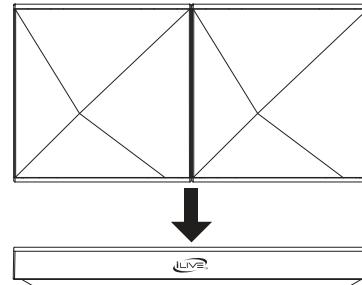

### Light Indicators

Status	Indicator	Status	Indicator	Status	Indicator
Charging	Solid Red Light	Pairing Speakers	Flashing White Light	Blue tooth Paired	Solid Blue Light
Fully Charged	No Light	Speakers Paired	Solid White Light		
Low Battery	Flashing Red Light	Pairing Bluetooth	Flashing Blue Light		

## SPEAKER CONNECTION & BLUETOOTH SETUP

### Pairing the Speakers

This process should be done **FIRST** before pairing a Bluetooth device. This should only need to be done upon first use. Pairing the speakers can take up to 1 minute.

1. Power on the speakers by sliding the power switch to the **ON** position on both units (first make sure both speakers are fully charged).
2. The Bluetooth Indicator and Speaker Connection Indicator will flash slowly in unison. If the Speaker Connection Indicator is not flashing, but is solid white both speakers are already paired. You can skip to the *Pairing a Bluetooth Device* section.
3. Press the **Connect Speakers** button on both speakers simultaneously.
4. The Speaker Connection Indicators will flash quickly.
5. Wait until both **Speaker Connection Indicators** are solid white, this means the speakers have been successfully paired.

*Note : For all future uses please turn on both speakers and wait for them to connect. There should be no need to press Connect Speaker button again. If any pairing issues should occur, please follow the above steps again.*

### Pairing a Bluetooth Device

Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.

Make sure you have first followed the instructions for *Pairing the Speakers*.

1. When pairing, the device should remain within 3 feet of the speakers.
2. Press the **Pair** button on **only ONE of the speakers**. The pair indicator will begin flash quickly.
3. Using the native controls on your Bluetooth device, scan for and select **ISB614** in your Bluetooth settings to pair.
4. If your device requests a password, enter **0 0 0 0**.
5. When successfully paired, the blue pairing indicator will stop flashing and will remain solid.
6. After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device.

7. If any pairing issues should occur, un-pair the unit on your Bluetooth device and follow the above steps again.

*Note : If two speakers with the ISB614 name appear on the pairing list of your device, please erase one of ISB614 listed in your Bluetooth device and repeat the above steps again.*

### Playing Audio Wirelessly


Once you have successfully connected to a bluetooth device, you may begin playing audio through your speakers. You can use a USB cable (not included) to charge your Bluetooth device from the speaker dock while it is playing.

1. Use the native controls on the connected Bluetooth Device to play, pause or skip a selected track.
2. Any audio played through the connected Bluetooth device will now be heard through the speakers.

### Charging Your Connected Bluetooth Device

You can use a USB cable (not included) to charge your Bluetooth device from the speaker dock while it is playing.

1. Plug a USB cord into the USB Charger port on rear of the dock.
2. Plug the other end into a mobile media device to charge it.

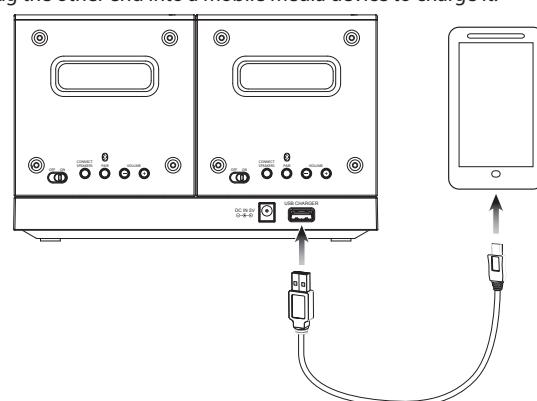

## INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at:

[www.iLiveElectronics.com](http://www.iLiveElectronics.com)

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: [www.iLiveElectronics.com](http://www.iLiveElectronics.com)



For Warranty Information of this User's Guide, go to [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

Customer Service: 1-888-999-4215 | Email Support: [prodinfo@dipiinc.com](mailto:prodinfo@dipiinc.com) | Email Parts: [partsinfo@dipiinc.com](mailto:partsinfo@dipiinc.com)

Copyright © 2014 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.