


# BLUETOOTH SOUNDBAR

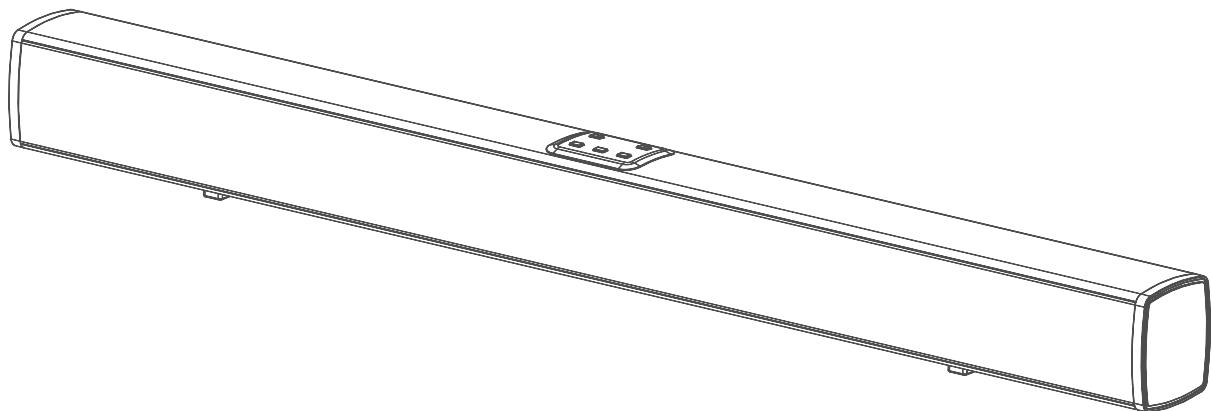

MODEL: B-3318

USER MANUAL

# 1 Welcome



---

## 2 40W 2.0 Compact Bluetooth Soundbar

- 2.1 In The Box
- 2.2 Front View
- 2.3 Top View
- 2.4 Rear View
- 2.5 Remote Control

---

## 3 Quick Setup

- 3.1 Power On/Off and Function Selection
- 3.2 Auto Power Off
- 3.3 Adjusting The Volume

---

## 4 Operation

- 4.1 Selecting LINE IN
- 4.2 Selecting AUX IN
- 4.3 Selecting Bluetooth
- 4.4 Selecting OPTICAL IN

---

## 5 Troubleshooting

---

## 6 Technical Specifications

# Safety Instructions & Warnings

## Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



## FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Battery Warnings

- **WARNING:** Do not ingest the battery, Chemical Burn Hazard.
- If the remote control supplied with this product contains a coin/button cell battery and the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside part of the body, seek immediate medical attention.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.

## Additional Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **WARNING:** Shock hazard - Do Not Open.
- Caution and marking information is located at the rear or bottom of the apparatus.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **WARNING:** This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.
- This product meets and complies with all Federal regulations.

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**ATTENTION**  
RISQUE D'ÉLECTROCUTION  
NE PAS OUVRIR


**WARNING:** To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

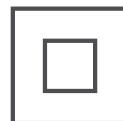

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



**WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

# 1 Welcome



Thank you for choosing this Goodmans product. We've been making electronics for the British people for 70 years. Each of our projects has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new 40W 2.0 Compact Bluetooth Soundbar

---

## 2 Your 40W 2.0 COMPACT BLUETOOTH SOUNDBAR

### 2.1 In The Box

Carefully remove your 40W 2.0 Compact Bluetooth Soundbar from the packaging.

Inside the box you will find:

- 40W Soundbar
- Power Adaptor
- Quick Start Guide
- Guarantee Booklet
- 3.5mm Line-in Cable
- 3.5mm To RCA Cable
- RCA To RCA Cable
- Remote Control
- Wall Mount Kit

If any of these items are missing, contact customer support.

Visit: [www.goodmans.co.uk/support](http://www.goodmans.co.uk/support)



### Mains Power

Your 40W Soundbar requires a mains supply of 230-240V AC ~ 50Hz.

Please ensure that your mains supply is compatible before use.

Disconnect the Power Cord from the mains when not in use.

### Position of 40W 2.0 Compact Soundbar


Place on a flat, stable surface that is not subject to vibrations. Avoid the following locations:

- Where it is exposed to direct sunlight
- Where it is close to heat radiating sources
- Where the humidity is high and ventilation is poor
- Where it is dusty



## 2.2 Front View

### A SPEAKER

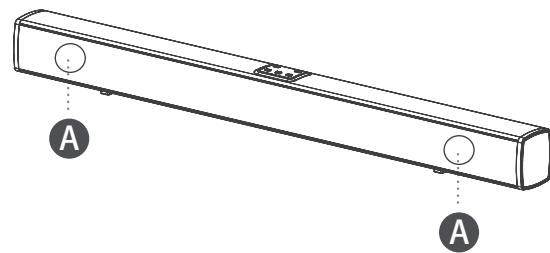

## 2.3 Top View

### B POWER

Press to power soundbar on or off.

### C SOURCE

Press to select input.

### D + VOLUME


Press to increase the volume.

### E PAIR

Touch and hold to begin pairing to a external Bluetooth device.

### F - VOLUME

Press to decrease the volume.

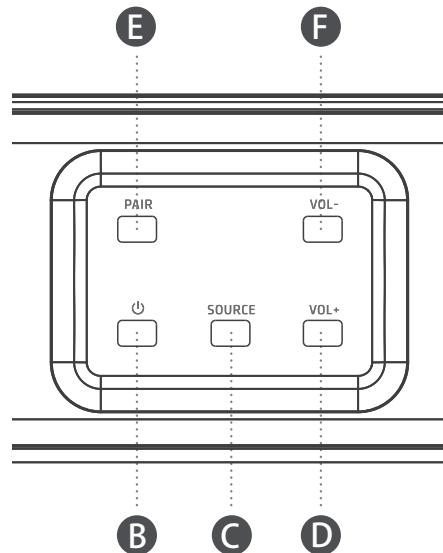

## 2.4 Rear View

### G DC MAINS INPUT SOCKET

Connect external mains adaptor to this socket.

### H OPTICAL INPUT SOCKET


Connect external audio sources with optical audio cable.

### I AUX INPUT SOCKET

Connect external audio sources with RCA audio cable.


### J LINE IN SOCKET

Connect external audio sources with a 3.5mm audio cable.

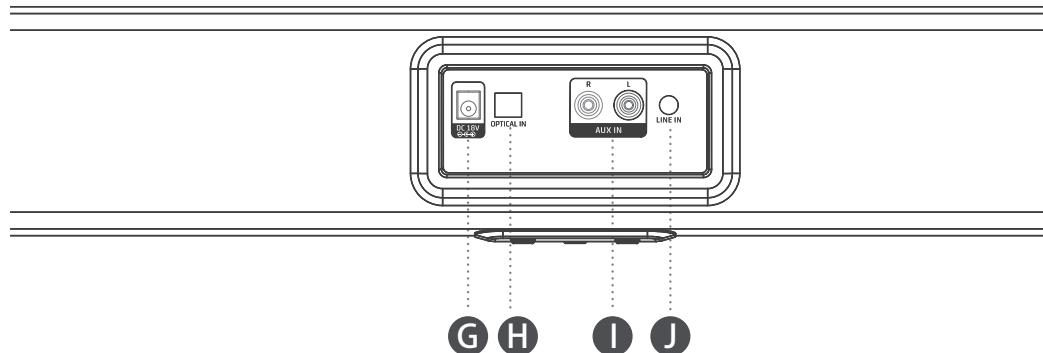



## 2.5 REMOTE CONTROL

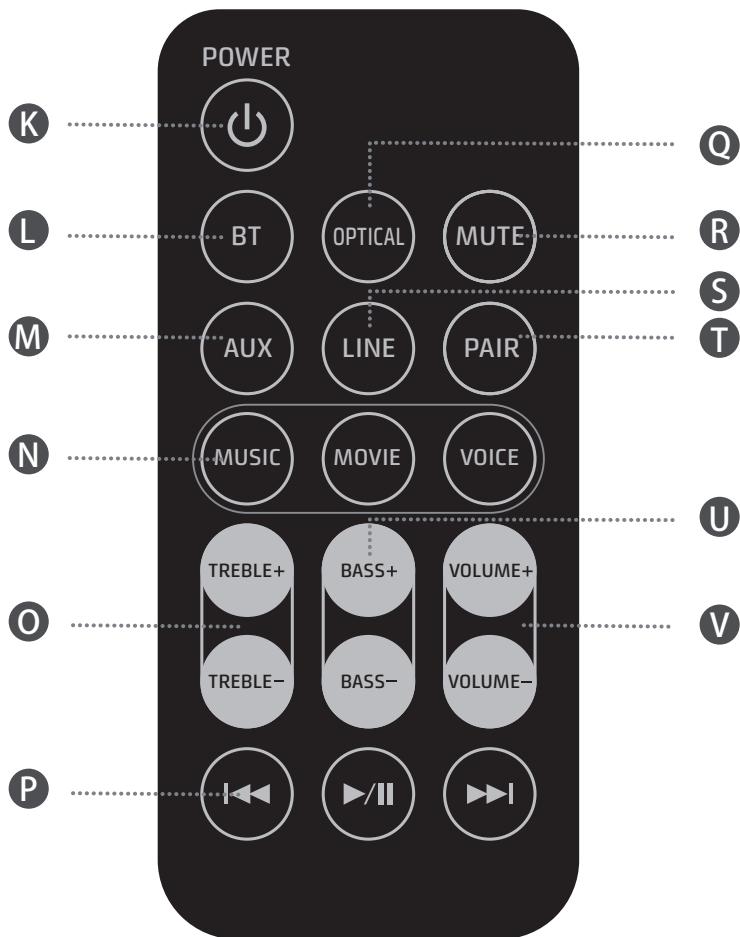

### K POWER

Press to turn on/off.

### L BT

Press to select BT mode.

### M AUX

Press to select AUX mode.

### N DSP PRESETS

Press to access to Music/Movie/Voice mode.

### O TREBLE

Increase or decrease the treble settings.

### P In BT mode

Press to Skip/Back/Play/Pause/Stop the track.

### Q OPTICAL

Press to select optical mode.

### R MUTE

### S LINE

Press to select Line in mode.

### T PAIR

Press to begin pairing with a Bluetooth device.

### U BASS

Increase or decrease bass settings.

### V VOLUME



Increase or decrease the volume.

### 3 Quick Setup



#### 3.1 Power On/Off and Function Selection

1. This 40W 2.0 Compact Bluetooth Soundbar is supplied with a mains adaptor.  
To connect the power insert the small end in the rear of the unit.
2. Insert the UK plug into a household power socket, and switch the power on.
3. Press the  button to turn the unit on.
4. Press the SOURCE button to select BLUETOOTH / LINE / AUX / OPTICAL mode.

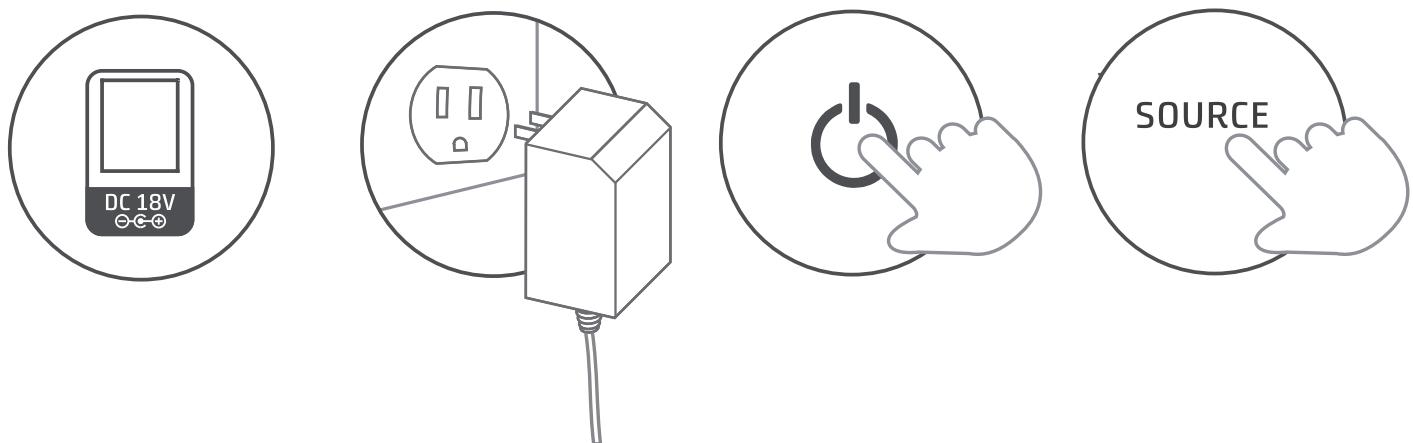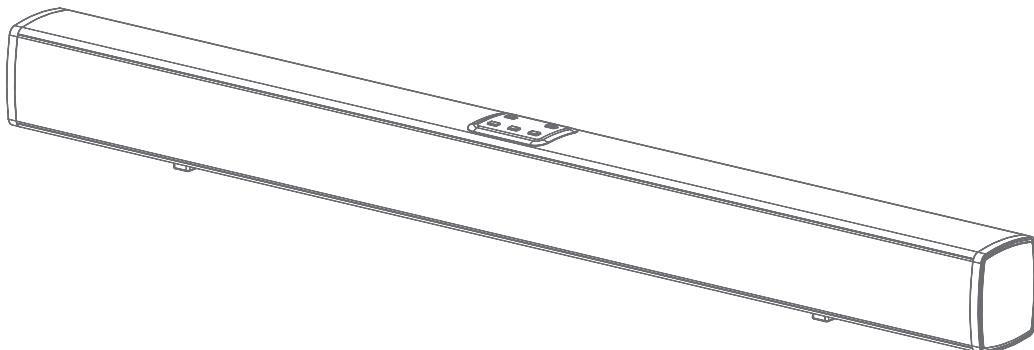


#### 3.2 Auto Power Off

If no audio signal is continuously detected from the selectal mode in for more than 170 minutes, the unit will power-off automatically.

#### 3.3 Adjusting the Volume

Press the VOL+ button or VOL- button in the side panel of the soundbar to adjust the volume to a comfortable level.

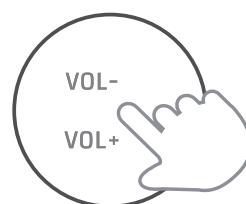

# 4 Operation



## 4.1 Selecting LINE IN

1. Press the  $\textcircled{P}$  button in the top panel of the soundbar or alternatively press the  $\textcircled{P}$  button on the remote control, so that the green LED is illuminated.
2. Press the Source button and select LINE IN mode or press the LINE IN button on your remote control.
3. Adjust volume to the desired level.

## 4.2 Selecting AUX IN

1. Press the  $\textcircled{P}$  button in the top panel of the soundbar or alternatively press the  $\textcircled{P}$  button on the remote control, so that the white LED is illuminated.
2. Press the Source button and select AUX IN mode or press the AUX button on your remote control.
3. Adjust volume to the desired level.

## 4.3 Selecting Bluetooth

1. Press and hold the  $\textcircled{P}$  button on the unit or alternatively press the  $\textcircled{P}$  button on the Remote Control.
2. Press the SOURCE button and select Bluetooth mode or press the BT button on the Remote Control to switch Bluetooth mode.
3. Press the Source button on the unit .The blue light will flash quickly.
4. Use the controls on your Bluetooth device to select ( B-3318 ) in your Bluetooth settings to pair. If your device requests a password, enter the “0000” . Refer to your device's user manual for instructions on pairing and connecting Bluetooth devices.

## 4.4 Selecting OPTICAL IN

1. Press the  $\textcircled{P}$  button in the top panel of the soundbar or alternatively press the  $\textcircled{P}$  button on the remote control, so that the orange LED is illuminated.
2. Press the Source button and select OPTICAL mode or press the OPTICAL button on your remote control.
3. Adjust volume to the desired level.

## 5 Troubleshooting



Problem	What to do
Soundbar does not respond (no power).	<p>Check the mains power cable and make sure it is plugged into a suitable power outlet.</p> <p>Check that the mains power supply is switched on.</p> <p>Connect the power to a different power outlet.</p>
No sound.	<p>Check the Soundbar volume control is not at minimum.</p> <p>Check that the Soundbar is not set to MUTE.</p> <p>If you are connecting to the Soundbar using a headphones port on your external audio device then check the volume is turned up on that device.</p>
The Remote Control does not work.	<p>Replace the battery.</p> <p>Make sure there are no obstacles obscuring the Soundbar.</p>
No sound in Bluetooth mode.	Check that the Soundbar is Paired with a Bluetooth device. If prompted enter the code '0000'.

## 6 Technical Specification

Power Supply	AC 120V, 60HZ.
Power Source of Remote Control	DC 3V, 1 x CR2025 Battery (supplied)
Power Consumption	40W
Audio Power	Left Channel 20W Right Channel 20W
Impedance	1 x Left Channel 20W 8Ω 1 x Right Channel 20W 8Ω