 
 
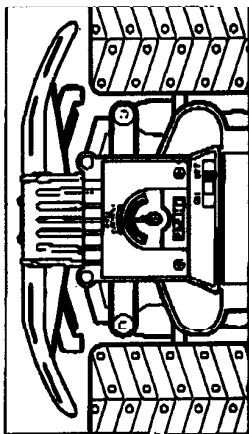 
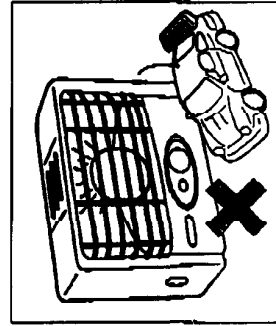 


WHEEL ALIGNMENT SWITCH

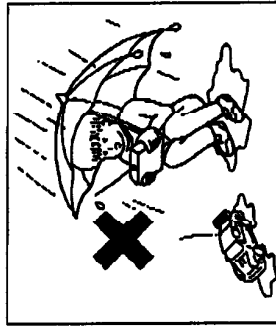

- THE DIRECTION TRIMMER IF THE CAR DOES NOT RUN STRAIGHT, TURN IT TO LEFT OR RIGHT UNTIL YOUR DESIRED ALIGNMENT IS REACHED.

IMPORTANT NOTICE:

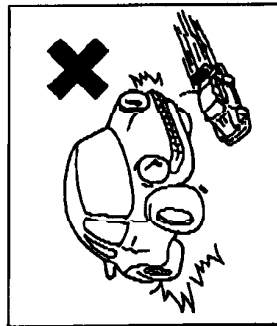

1. Don't operate your car in dangerous places.
2. Don't put your car and transmitter near any source of HEAT.
3. Don't run through water, including pools of puddles.
4. Avoid all possible collisions. Check the road ahead and watch for obstacles.
5. Avoid your car and transmitter antennas touching each other.
6. Never use a Charger when regular alkaline, transistor or heavy duty batteries are in the vehicle. A Charger is to be used only for Nickel-Cadmium batteries.
7. Don't run your car in the same vicinity as another radio-controlled car.
8. Don't leave your car and transmitter outside overnight. Night dampness will cause harm.
9. Don't forget to remove batteries from your car and transmitter if you are not going to operate the car again that day.
10. If malfunction occurs, replace batteries.
11. Do not try to dismantle the charger and battery pack.
12. Do not charge the battery if it is still hot from usage. Wait until they have cool down.
13. Only batteries of the same type are to be used at the same time.
14. Different types of batteries or old and new batteries are not to be mixed.
15. The supply terminals are not to be short circuited.

INSTRUCTION MANUAL

USE UNDER SUPERVISION OF AN ADULT

RADIO CONTROL

- PLEASE READ CAREFULLY BEFORE STARTING TO OPERATE

FEATURES:

- FULL FUNCTION: FORWARD, REVERSE, LEFT/RIGHT TURN, STOP.
- KNOBBY TIRES • DIFFERENTIAL GEAR BOX
- WHEEL ALIGNMENT • 2 SPEEDS

1:16

HOT ROD

1144/11440, 11441 (WITHOUT POWER SET)

11449 (INCLUDED POWER SET)



1:16

DESERT EXPLORER

1135 (WITHOUT POWER SET)

1145 (INCLUDED POWER SET)



1:16

MUD RAIDER

11361/1184 (WITHOUT POWER SET)

1146/11849 (INCLUDED POWER SET)



CAUTION: ELECTRIC TOY

Not Recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

ENERTEC

 
Enertec Entertainment Ltd

(Keep the display box and the


2 POWER OPTIONS

A) Battery Cassette - for "AA" Alkaline Batteries

- USE A COIN TO OPEN THE BATTERY LID AT THE BOTTOM OF THE VEHICLE.
- TAKE THE BATTERY CASSETTE OUT FROM THE BATTERY COMPARTMENT.

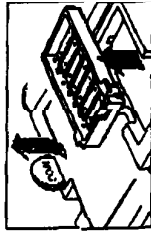

 - INSERT 8 "AA" ALKALINE BATTERIES INTO THE BATTERY CASSETTE. MAKE SURE THE ENDS OF THE BATTERIES OF POSITIVE (+) AND NEGATIVE (-) MATCHING THE MARKINGS ON THE BATTERY CASSETTE.

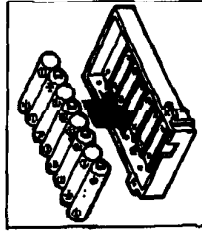

- PLACE THE BATTERY CASSETTE BACK INTO THE BATTERY COMPARTMENT WITH POSITIVE (+) AND NEGATIVE (-) SIGNS MATCHING THE BATTERY COMPARTMENT.


- PUT THE BATTERY LID BACK IN PLACE AND CLOSE IT TIGHT.



B) 9.6V POWER SET

THE 9.6V POWER SET SYSTEM IS DESIGNED AS AN ALTERNATIVE TO THE DISPOSABLE "AA" BATTERIES.

 - USE A COIN TO OPEN THE BATTERY LID AT THE BOTTOM OF THE VEHICLE.
- TAKE THE BATTERY CASSETTE OUT FROM THE BATTERY COMPARTMENT.

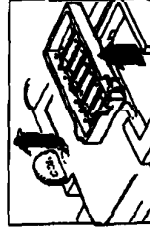

- CHARGE THE RECHARGEABLE BATTERY WITH THE CHARGER.
- APPROX. 4 HOURS CHARGE TIME.
- DO NOT CHARGE FOR MORE THAN THE RECOMMENDED TIME.



 
CONNECT THE PLUG FROM THE BATTERY PACK TO THE BATTERY COMPARTMENT AS SHOWN.




- PUT THE BATTERY LID BACK IN PLACE AND CLOSE IT TIGHT.

TRANSMITTER BATTERY INSTALLATION:

- PUSH THE BATTERY COVER ON THE BACK AND SLIDE OUT.
- INSTALL ONE 9 VOLT ALKALINE BATTERY.
- MAKE SURE THE POLARITY (+) (-) MATCH THE MARKINGS ON THE BATTERY COMPARTMENT.
- SLIDE THE BATTERY COVER BACK IN PLACE.



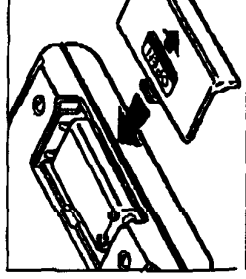


 - SCREW THE ANTENNA ON THE CAVITY OF THE TRANSMITTER.

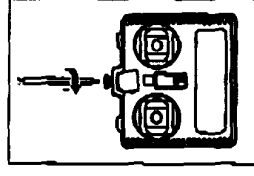

HOW TO OPERATE:

   1. Turn ON/OFF switches on bottom of car and front of transmitter to 'ON' position.
2. Extend transmitter antenna to full length when in use.
3. FORWARD DRIVE: Push left joystick to position 3 to move forward. Joystick will automatically return to Neutral position when released.
4. REVERSE DRIVE: Move left joystick to position 4 to move in reverse. Joystick will automatically return to Neutral position when released.
5. LEFT/RIGHT STEERING: Move right joystick left or right for desired direction while operating Forward/Reverse function.

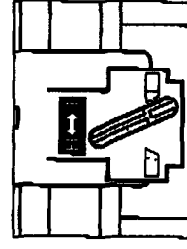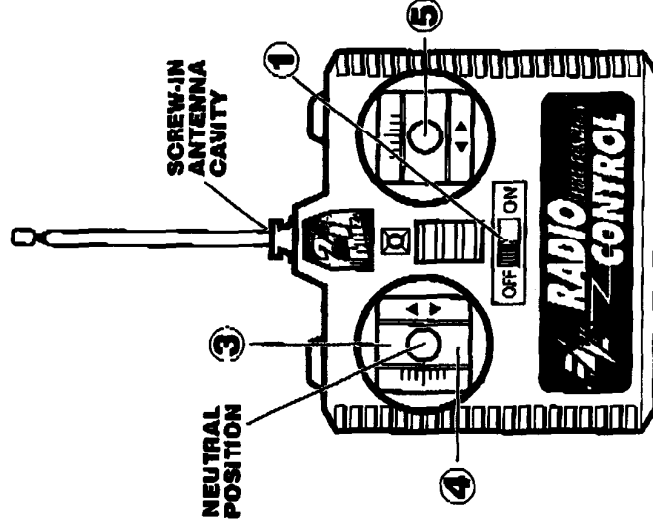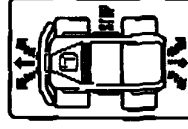

2 SPEED CHANGING:

- Operate only when the vehicle is at rest.
- L GEAR - For operating on rough surface to allow more torque.
- H GEAR - High speed performance gear.

FCC REQUIREMENT

1. This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.Consult the dealer or an experienced radio/TV technician for help.

2. Modifications not authorized by the manufacturer may void users authority to operate this device