

Instruction Manual

0210021-0100

FCC Statements



 
WARNING:
CHOKING HAZARD - Small parts,
Not for children under 3 years.

'' Modifications not authorized by the manufacturer may void users authority to operate this device''

'' This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and radiate radio frequency energy, and , if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.''

VEHICLE BATTERY INSTALLATION:

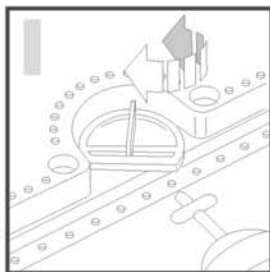

- Turn the knob to unlock
Position then slide to
Open the battery cover.

 


- Slide the battery cover
Back in place and turn
The knob to close it tight.



- Replace the rechargeable
Battery. Make sure the ends
Of the battery of positive (+)
And negative (-) matching
The markings on the vehicle.

TRANSMITTER BATTERY INSTALLATION:

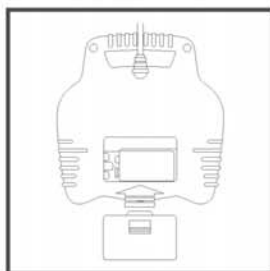

- Push the battery cover on the back and slid out.
- Install one 9 volt alkaline battery.
- Make sure the polarity (+) (-) match the markings
On the battery compartment.
- Slide the battery cover back in place.



TURBO TEC COMPANY LIMITED

UNIT 1617, 16/F., NORTH TOWER CONCORDIA PLAZA,
1 SCIENCE MUSEUM ROAD, TSIMSHATSUI EAST, KOWLOON, HONG KONG.



CE 0682

HOW TO OPERATE:

1. Turn **ON/OFF** switches on bottom of car.
2. Extend transmitter antenna to full length when in use.
3. **FORWARD DRIVE:** push left joystick to position 3 to move forward.
joystick will automatically return to neutral position when released..
4. **REVERSE DRIVE:** move left joystick to position 4 to move in reverse.
joystick will automatically return to neutral position when released.
5. **LEFT/RIGHT STEERING:** move right joystick left or right for desired direction while operating forward/reverse function.



  Screw the antenna on the Cavity of the transmitter.

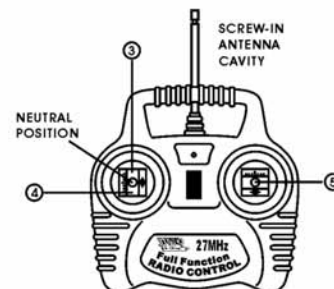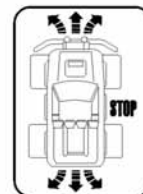

WALL PACK CHARGER:

Operating instructions:

1. Fully recharge the battery pack for 4 hours before using. Clip the connector on the battery pack to the connector on the charger (note, this only fits one way). Plug the charger into the wall outlet.
2. After charging for 4 hours, unplug the charger from the wall outlet. Unclip battery pack from charger.
3. After use, the battery pack will be hot to the touch. Wait at least 20 minutes until the battery pack cools down before recharging.

 
Recharging a warm or hot battery pack will greatly reduce the number of times the battery pack can be recharged.

Note:

- A) any charger unit or transformer or adaptor to be used other than TURBO TEC's shall comply with CEE publication 15.
- B) A NiCd battery will lose all its power at once. The radio control vehicle will suddenly stop operating. The vehicle is not defective, but it is time to recharge the battery pack.

Cautions:

1. Do not charge a battery pack that is wet, hot or shows signs of leakage or corrosion.
2. Battery pack should be unplugged if unused for several days.
3. Wall pack charger should be unplugged when not in use.
4. Do not dispose of battery pack in fire. Battery pack may explode and cause personal injury.
5. Nickel Cadmium cells - must be disposed of properly.
6. Do not attempt to disassemble the battery pack.
7. Do not use wall pack charger for any use other than charging rechargeable 9.6v NiCd battery pack.
8. Rechargeable battery pack is only to be charged under adult supervision.
9. Rechargeable battery pack is to be removed from the toy before being charged.
10. Keep the charging set and the accumulators dry.
11. Do not exceed the given charging time.
12. Do not try to charge Non-rechargeable batteries.
13. Different types of batteries or old and new batteries are not to be mixed.
14. The supply terminals are not to be short-circuited.

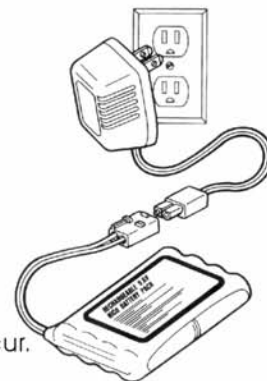

9.6V BATTERY PACK:

Warning:

As with all electrical products, do not operate near water. Hazardous conditions may occur.

Attention parents:

The battery charger and battery pack need to be periodically examined for potential hazards, such as damage to the cable or cord, plug, enclosure or other parts, and that, in the event of such damage, the toy must not be used until that damage has been properly removed.

Output: 12V  200mA