


REMOTE CODING

THE REMOTE CODE CAN MEMORIZE UP TO TWO SEPARATE CODE NUMBERS FROM THE REMOTE CONTROL SIMPLY AND EASILY.


1. VALET MODE CODE LEARNING - TURN THE IGNITION ON AND THE VALET S/W ON. NEXT, PUSH THE DOOR PIN S/W THREE TIMES. THE ALARM WILL CHIRP ONCE. PRESS BUTTON 1 ON THE REMOTE CONTROL FOR ONE SECOND. THE ALARM SYSTEM WILL CHIRP ONCE AND THE PARKING LAMPS WILL FLASH TWICE.

2. REPEAT THE SAME PROCEDURE FOR THE 2ND REMOTE CODE.

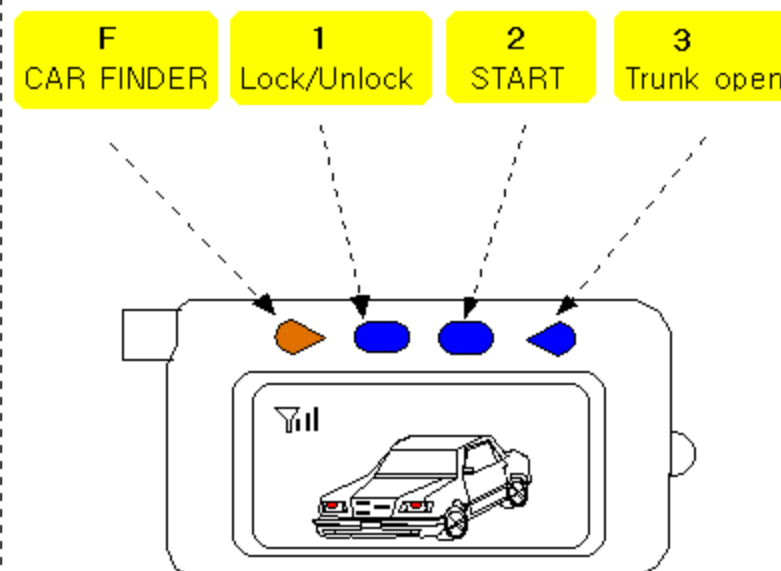

ⓘ WHEN THE BATTERY ARE REPLACED, PLEASE PRESS BUTTON # 3 AND # F TO CHECK THE STATUS OF VEHICLE'S AND LCD DISPLAY'S

LCD DISPLAY

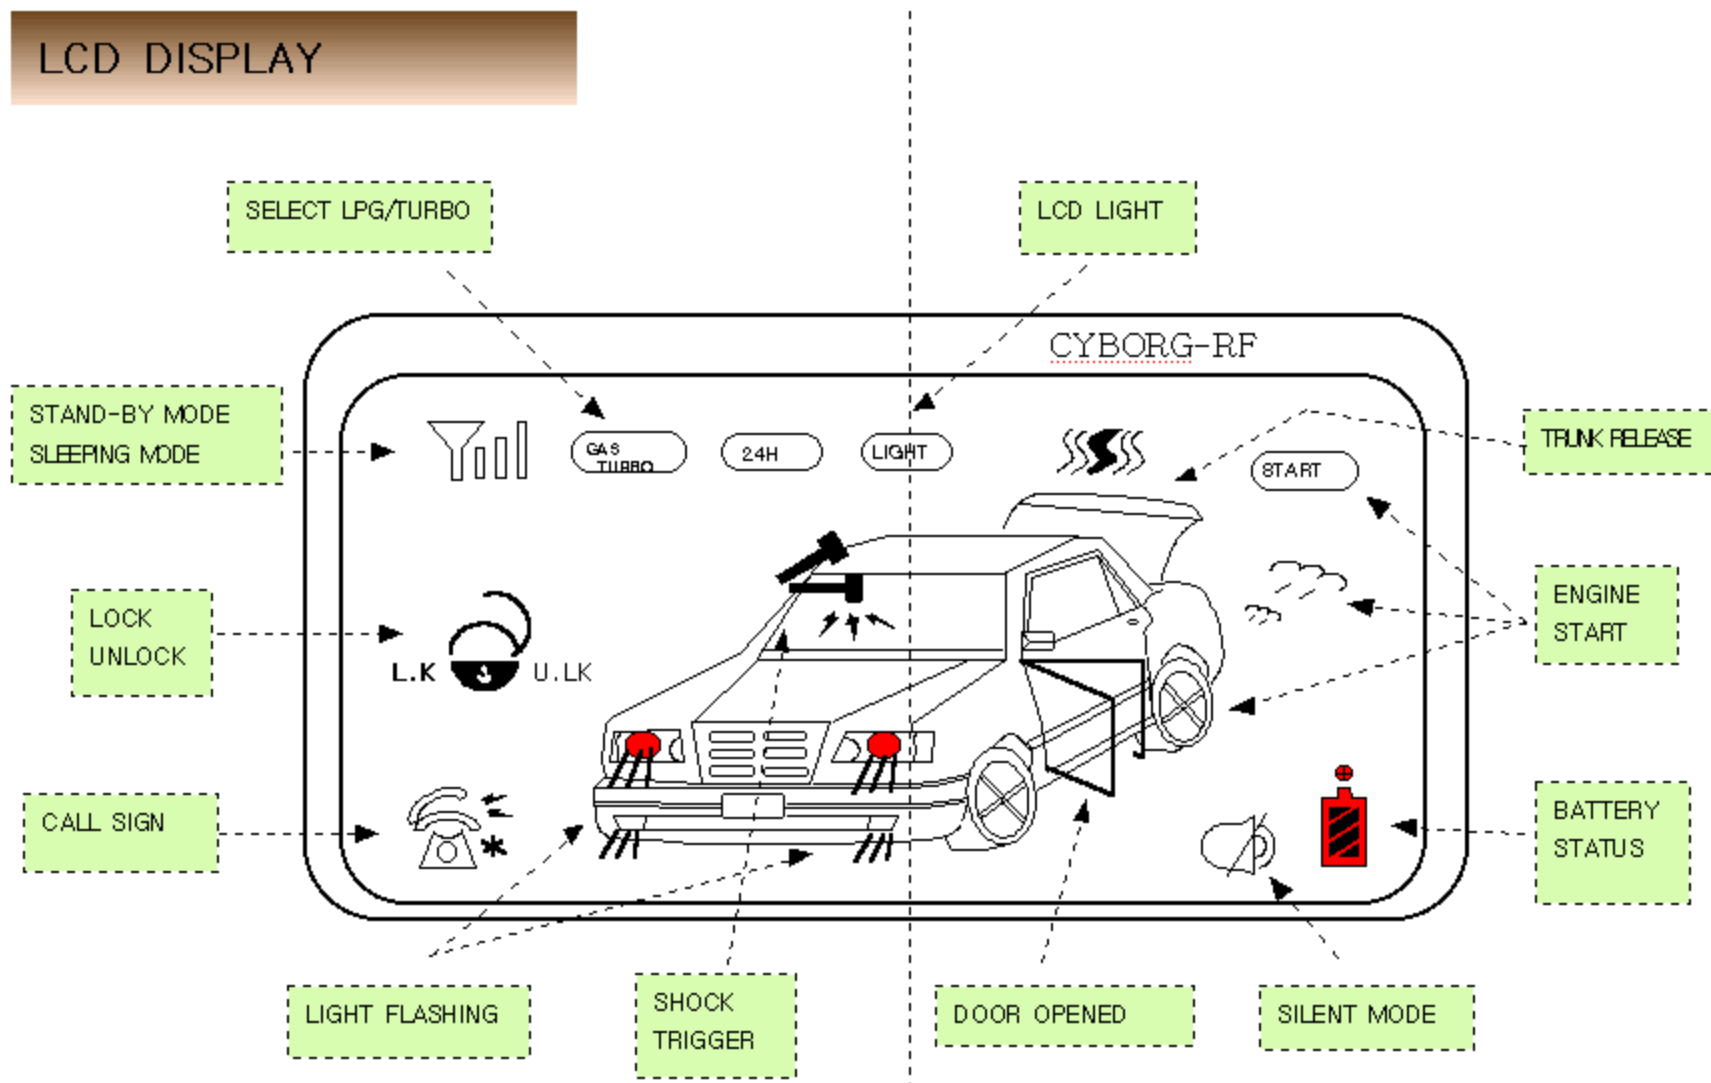

BUTTON S FEATURE

#	TIME	FEATURES
1	1"	ARM (LOCK) / DISARM (UNLOCK)
	3"	PANIC
2	1"	ENGINE START
3	2"	TRUNK RELEASE
	1"	TWO TIMES (SELECT STAND-BY MODE)
F	1"	CAR FINDER
	3"	LCD LIGHT ON / OFF
1 + 3	1"	SILENT MODE ON / OFF
1 + F	1"	SELECT LPG , TURBO
3 + F	1"	CHECK THE STATUS OF VEHICLE'S

SYSTEM PROGRAMMING VIA REMOTE CONTROL

#	TIME	STATUS	1 CHIRP	2 CHIRPS (DEFAULT)
1	5"	IGNITION ON + VALET ON	ACTIVE ARM	PASSIVE ARM
2	3"	IGNITION ON	ENGINE RUN TIME (25 MINUTES)	ENGINE RUN TIME (15 MINUTES)
1 + 2	5"		SHORT START	STANDARD START
1 + 3	5"		AFTER 8' ENGINE START (DIESEL)	AFTER 2.5' ENGINE START (GASOLINE)

* SIREN SOUND SELECTION

- PUSH VALET S/W 5 TIMES WITH IGNITION KEY OFF AT VALET MODE 'ON' POSITION.

1 CHIRP DOOR TRIGGER		30" 1/2SEC INTERVAL
SHOCK TRIGGER		1/2SEC 3 TIMES AT TIMES
2 CHIRPS DOOR TRIGGER		30" CONTINUOUSLY
SHOCK TRIGGER		2" 5 TIMES

ARMING / DISARMING OF SYSTEM

1. DOOR LOCK AND ARM

PRESS THE BUTTON#1 ON THE TRANSMITTER THEN THE SYSTEM WILL BE ARMED AND DOOR WILL BE LOCKED IMMEDIATELY WITH ONE CHIRP SOUND AND LIGHT FLASHING ONCE.

- ▶ LCD DISPLAY : ONE LIGHT FLASHING, ONE CHIRP SOUND
- ▶ WHEN THREE CHIRP SOUNDS → IT MEANS THAT ALL DOORS ARE CLOSED COMPLETELY.

2. DOOR UNLOCK AND DISARM

PRESS THE BUTTON#1 ON THE TRANSMITTER THEN THE SYSTEM WILL BE DISARMED AND DOOR WILL BE UNLOCKED IMMEDIATELY WITH TWO CHIRP SOUND AND LIGHT FLASHING TWICE.

- ▶ LCD DISPLAY : TWO LIGHT FLASHING, TWO CHIRP SOUND
- ▶ WHEN FOUR CHIRP SOUNDS → IT HAS HAPPENED UNAUTHORIZED ENTRY OR IMPACTS IN YOUR ABSENCE. SO PLEASE CHECK CAREFULLY TO YOUR CAR.

3. REMOTE PANIC OPERATION

WHEN THE CAR IS RUNNING OR PARKING, THE SYSTEM CAN SOUND EMERGENCY SIREN WITH FLASHING PARKING LIGHT BY PRESSING THE TRANSMITTER BUTTON #1 FOR 3 SECONDS TO SHUT PANIC OFF. PRESS THE TRANSMITTER BUTTON #1 AGAIN THEN THE SIREN WILL STOP.

- ▶ LCD DISPLAY : LIGHT FLASHING CONTINUOUSLY FOR 3 SECONDS IN 30".

REMOTE START SYSTEM

1. FOR AUTOMATICAL TRANSMISSION

- PUT VEHICLE TRANSMISSION INTO NEUTRAL OR PARKING, PRESS THE TRANSMITTER BUTTON #2 FOR A SECOND, THEN THE ENGINE WILL BE STARTED WITH ONE CHIRP SOUND AND FLASHING PARKING LIGHT.

FOR THE NOTICE OF ENGINE START, SYSTEM WILL CHIRP (PARKING LIGHT) 3 TIMES. IF THE ENGINE FAILS TO START, SYSTEM WILL AUTOMATICALLY TRY UP TO THREE TIMES UNTIL THE ENGINE HAS STARTED. TO CUT OFF THE ENGINE START, PRESS THE TRANSMITTER BUTTON#1 TWICE.

2. FOR MANUAL TRANSMISSION

- ① PUT VEHICLE TRANSMISSION INTO NEUTRAL.
- ② PUSH BUTTON 2 ON REMOTE CONTROL, THE UNIT WILL CHIRP ONCE AND THE PARKING LIGHTS WILL FLASH.
- ③ TURN THE IGNITION TO THE OFF POSITION AND TAKE KEYS OUT OF THE IGNITION.
- ④ EXIT THE VEHICLE WHILE IT IS STILL RUNNING.
- ⑤ CLOSE THE DRIVER DOOR, THE UNIT WILL CHIRP.

IF IT IS NECESSARY TO TURN THE ENGINE OFF IMMEDIATELY WITHOUT DOING START RESERVATION, PUSH VALET S/W ON OR TAKE THE KEY OUT AT OPEN DOOR POSITION.

► LCD DISPLAY : LIGHT FLASHING ONCE AND ONE CHIRP, WHEN THE ENGINE IS STARTED, THE LIGHT FLASHES THREE TIMES AND CHIRPS 3 TIMES.

► WHEN THE ENGINE TURNED ON, THE LIGHT FLASHING CONTINUOUSLY FOR 8 SECONDS IN 15', AND THE LED IS FLASHING THREE TIMES.

THE VEHICLE WILL REMOTE START AS LONG AS A DOOR HAS NOT BEEN OPENED.

3. AIR-CONDITION / HEATER OPERATION

FIRST OFF ALL MAKE THE AIR-CONDITION / HEATER SWITCH "ON" POSITION AND ENGINE IS STARTED, THEY WILL OPERATE AFTER 30 SECONDS.

4. LIMITED ENGINE START BY TRANSMITTER.

SYSTEM WILL SHUT OFF AUTOMATICALLY AFTER 15 MINUTES.

5. ARMING WHILE ENGINE START BY TRANSMITTER.

SYSTEM TRIGGERED BY DOOR THEN THE ENGINE WILL SHUT OFF AND THEN SIREN WILL SOUND.

ACCESSORY FEATURES

1. CAR FINDER

- ① PRESS BUTTON 'F' FOR A SECOND.
- ② A LONG CHIRP 3 TIMES AND LIGHT FLASHING 3 TIMES.

2. VALET

- ① TURN THE IGNITION KEY 'ON' AND PUSH THE VALET S/W 'ON'.
- ② WHEN THE SYSTEM IS AT VALET MODE, L.E.D. IS TURNED TO RED LAMP CONTINUOUSLY.
- ③ ONLY THE KEYLESS ENTRY FEATURE OF THE SYSTEM WILL BE ACTIVATED.

3. TRUNK RELEASE

- ① PRESS BUTTON #3 FOR 2 SECONDS.
- ② THE TRUNK WILL BE OPENED.

4. SILENT MODE (PERMANENT CHIRP DELETE)

- ① PRESS BUTTON #1 AND # 3 FOR A SECOND.
- ② YOU CAN OPERATE THE ALARM SYSTEM WITHOUT CHIRP SOUND.

5. SILENT MODE (TEMPORARY CHIRP DELETE)

- ① PRESS BUTTON #3 AND THEN # 1 WITHIN 3 SECONDS.
- ② YOU CAN OPERATE THE ALARM SYSTEM WITHOUT CHIRP SOUND TEMPORARY

6. REMOTE LIGHT DISPLAY

- ① PRESS BUTTON #F FOR 3 SECONDS.
- ② LCD DISPLAYS THE SIGNS WITH BACK GROUND LIGHT.

7. TURBO FEATURE

1) FOR AUTOMATICAL TRANSMISSION

- ① AFTER DRIVING ALL, PRESS BUTTON #2 AT THE IGNITION TURN ON,
(ONE CHIRP & ONE LIGHT FLASHING)
- ② IF THIS FEATURE IS ACTIVATED, EVEN IF THE KEY TAKEN OUT,
THE IGNITION WILL BE TURNED ON IN 2 MINUTES.

2) FOR MANUAL TRANSMISSION

- ① IT IS THE SAME AS THE START RESERVATION'S WAY.
- ② IF THIS FEATURE IS ACTIVATED, EVEN IF THE KEY TAKEN OUT,
THE IGNITION WILL BE TURNED ON IN 2 MINUTES.

AFTER LONG DRIVING, THIS FEATURE CAN BE USED TO PROTECT THE ENGINE.

8. CONFIRM THE VEHICLE'S STATUS.

- ① PRESS BUTTON # 3 AND #F FOR A SECOND.
- ② THE REMOTE CONTROLS WILL BE REPORTED THE CURRENT STATUS OF THE CAR'S.

9. PAGING OWNER


- ① IF SOMEONE WANT TO CALL THE OWNER OF THE VEHICLE'S , JUST KNOCK TO THE PAGING SENSOR IS LOCATED AT THE WINDOW.
- ② AND THEN THE REMOTE WILL BE SOUNDED THREE LONG CHIRPS.

10. STAND-BY MODE


- ① PRESS BUTTON #3 FOR A SECOND TWO TIMES, THE STAND-BY MODE WILL BE TURN ON/OFF.

CONNECTION FOR LPG VEHICLE

- 1) THE EVAPORATOR IS OPERATED BY +12V WHEN THE GAS S/W
TURNED ON

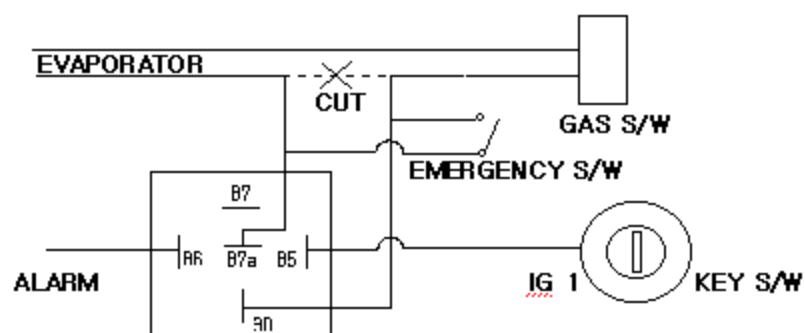


- 2) THE EVAPORATOR IS OPERATED BY +12V WHEN THE GAS S/W
TURNED OFF

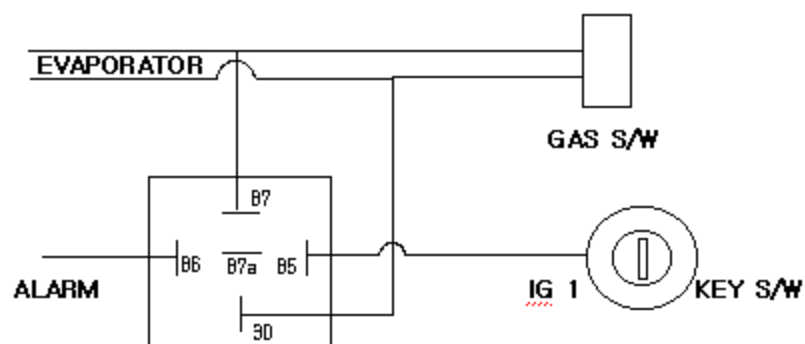


DOOR WIRING CONNECTION


- 1) THE VEHICLE HAS INSTALLED MOTOR AND ACTULATOR FROM
THE FACTORY.

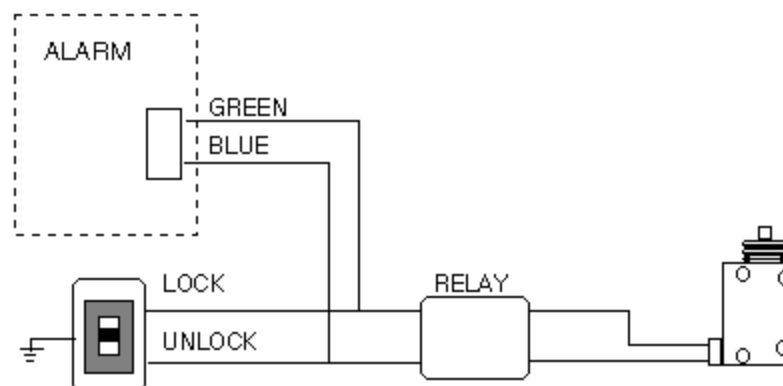


- 2) THE VEHICLE HAS NOT INSTALLED MOTOR AND ACTUATOR FROM THE FACTORY.

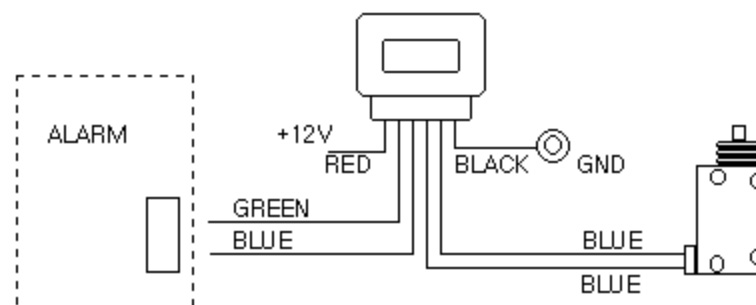

START KILL CONNECTION

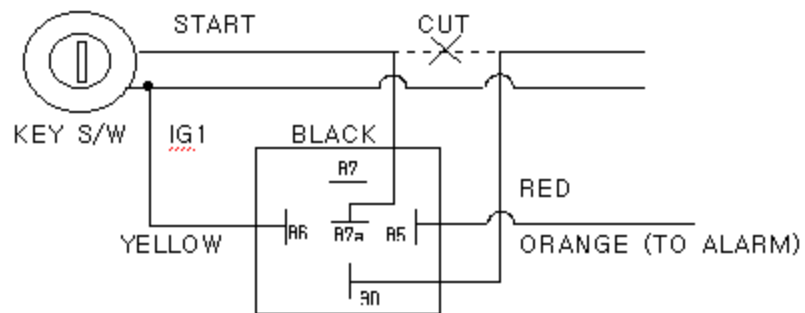

ALARM WIRING CONNECTION

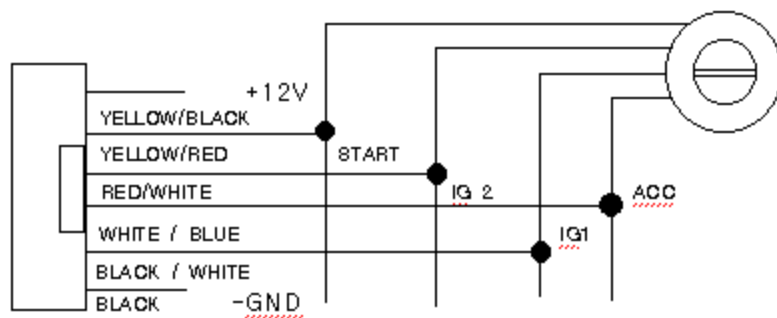

* IF THE VEHICLE DOES NOT HAVE ACC,
SO CONNECT TO IG1 OR IG2 POSITION.

Caution :

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance

could void the users authority to operate the equipment.

FCC ID : HH8CYBORGGRFTRX1 (REMOTE)

HH8CYBORGGRFTRX2 (BASE)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two condition :

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

DONG YANG SECURITY ELECTRONICS CO., LTD .

435-6 NONHYUN-DONG, NAMDONG INDUSTRIAL COMPLEX

45BLOCK 6LOT, INCHEON, KOREA.

www.goldenbat.com

E-mail) dytrade@goldenbat.com

TEL) +82-32-814-8080/4

FAX) +82-32-814-8085

MODEL : TWO-WAY CAR STARTER ALARM

CYBORG-RF

