

Figure 7
Inside Configuration of the EUT

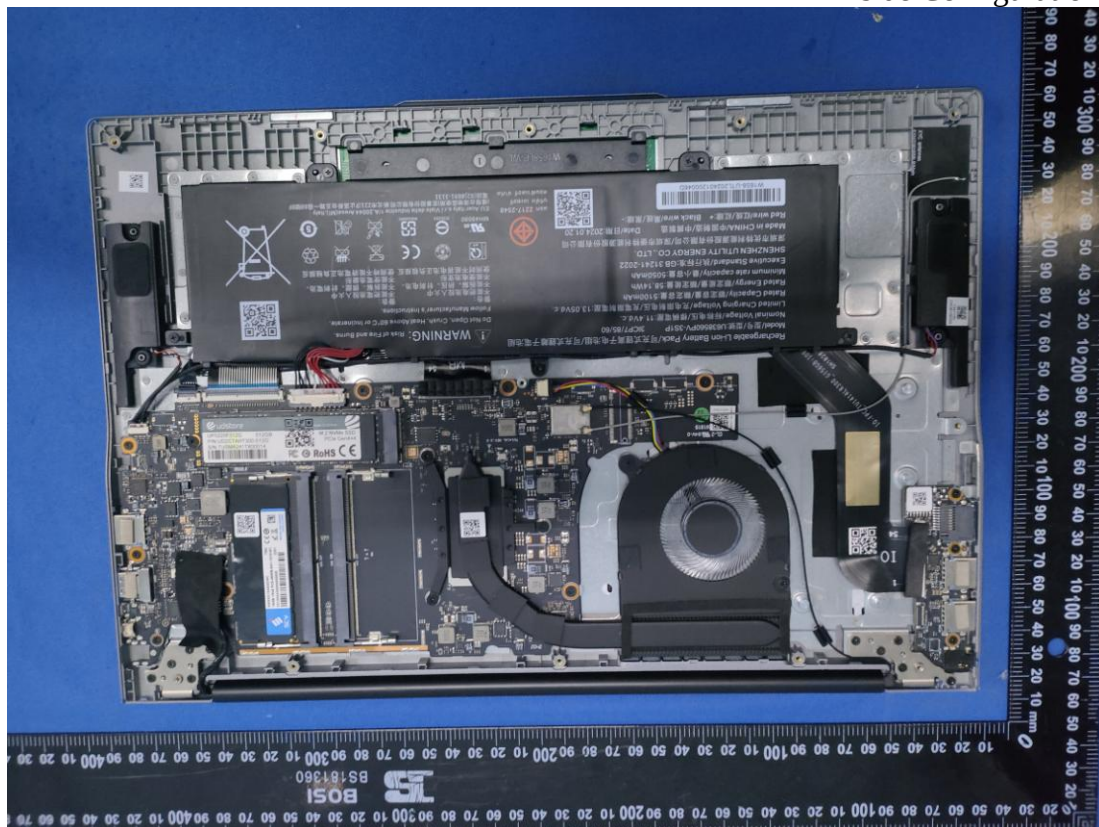


Figure 8
Inside Configuration of the EUT



Figure 9
Inside Configuration of the EUT

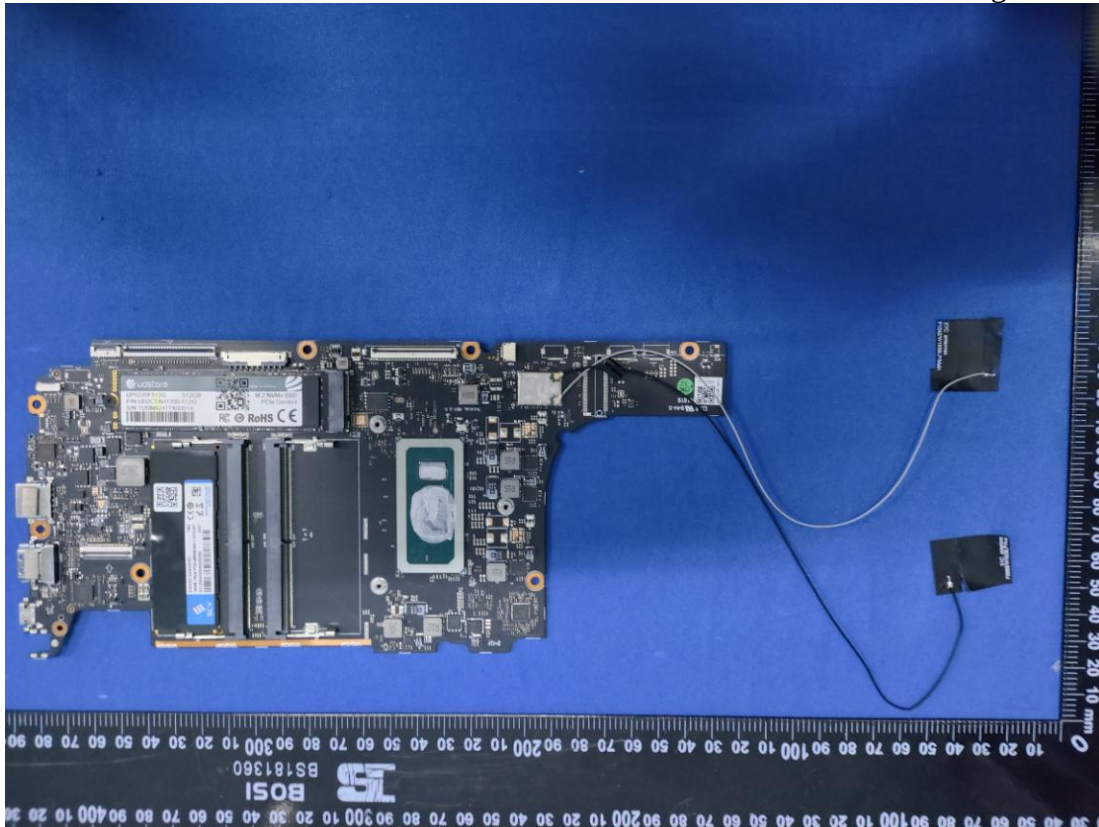


Figure 10
Inside Configuration of the EUT

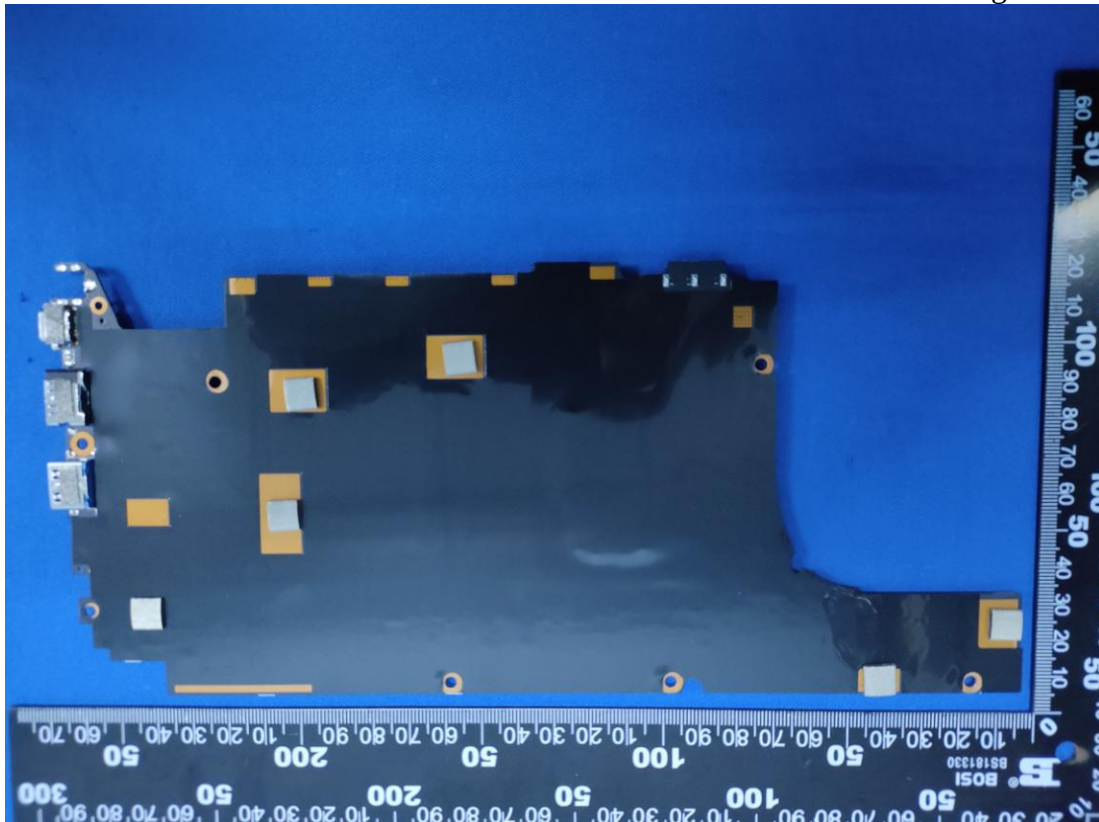


Figure 11
Inside Configuration of the EUT



Figure 12
Inside Configuration of the EUT

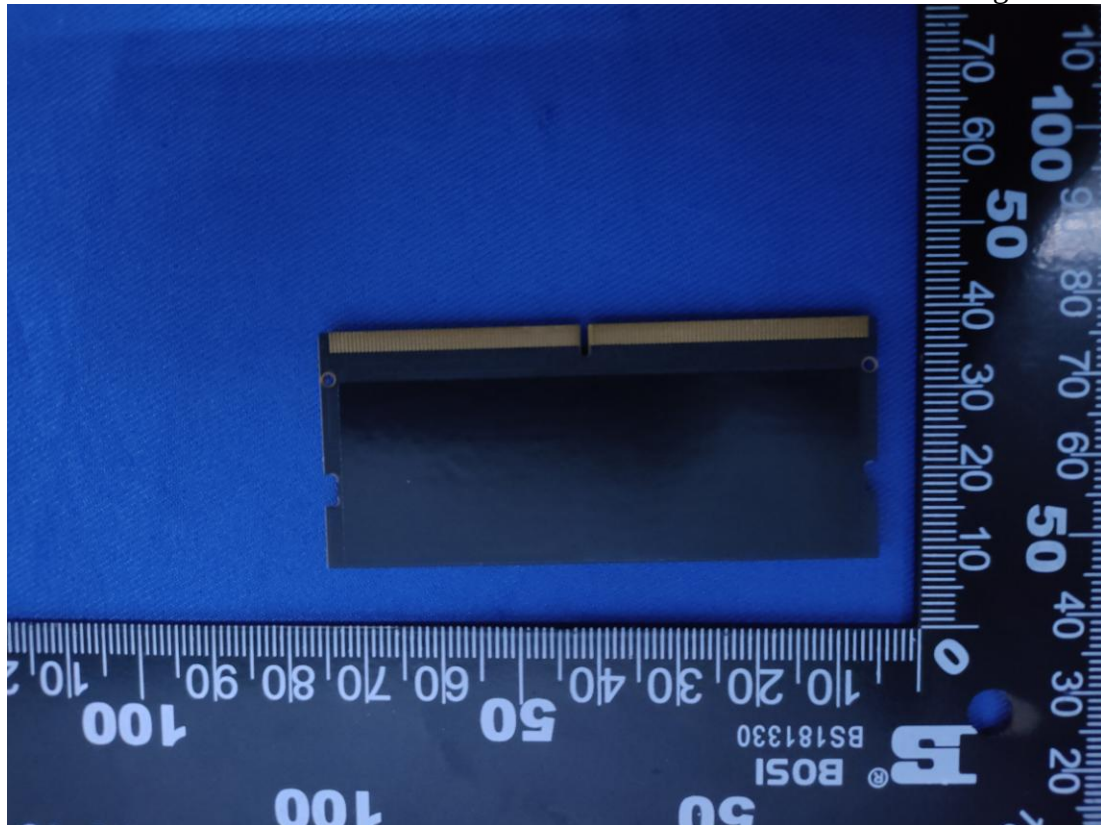


Figure 13
Inside Configuration of the EUT



Figure 14
Inside Configuration of the EUT

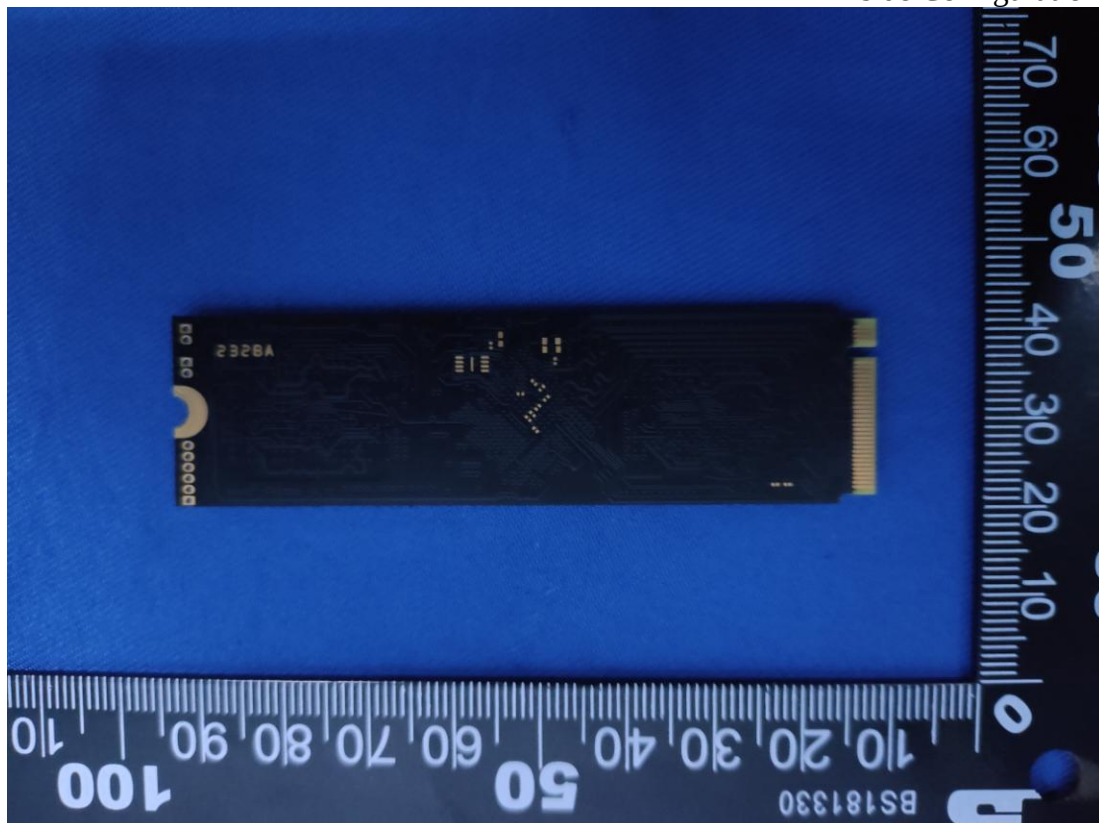


Figure 15
Antenna

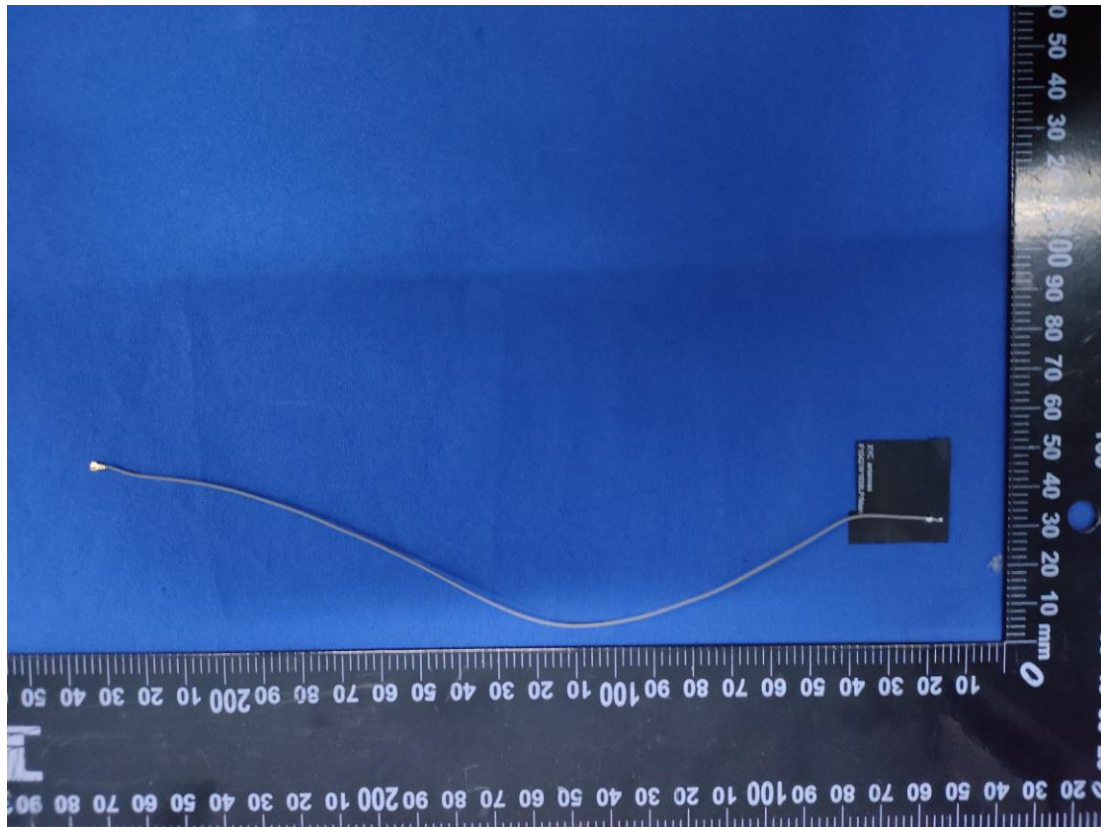


Figure 16
Antenna

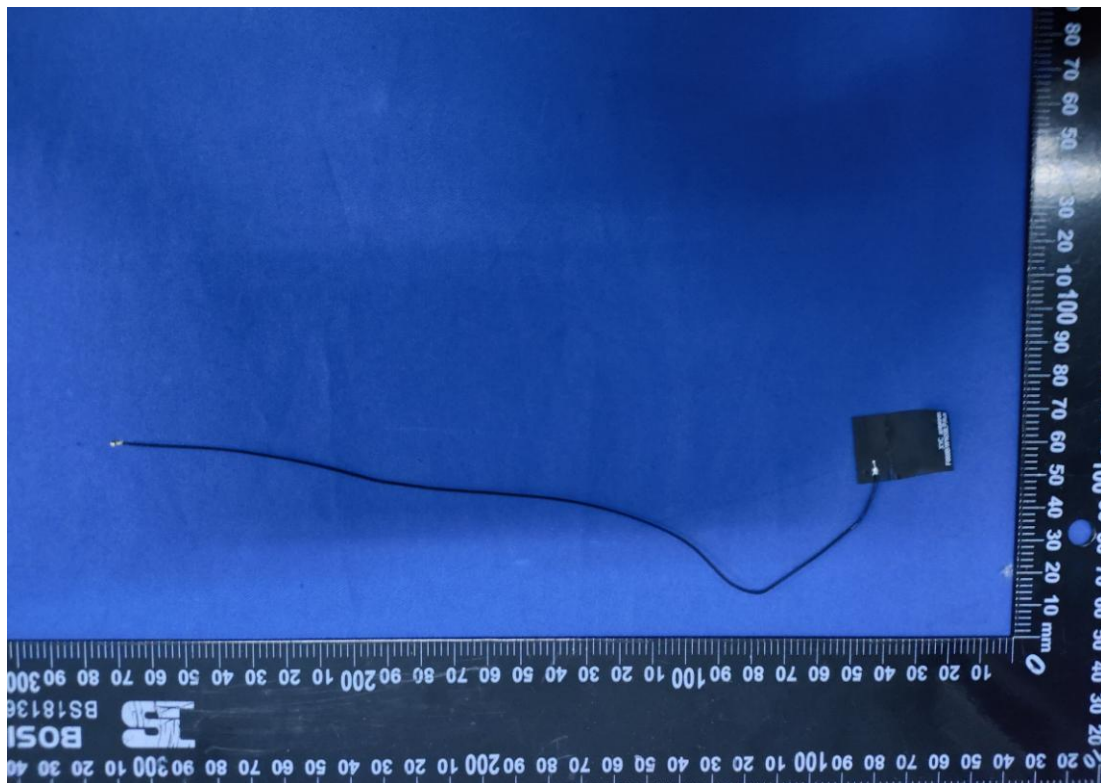


Figure 17
Inside Configuration of the EUT

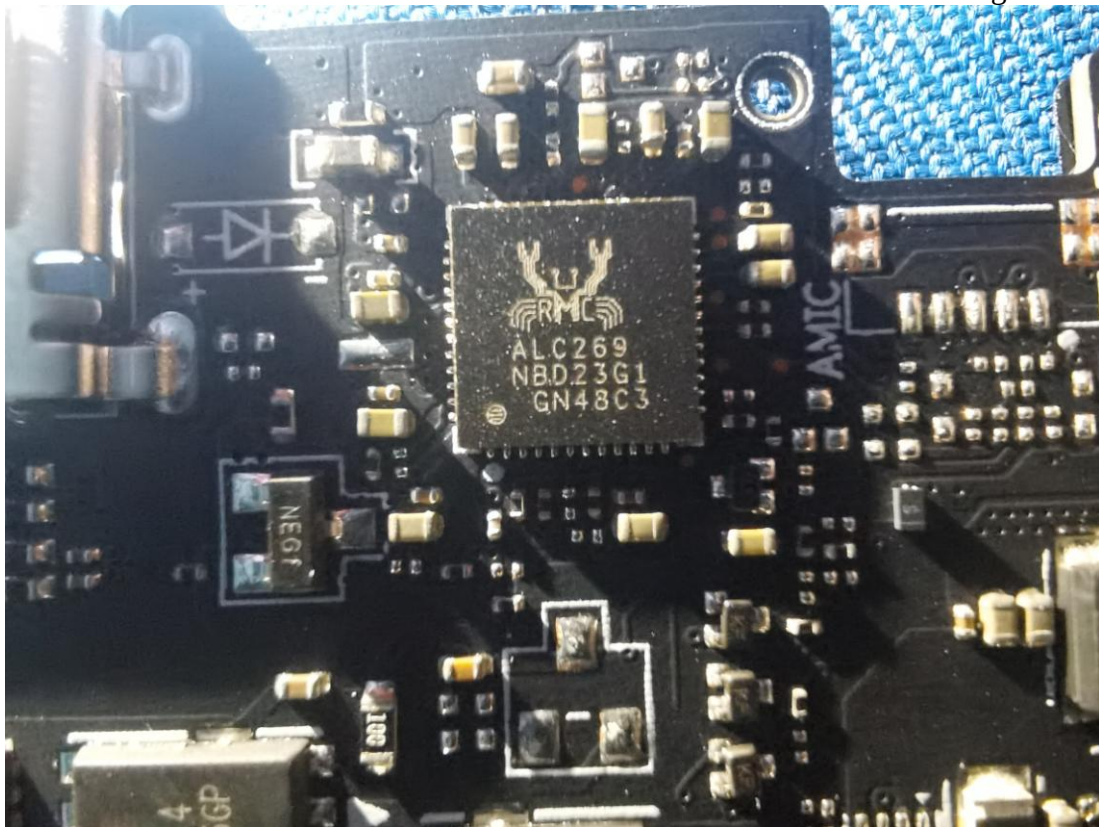


Figure 18
Inside Configuration of the EUT


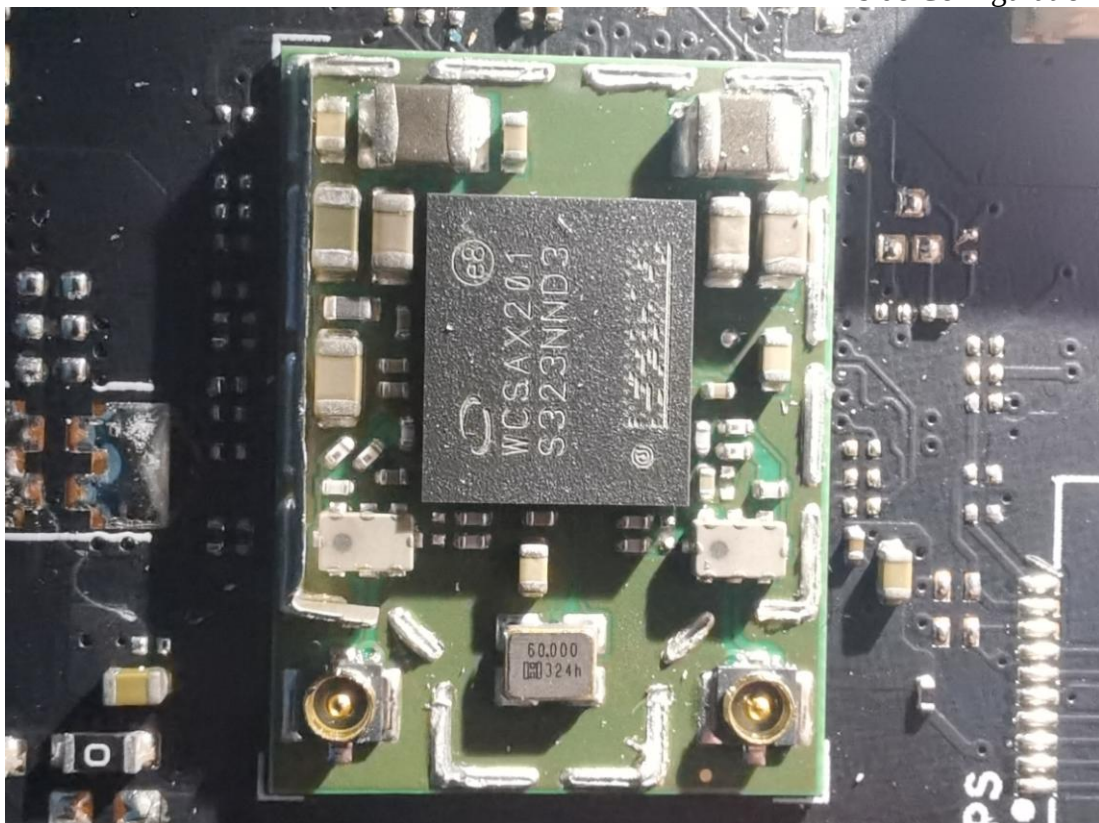


Figure 19
Inside Configuration of the EUT

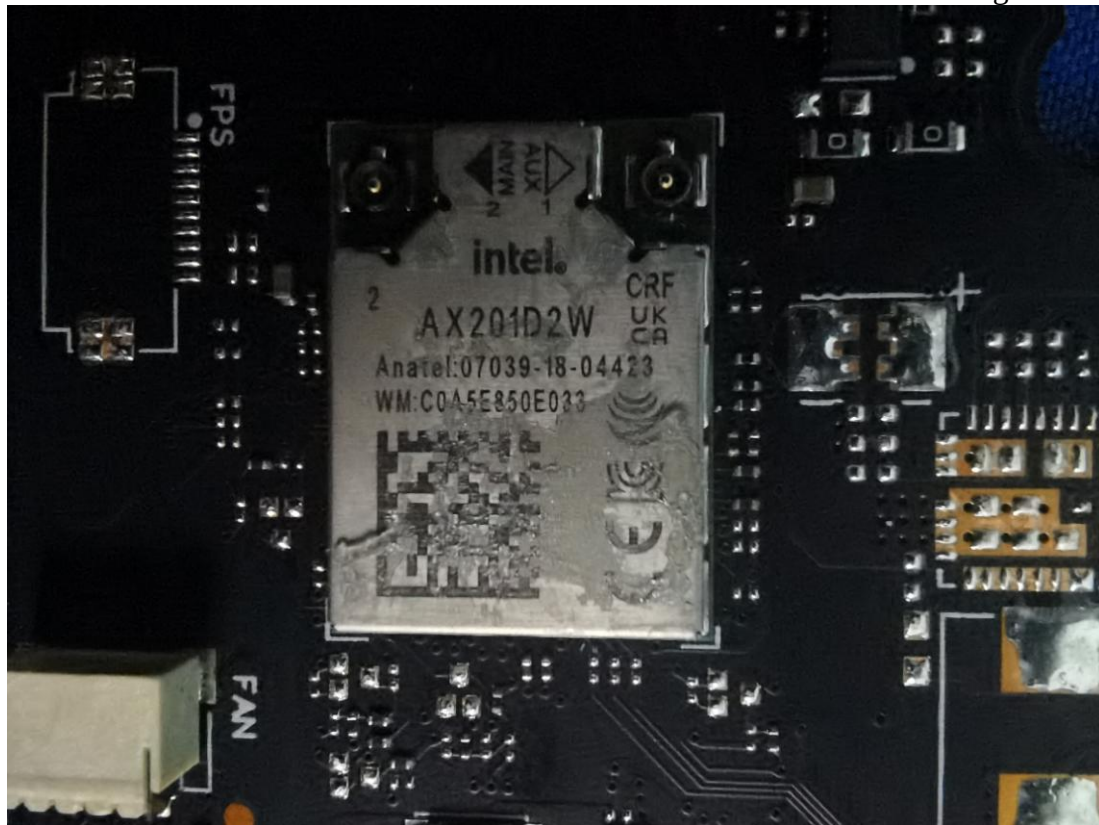

..... **THE END**