

© 2022. All Rights Reserved.

ConceptD Mix Ezel

Covers: CCM14-51 / CCM14-51G

This revision: March 2022

This manual contains proprietary information that is protected by copyright laws. The information contained in this manual is subject to change without notice. Some features described in this manual may not be supported depending on the Operating System version. Images provided herein are for reference only and may contain information or features that do not apply to your computer. Acer Group shall not be liable for technical or editorial errors or omissions contained in this manual.

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

ENVIRONMENT

Temperature:

- Operating: 5 °C to 35 °C
- Storage: -20 °C to 60 °C

Humidity (non-condensing):

- Operating: 20% to 80%
- Storage: 20% to 60%

First things first

We would like to thank you for making this ConceptD notebook your choice for meeting your mobile computing needs.

Your guides

To help you use your ConceptD notebook, we have designed a set of guides:

First off, the **Setup Guide** helps you get started with setting up your computer.

The **Quick Guide** introduces you to the basic features and functions of your new computer.

For more on how your computer can help you to be more productive, please refer to the **ConceptD Mix Ezel User's Manual**. The **ConceptD Mix Ezel User's Manual** contains useful information applying to your new computer. It covers basic topics such as using the keyboard and audio, etc.

This guide contains detailed information on such subjects as system utilities, data recovery, expansion options and troubleshooting. In addition it contains warranty information and the general regulations and safety notices for your notebook.

The User's Manual can be downloaded from the Acer support website by going to:

<http://go.acer.com/support>

Software installation

The first time you turn on your computer, it will automatically install software and set up for use. This may take some time, please do not turn off your computer; wait until the installation has finished.

Recovery

You should create recovery backups as soon as you can. The *Acer Care Center* program allows you to create recovery backups and then to restore or reinstall applications and drivers provided by Acer.

Having trouble?

Acer provides several options to support your purchase.

Acer support

Make sure you write down your computer serial number, date and place of purchase and model name on the area provided in this guide; save your proof of purchase. Before you call us, please write down any error message that accompanies the

problem, and have the computer in front of you and switched on if possible. Having these items to hand when contacting us will ensure better and quicker service.

Acer website

Remember to visit **www.acer.com** and refer to the support section for up-to-date information, help, drivers and downloads.

 
Warranty and contact information

You can find information about the warranty for your computer and how to contact technical support in your computer's Warranty.

Your ConceptD notebook tour


After setting up your computer as illustrated in the Setup Guide, let us show you around your new ConceptD computer.

Screen view

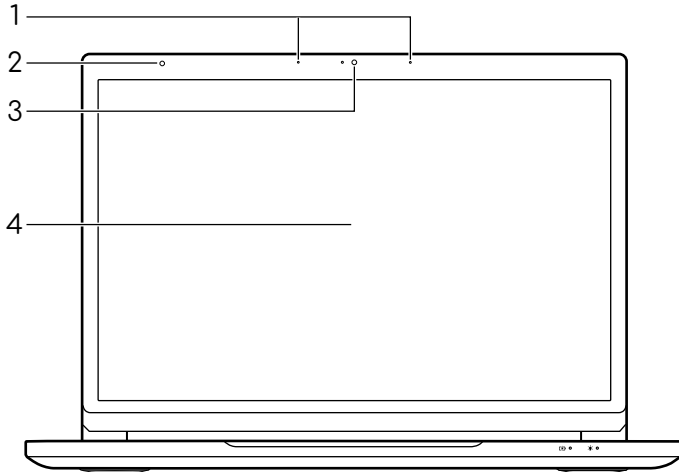


#	Icon	Item	Description
1		Microphones	Internal stereo digital microphones for sound recording.
2		Ambient light sensor	Adjusts the brightness of the screen, depending on the ambient light.
3		Webcam	Web camera for video communication. <i>A light next to the webcam indicates that the webcam is active.</i>
4		Touchscreen	Displays computer output, supports multi-touch input.

 Keyboard view

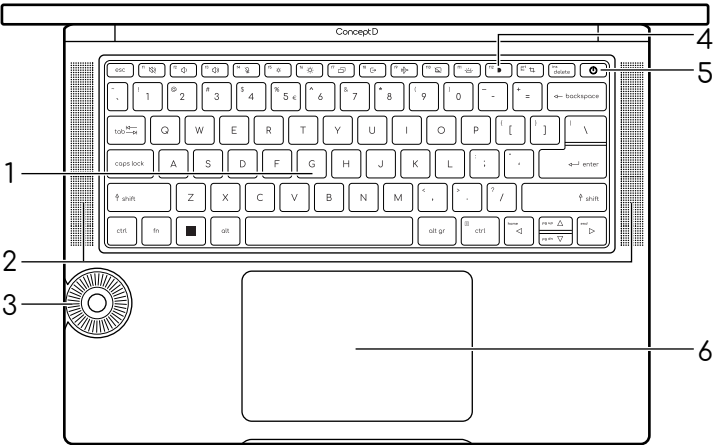

#	Icon	Item	Description
1		Backlit keyboard	For entering data into your computer. See "Using the keyboard" on page 9.
2		Speakers	Deliver stereo audio output.
3		ConceptD Dial	Use ConceptD Dial to adjust brush size/opacity, move frame forward/backward, adjust the volume/brightness and more functions through supported apps. Support a variety of Adobe Creative Suites apps, podcasting and music creation apps.
4		ConceptD key	Opens the ConceptD Dial Settings (Default). You can change the setting in the ConceptD Palette application.
5		Power button with fingerprint reader	Press to turn the computer on and off. Touch lightly to use fingerprint reader for Windows Hello and security.
6		Touchpad	Touch-sensitive pointing device.

 Left view

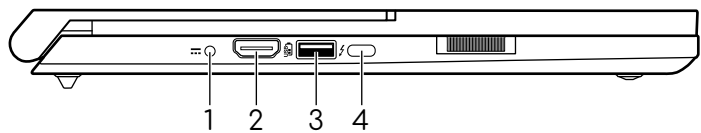

#	Icon	Item	Description
1		DC-in jack	Connects to an AC adapter.
2		HDMI port	Supports high-definition digital video connections.
3		USB port with power-off charging	Connects to USB devices.
4		USB Type-C / Thunderbolt 4 port	Connects to USB devices with a USB Type-C connector. Supports Thunderbolt™ 4 and displays.

Note: Your notebook is bundled with one of two types of power adapters: an AC power adapter or a USB Type-C power adapter. (Specifications vary depending on configuration.)


USB Type-C information

- Supports DisplayPort™ audio/video output.
- Compatible with Thunderbolt™ 4.
- Delivers up to 3 A at 5 V DC for USB charging.
- DC-in: requires power adapter or power source providing 100 W at 20 V.
For optimal performance, please use a certified Acer power adapter or USB Power Delivery device.

USB 3.2 Gen 2 information


- USB 3.2 Gen 2 compatible ports are blue.
- Compatible with USB 3.2 Gen 2 and earlier devices.
- For optimal performance, use USB 3.2 Gen 2-certified devices.
- Defined by the USB 3.2 Gen 2 specification (SuperSpeed USB).

 Right view

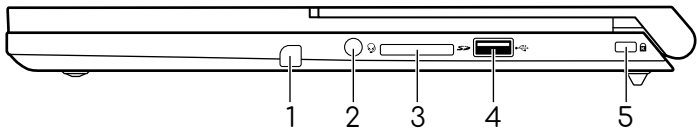


#	Icon	Item	Description
1		Active stylus	Draws, writes or highlights the text.
2		Headset/speaker jack	Connects to audio devices (e.g., speakers, headphones)
3		SD card reader	Accepts one Secure Digital (SD, SDHC or SDXC) card. <i>Only one card can operate at a time.</i>
4		USB port	Connects to USB devices.
5		Kensington lock slot	Connects to a Kensington-compatible security lock.

 Front view




#	Icon	Item	Description
1		Battery indicator	Indicates the computer's battery status. Charging: <i>The light shows amber when the battery is charging.</i> Fully charged: <i>The light shows blue when in AC mode.</i>
		Power indicator	Indicates the computer's power status.

 Rear view



#	Icon	Item	Description
1		Ventilation	Allows the computer to stay cool. <i>Do not cover or obstruct the openings.</i>

 Base view

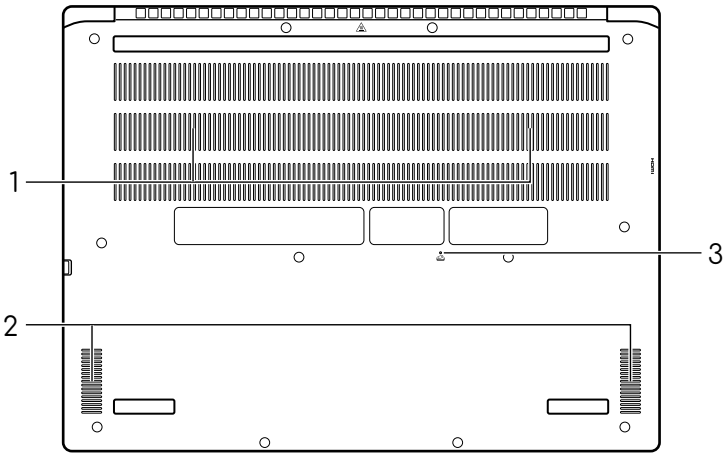

#	Icon	Item	Description
1		Battery reset pinhole	Simulates removing and reinstalling the battery. <i>Insert a paperclip into the hole and press for four seconds.</i>
2		Speakers	Deliver stereo audio output.
3		Ventilation and cooling fan	Allows the computer to stay cool. <i>Do not cover or obstruct the openings.</i>

Using the keyboard

The keyboard has full-sized keys, a numeric keypad, separate cursor, lock, Windows, special keys and hotkeys.

Special keys

Your computer's keyboard includes keys that activate special functions. The function of each key is clearly marked with an icon.

Icon	Description
	Turns the speakers on and off.
	Decreases the sound volume.
	Increases the sound volume.
	Turns the microphones on and off.
	Decreases the screen brightness.
	Increases the screen brightness.
	Switches display output between the display screen, external monitor (if connected) and both.
	Locks your computer to secure your information. You can enter password to continue your work.
	Turns on / off the computer's network devices.
	Turns the built-in touchpad on and off.
	Adjusts keyboard backlight brightness. (Function varies depending on configuration.)
	Snips a rectangle, freeform, window or full screen to your clipboard.

Hotkeys

To activate hotkeys, press and hold the **Fn** key before pressing the other key in the hotkey combination.

Hotkey	Icon	Description
Fn + F1 - F12		Activates the F1 to F12 keys.
Fn + 	prt sc	Take quick screen shots.
Fn + delete	ins	Turns Insert on or off.
Fn + 	home	Scrolls to the beginning of a document.
Fn + 	end	Scrolls to the end of a document.
Fn + 	pg up	Scrolls up a page in a document.
Fn + 	pg dn	Scrolls down a page in a document.