

Figure 7
Inside Configuration of the EUT

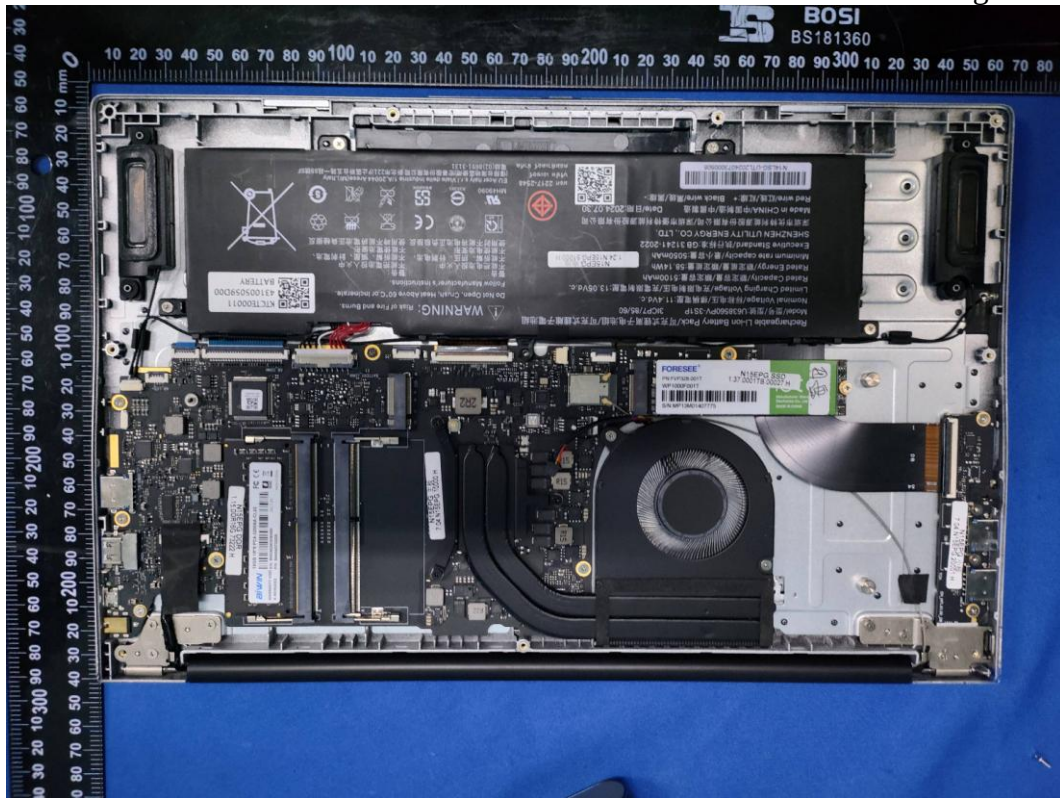


Figure 8
Inside Configuration of the EUT

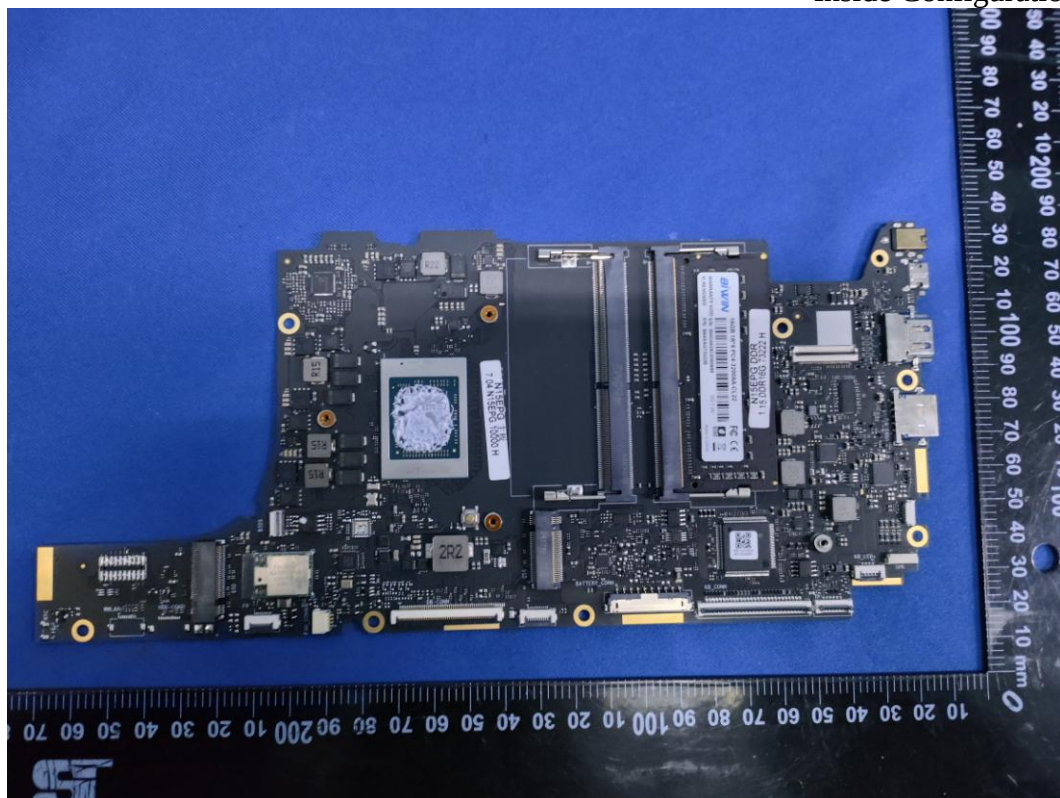


Figure 9
Inside Configuration of the EUT

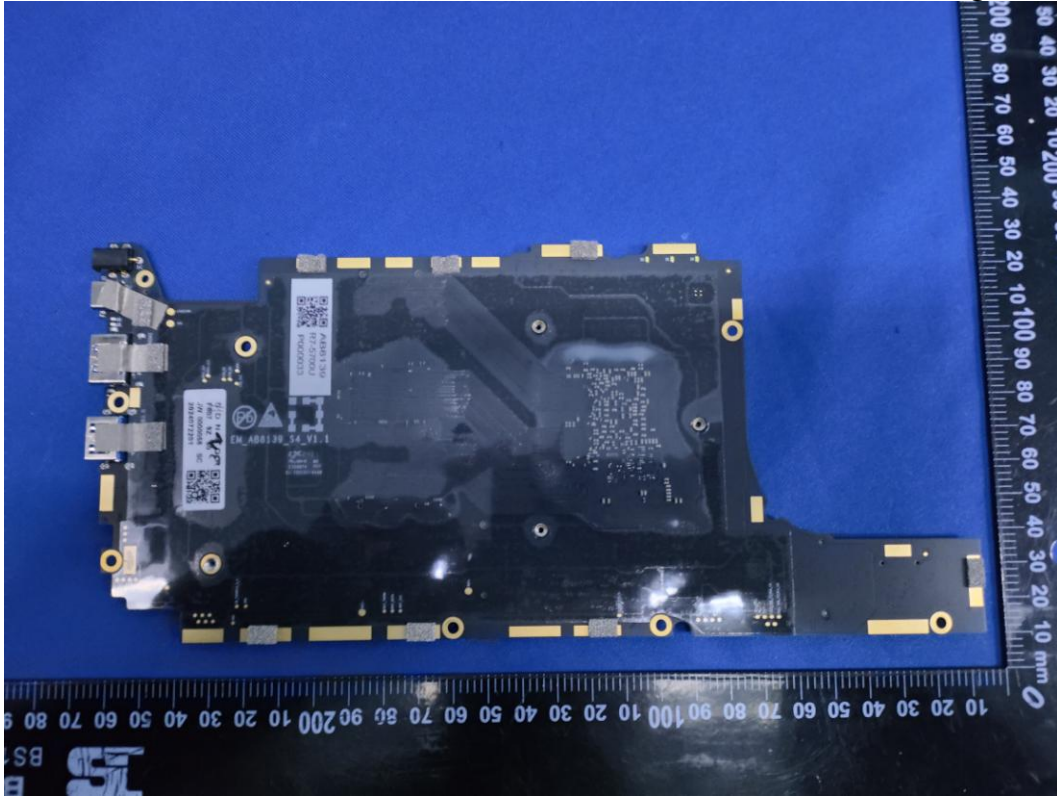


Figure 10
Inside Configuration of the EUT

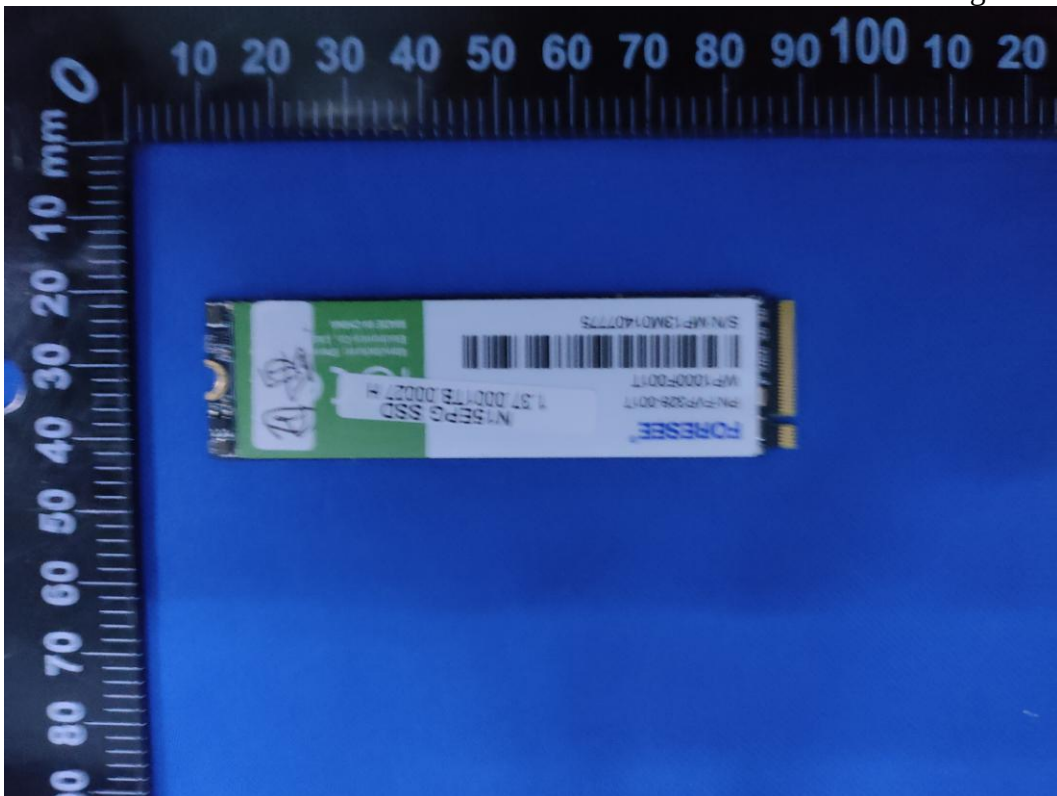


Figure 11
Inside Configuration of the EUT

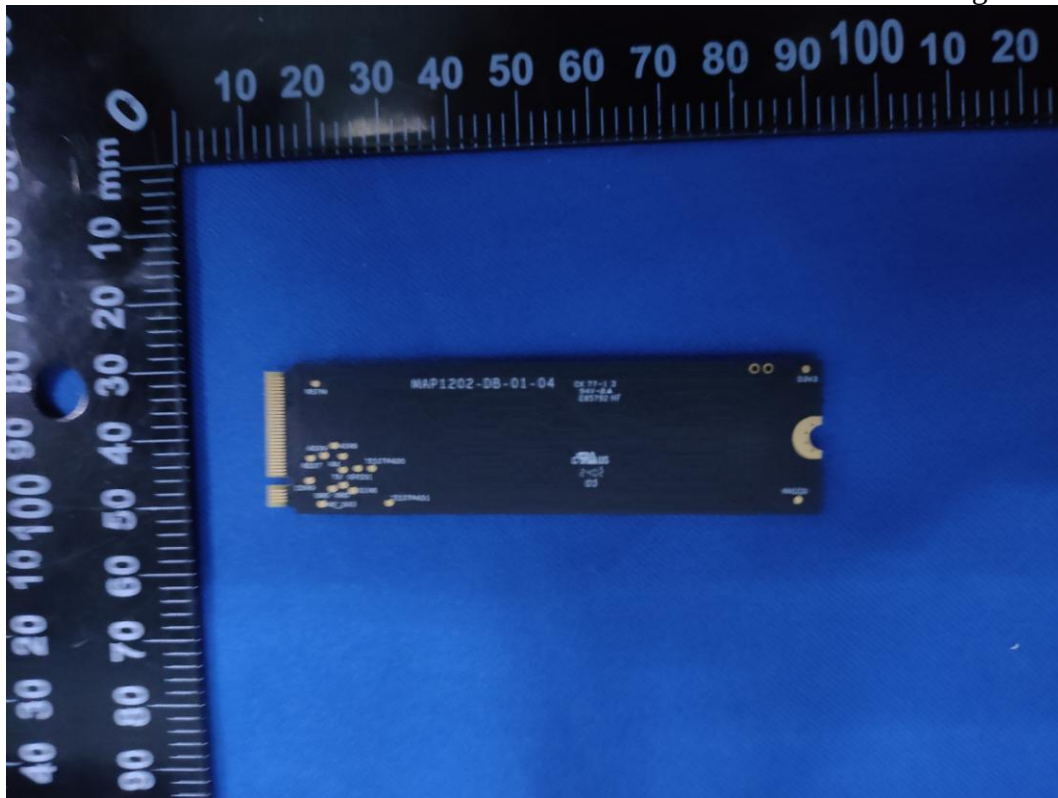


Figure 12
Inside Configuration of the EUT-ANT1

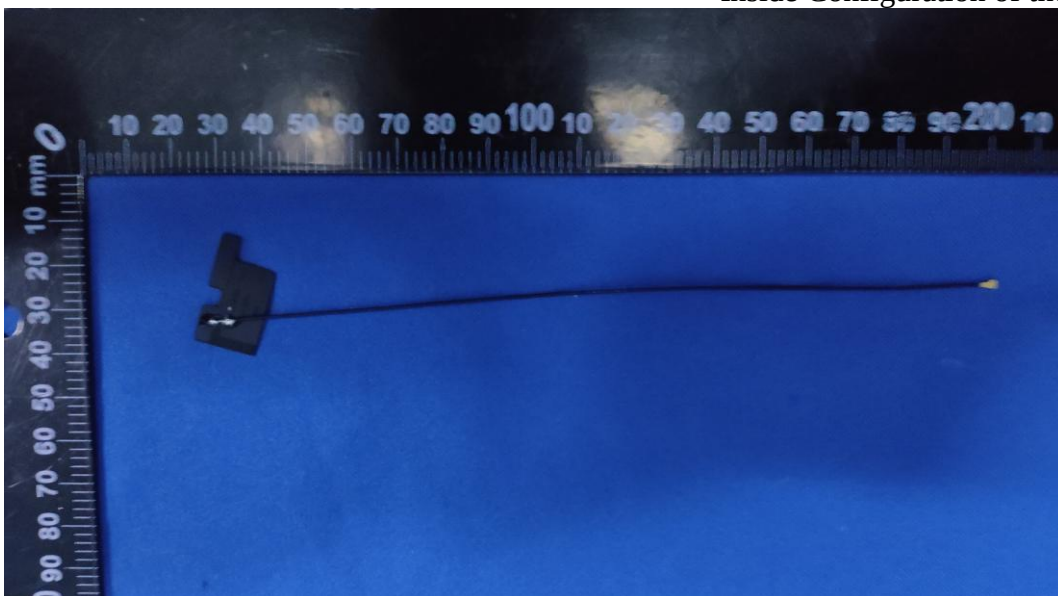


Figure 13
Inside Configuration of the EUT-ANT2

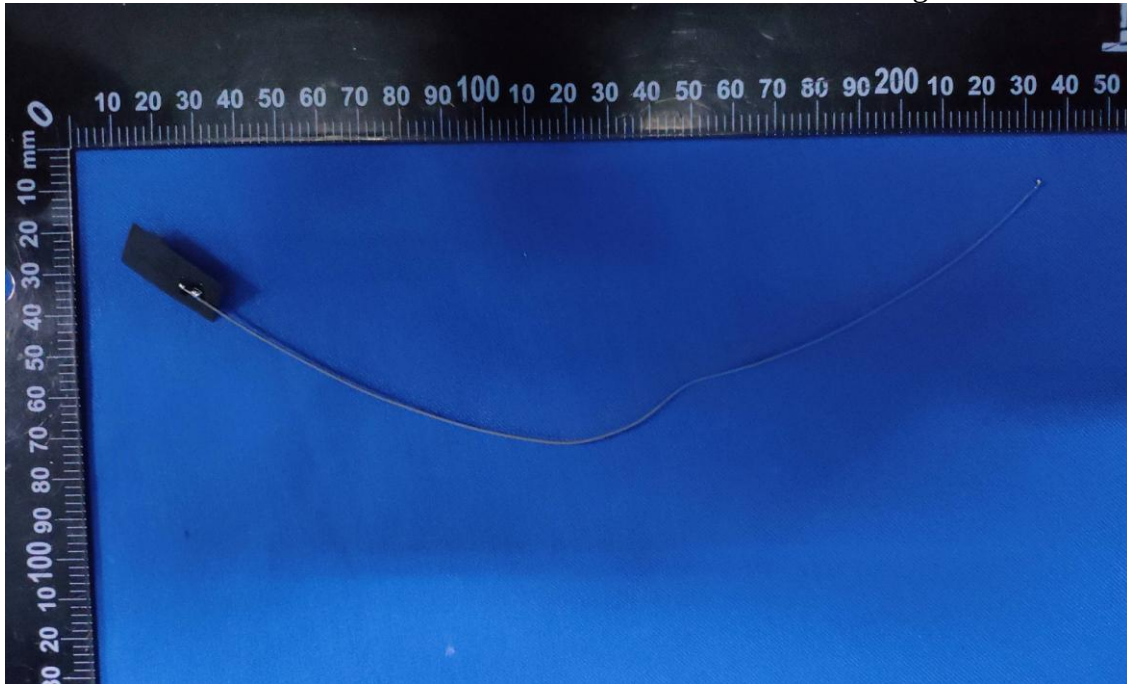


Figure 14
Inside Configuration of the EUT



Figure 15
Inside Configuration of the EUT

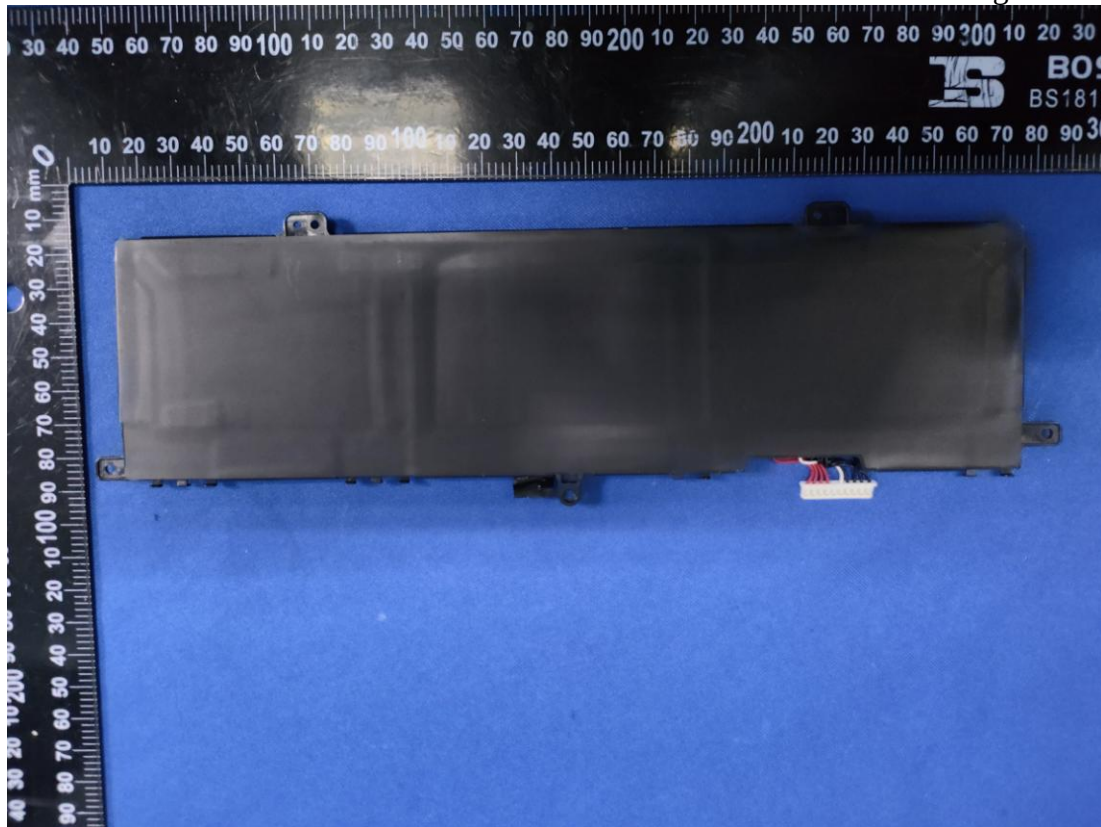


Figure 16
Inside Configuration of the EUT

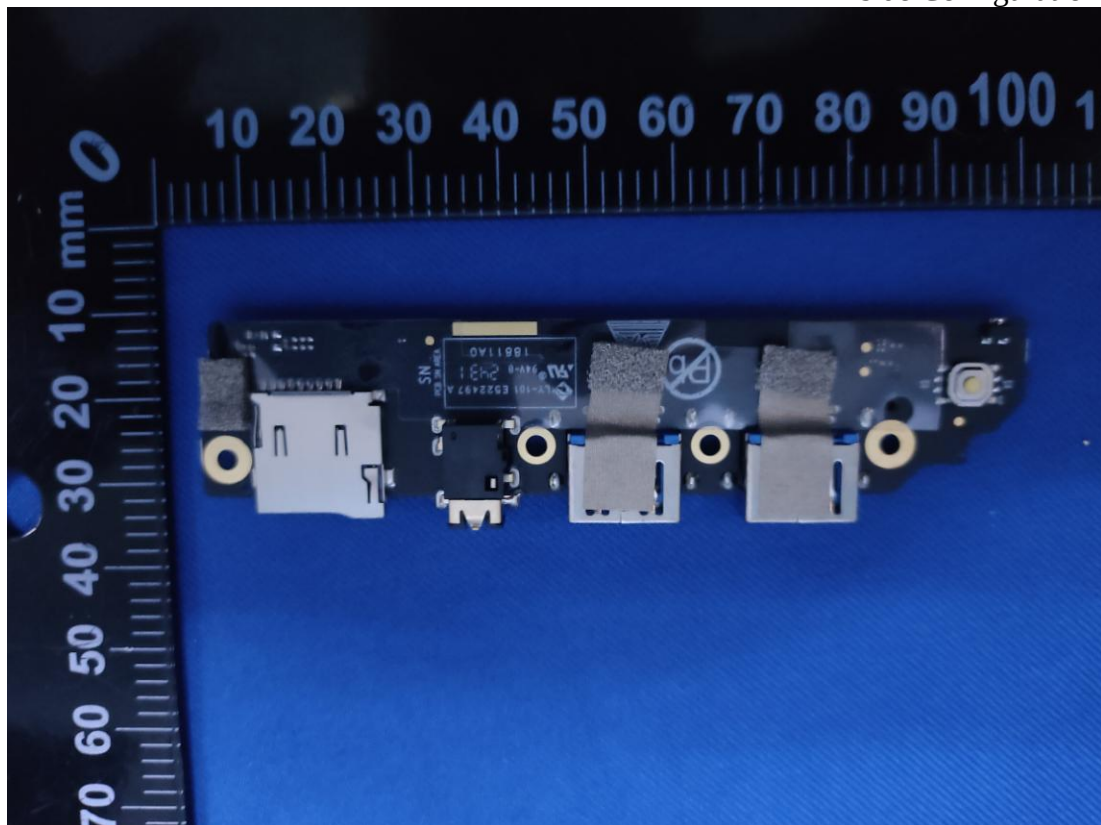


Figure 17
Inside Configuration of the EUT

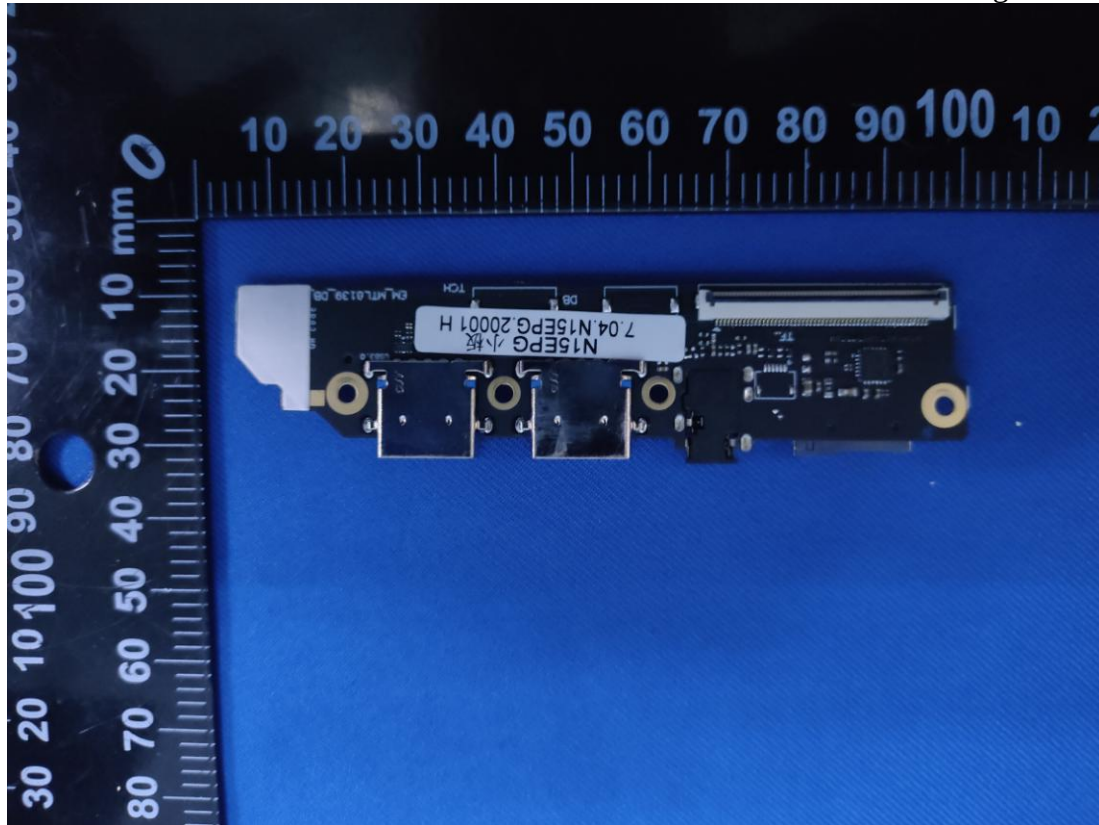


Figure 18
Inside Configuration of the EUT-RF Module


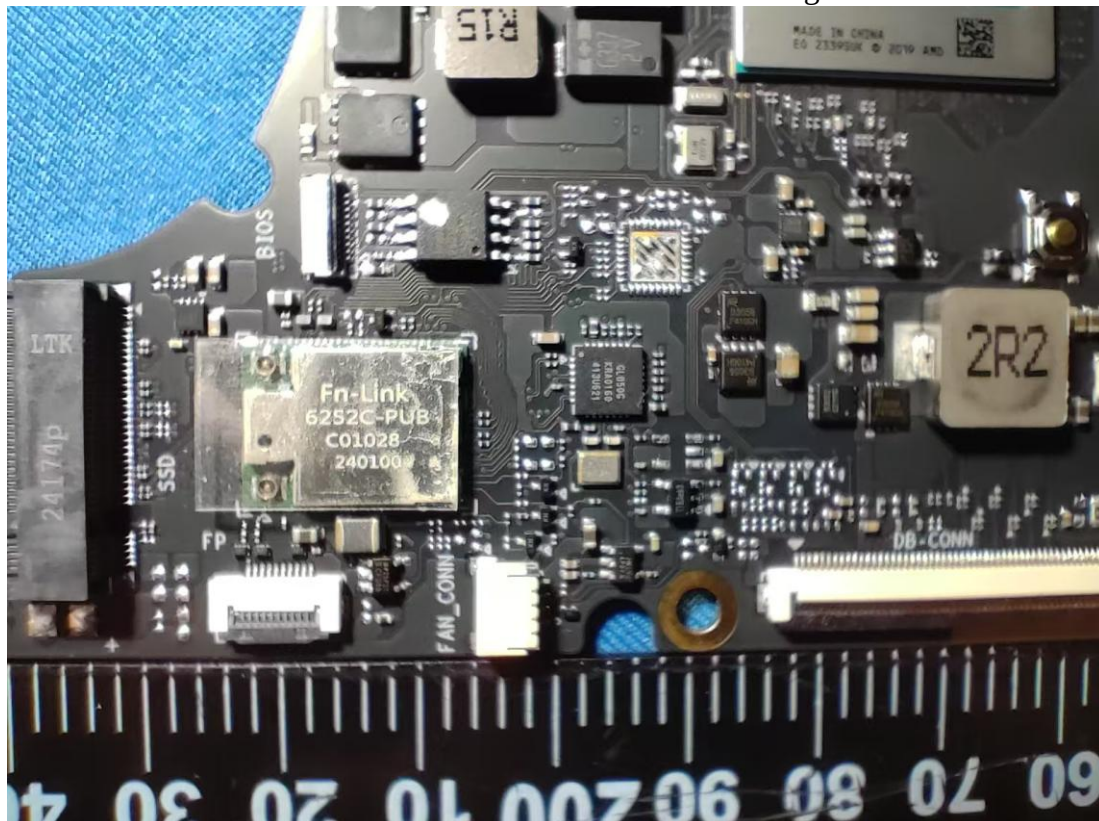


Figure 19
Inside Configuration of the EUT-RF Module

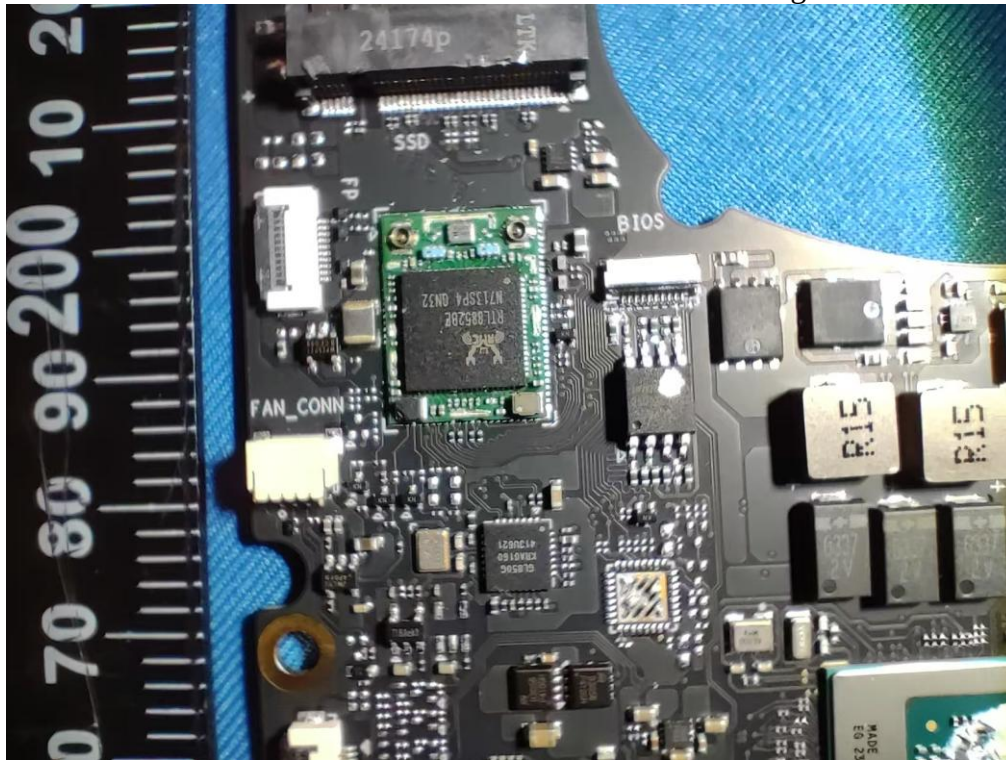

THE END