

Figure 7
Inside Configuration of the EUT

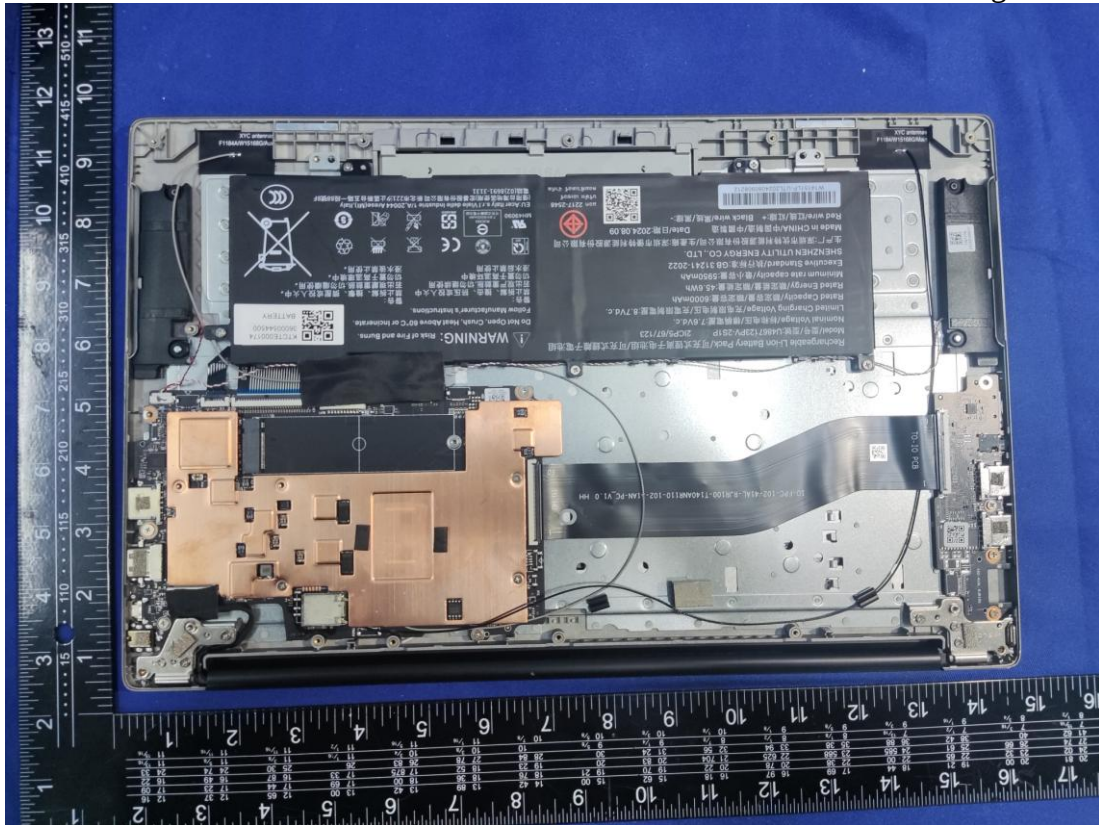


Figure 8
Inside Configuration of the EUT

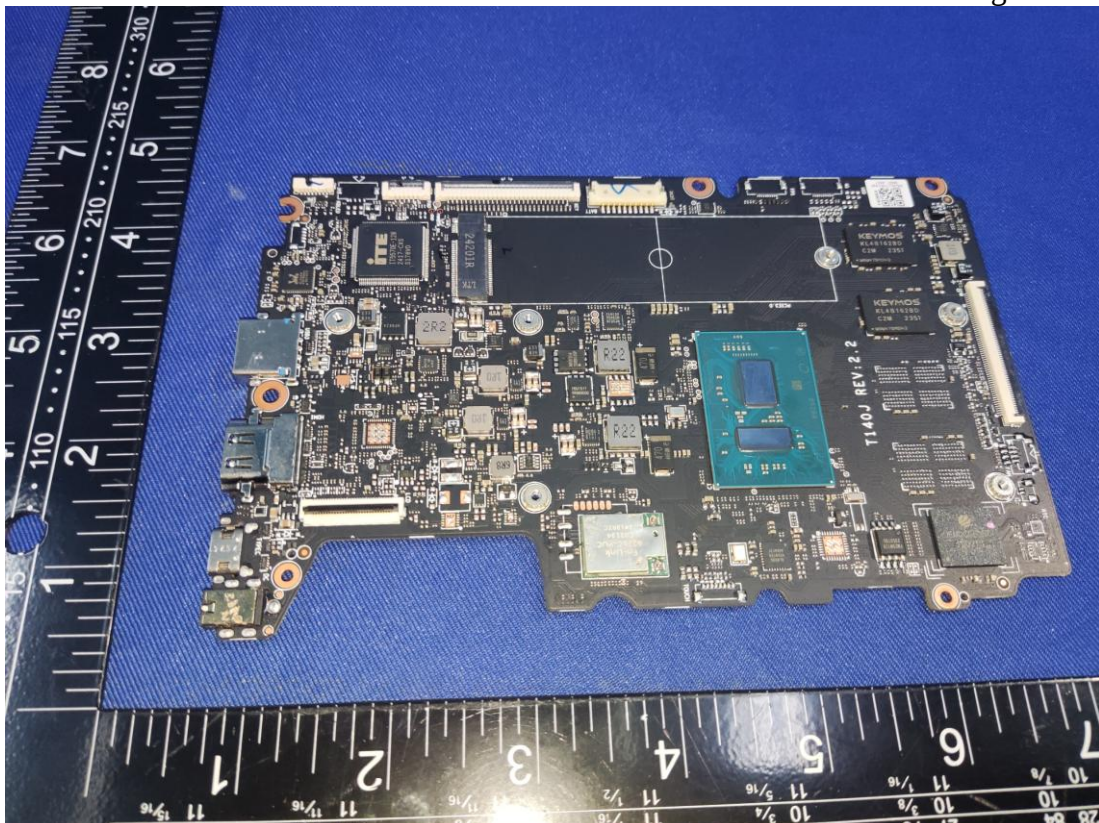


Figure 9
Inside Configuration of the EUT

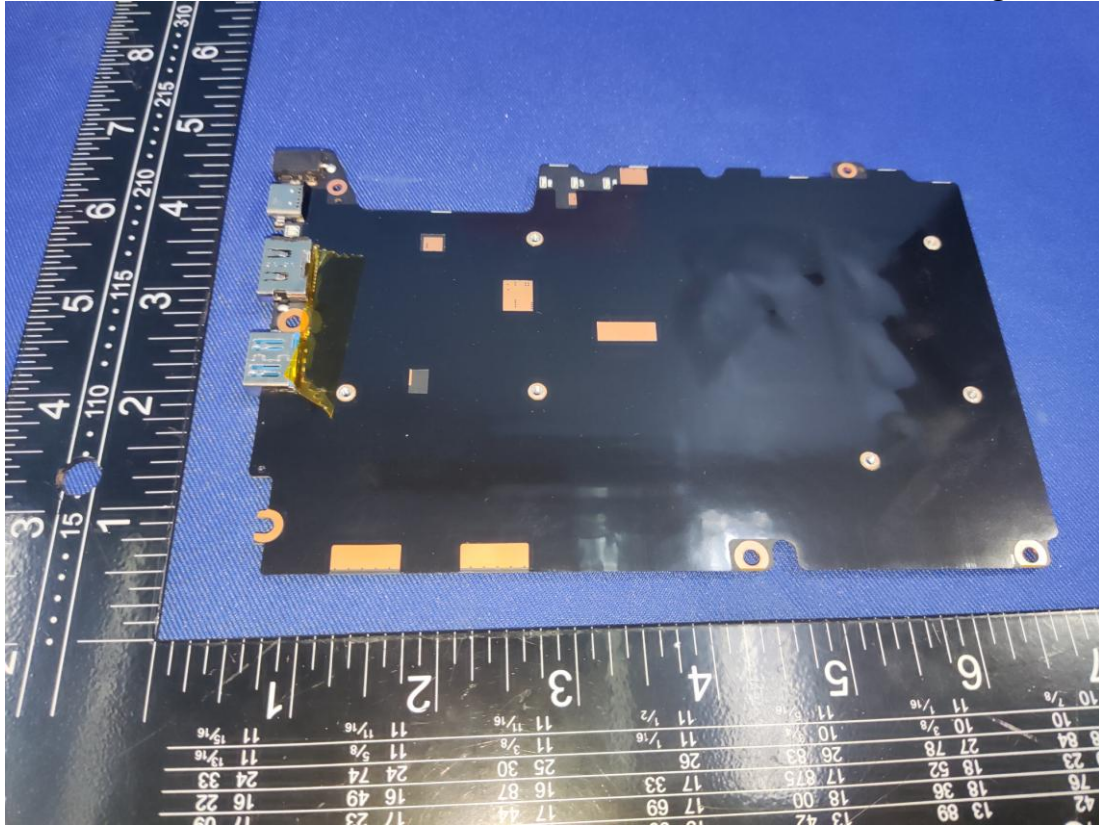


Figure 10
Inside Configuration of the EUT

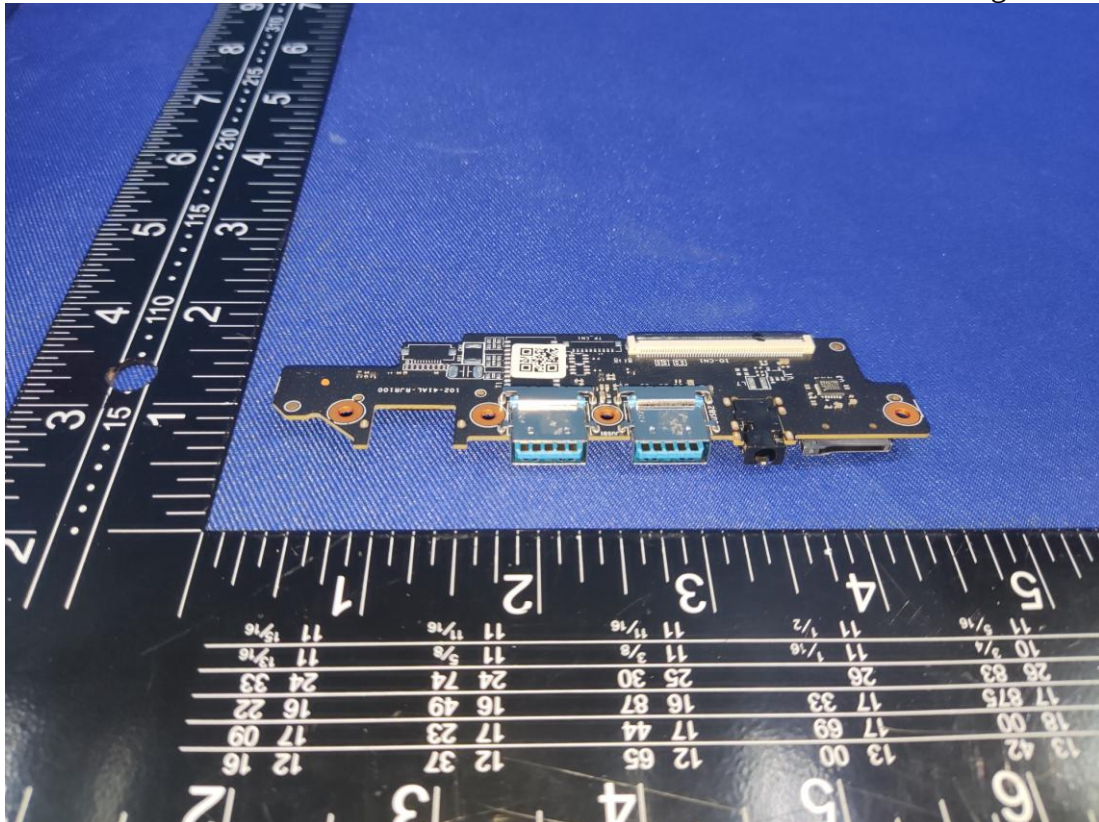


Figure 11
Inside Configuration of the EUT

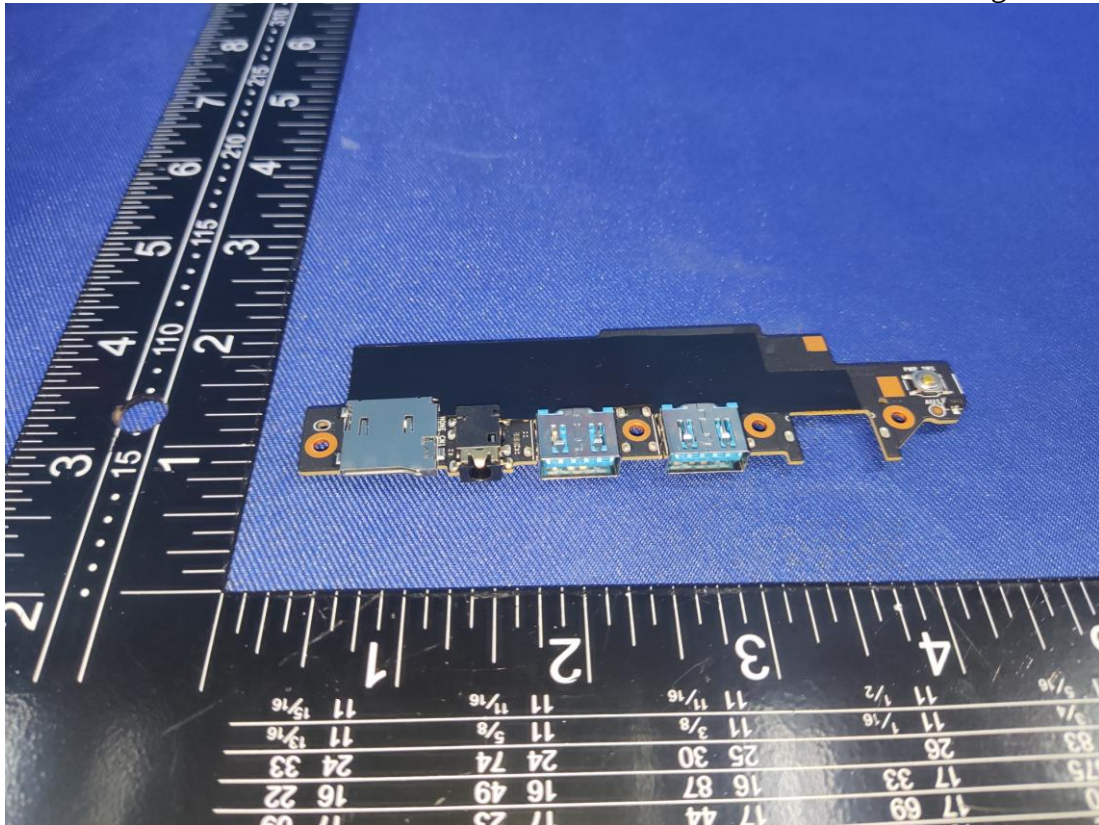


Figure 12
Inside Configuration of the EUT(WiFi 2.4G)



Figure 13
Inside Configuration of the EUT(BT & WiFi 5G)

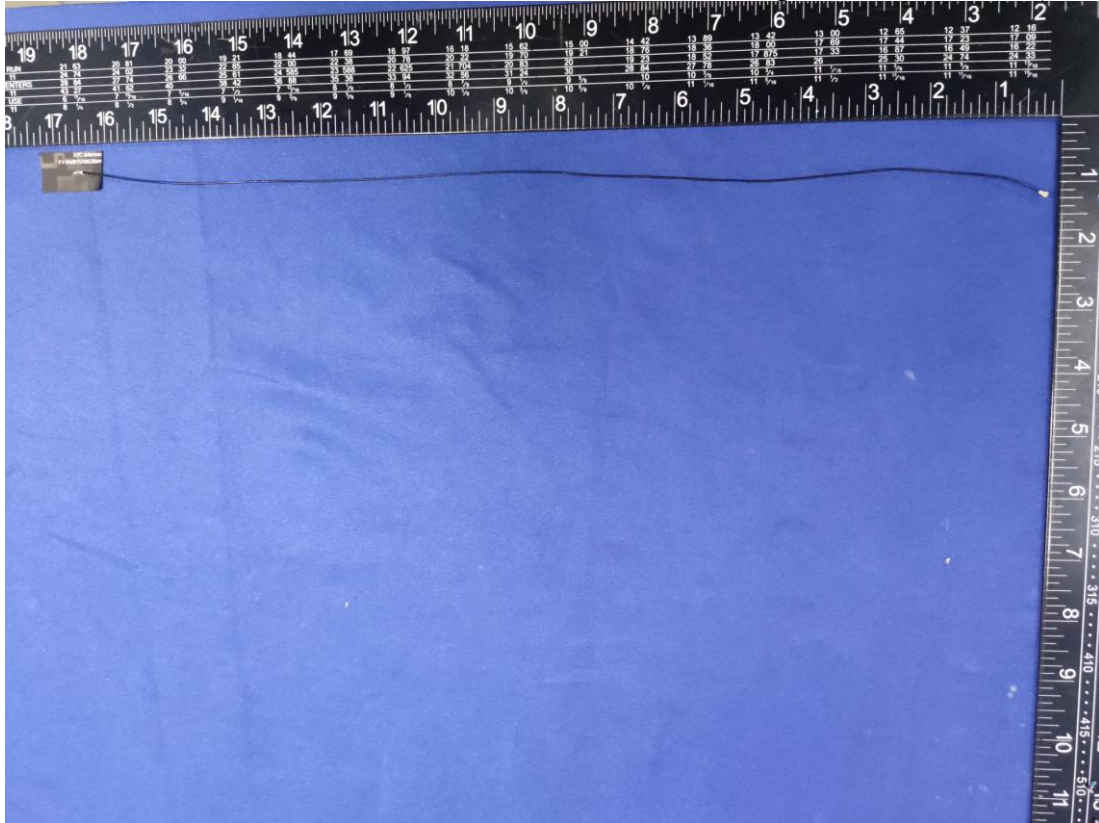


Figure 14
Inside Configuration of the EUT



Figure 15
Inside Configuration of the EUT



Figure 16
Inside Configuration of the EUT-RF Module

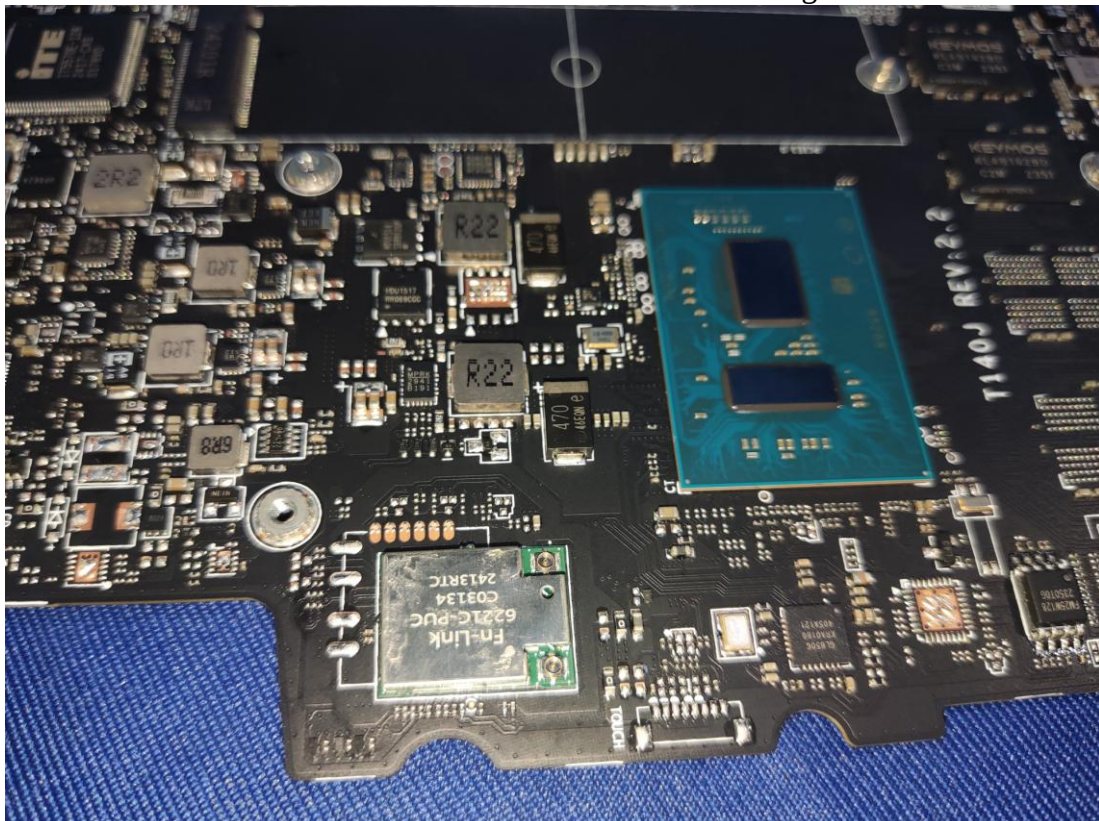


Figure 17
Inside Configuration of the EUT-RF Module

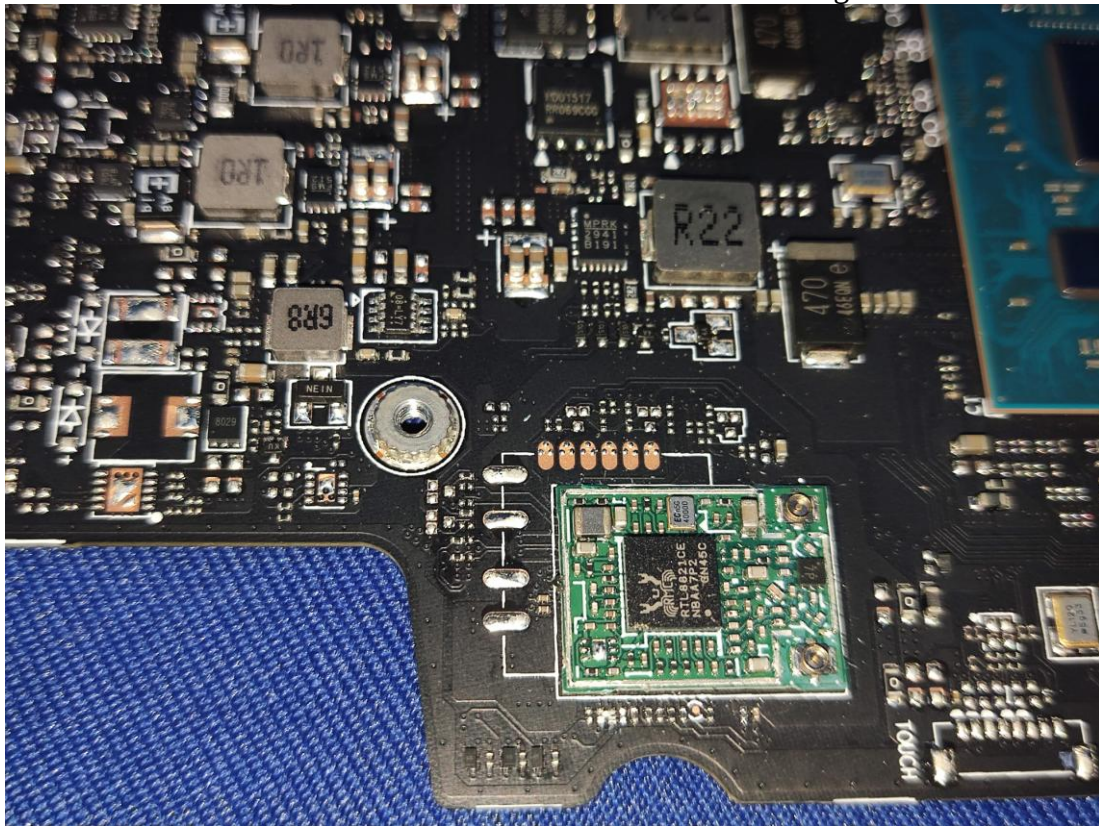


Figure 18
Adapter



Figure 19
Adapter



Figure 20
Adapter



THE END