

# TALK-LINE Walkie-Talkie

Krótkofałówka  
Walkie-Talkie  
(z zegarkiem)

(Watch)

2 x AAA batteries  
(not included)  
Watch button cell  
(no. AG13) included

Push-To-Talk  
button  
Power ON/OFF  
switch  
Time display  
Pull-out  
antenna

Model: 9434  
Ages for 3 & up

**WARNING:**  
CHOKING HAZARD - Small parts  
Not for children under 3 years.

KIDS.  
WAY

#### INSTALLATION OF BATTERIES

##### WALKIE TALKIE BATTERIES

Place the set face down on a flat surface. Release the screw to open the battery cover by a screw drier. Insert 2 size "AAA"/UM-4/LR3 or equivalent Alkaline Batteries as indicated inside the battery compartment. Close the battery cover and tighten the screw in the cabinet.

WATCH BATTERY

Place the set face down on a flat surface. Release the screw to open the battery cover by a screw drier. Insert 1 NO. AG13 button cell as indicated inside the battery compartment. Close the battery cover and tighten the screw in the cabinet.

#### BATTERY REQUIREMENTS

##### Walkie talkie batteries:

2 size "AAA"/UM-4/LR3 1.5V

##### Watch battery:

NO. AG13 button cell.

1. Rubber pull out antenna
2. Microphone
3. Watchband
4. Push to talk button
5. Set time button
6. Time mode select button
7. Speaker
8. Power On/Off



X 2

ALKALINE BATTERIES  
(NOT INCLUDED)



X 1

BUTTON CELL  
INCLUDED

#### NOTE

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Remove all the batteries when the toy is not in use for a long period.
- The packaging has to be kept since it contains important information.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).

#### NOTE

When the sound becomes weak, it is the time to replace the battery.

After use, slide the power switch to "Off" position, in order to save the battery power.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. Such modification could void the user's authority to operate the equipment.

The toy is not intended for children under 3 years old.  
Please retain this information for future reference.

KIDS.  
WAY



6 39353 09434 5

**TO RECEIVE**  
Turn the power on by sliding the power switch to "On" position. Your walkie talkie is now in receiving mode.

**TO TRANSMIT**  
With the power on, hold the talk down and speak into the microphone. To receive a message, release the hold on the talk button.

**TO SET TIME**  
Press down the time mode select button to select the setting mode, date, hour, minute.  
Press down the set time button to correct the present display.

MADE IN CHINA