

Plug-In Wireless Chime & Push with Flashing Light

Please retain these instructions for future reference.

Pack Contents

- Bell Push
- 100 ft. door chime
- 2 screws, wall anchors, adhesive pad
- 23A 12V Alkaline battery for the push

You Will Require

- Small flat blade screwdriver
- Small cross head screwdriver


Safety

Always follow the manufacturer's advice when using power tools and wear suitable protective equipment (e.g. safety goggles) when drilling holes.

Set Up The Bell Push

1. Open the bell push unit.

Carefully insert a small flathead screwdriver into slot A and twist gently. Lift away the front of the bell push to reveal the inside.

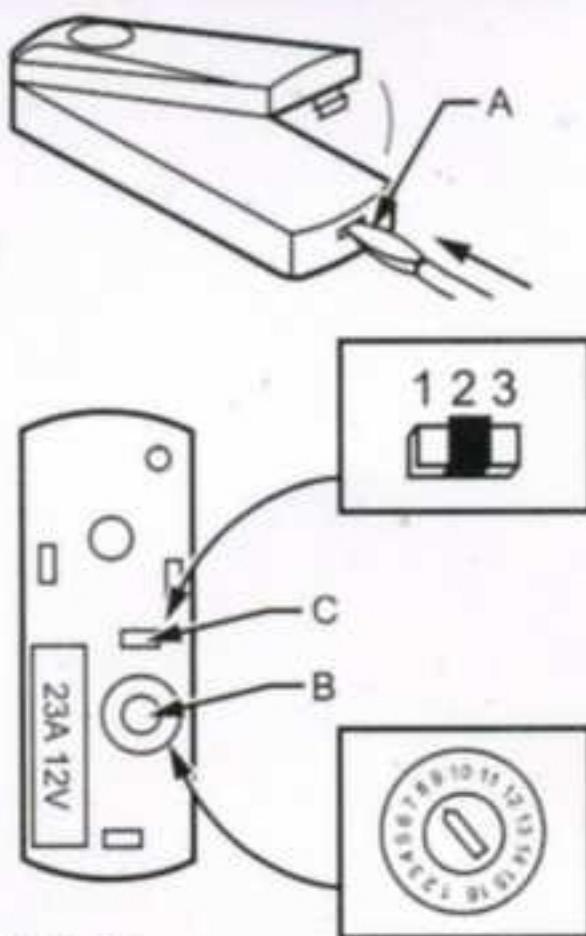

2. Set the bell push channel.

It is possible that your chime may be set off by a nearby wireless device. This could be a neighbor's bell push, for example. To prevent this interference, you may need to change to another "channel". Using a flat blade screwdriver, set rotary switch B to another position, 1 to 16. Make a note of the channel setting. Your chime will need to have its switch set to the same position – see Set Up The Chime.

3. Select a tune.

Switch C, in the bell push, selects the chime tune:


- 1=Westminster
- 2=Ding Dong (manufacturer's setting)
- 3=Ding



Mounting The Bell Push


Mount the bell push using the adhesive pad or by using the two screws, as follows:

1. Hold the bell push up against the door frame or wall where you want to mount it. (Ensure the push button is at the top).
2. Make a mark on the wall where the two screw holes will be.
3. Take away the bell push base and drill two holes, large enough to accommodate the wall plugs if necessary.
4. Screw the bell push to the wall through the mounting points D.
5. Insert the 12V 23A battery (included).
6. Refit the cover, locating the top catch first.

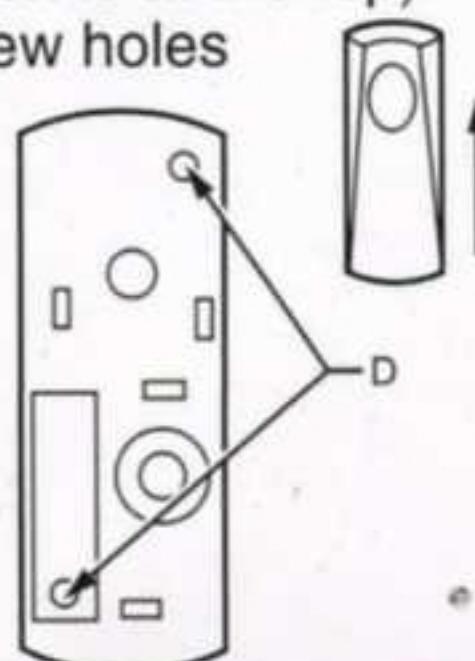

Set Up The Chime

1. Set the chime channel. Set rotary switch E on the chime to position 1 to 16, as with the bell push. The channel set on the chime must match the channel already set on the bell push in Set Up The Bell Push.

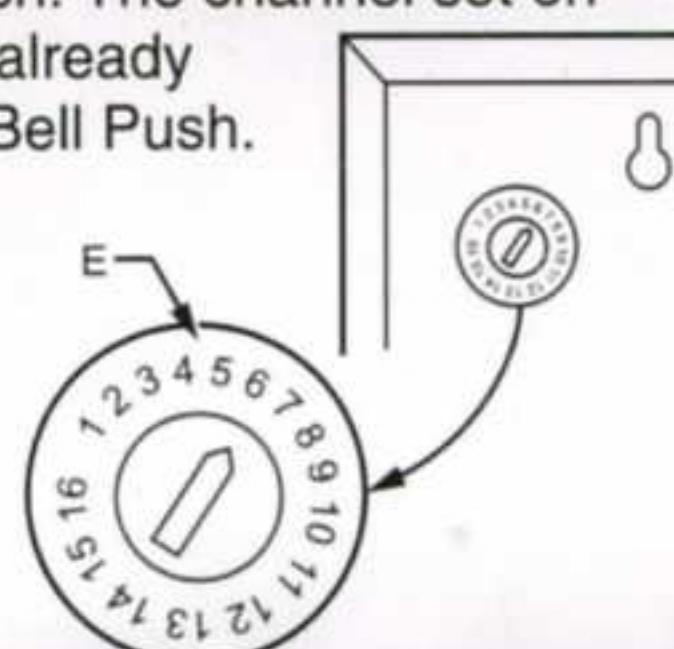

Test Your Door Chime

Test your wirefree door chime at the desired location in a receptacle.

1. Press the bell push.
2. The chime should sound.

Check the Troubleshooting section if the chime does not sound.

Troubleshooting

Chime doesn't sound when the bell push is pushed

- Check that the push battery has enough charge and is installed the right way. Note the + and - symbols molded into the back of the battery compartment.
- Check that the bell push channel switch and the chime channel switch are in the same position. See Set Up.
- Check that the distance between the bell push or the chime is not too great* (see front of pack).

Chime sounds without being pushed

- Check that there is not water in the bell push or the chime. This can damage the electronics.
- Check that a neighbor is not using the same channel for their chime or a similar wireless system. See Set Up.

*The stated transmission range if this product is measured in open field conditions. Walls, ceilings and metal structures (i.e. reinforced uPVC) will reduce the maximum range.

Disposal and Recycling

Batteries and waste electrical products should not be disposed of with household waste. Please recycle where these facilities exist. Check with your local authority or retailer for recycling advice.

Guarantee

Honeywell guarantees this product for 1 year from the date of purchase. Proof of purchase is required; this does not affect your statutory rights. If you require further information about your product, call the Honeywell helpline at 1-800-468-1502.

Declaration

Honeywell hereby declares that this product complies with Part 15 of the FCC rules and Industrial Canada standards. This device operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for regulatory compliance could void the users authority to operate the equipment.

Design reg. UK3015090,3015344;

EU 180823,176672;

China ZL200430006524.9, ZL200430050301.2

FCC Federal
Communications
Commission

Operating frequency: 345 MHz;
FCC and IC certified

Fréquence de service : 345 MHz
Certifié FCC et IC


©2007 Honeywell International Inc.
All Rights Reserved.
Golden Valley, MN 55422 U.S.A.
Engineered by Honeywell
Made in China

Tous droits réservés.
Conçu par Honeywell
Fabriqué en Chine
Todos los derechos reservados.
Diseñado por Honeywell
Hecho en China



<http://yourhome.honeywell.com>
1-800-468-1502

1-Year Limited Warranty
Garantie limitée de 1 an
1 año de garantía limitada

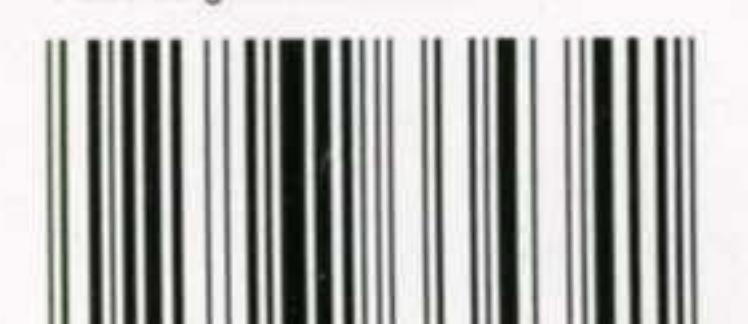

0 85267 33434 1
Proof of Purchase/Preuve d'achat/
Comprobante de compra
Model/Modèle/Modelo RCWL105A1003
69-2116EFS

6377

Instructions for wireless plug-in door chime (Product #51373SL)

1. Open the cover of the pushbutton with a flat screwdriver. A gentle twisting will remove the cover of the pushbutton.
2. Insert the supplied 1 X A23 batteries in the pushbutton, observe polarity, negative end is resting on the spring.
3. Locate a good position for the pushbutton next to the door. Do not mount on or next to a metal surface. Drill two 4.76mm holes and insert the wall plugs. Place the back plate in the right position and tighten the plate on wall with the screws supplied.
4. Position the pushbutton over the back plate so that the lip on the back plate engages into the slot. Make sure the rubber gasket is properly seated. Firmly press the pushbutton until it snaps over the back plate.
5. Plug the chime receiver into a 110/120V AC mains socket. Press the button on the pushbutton within 100 feet range and the plug-in door chime will sound and LED will flash.
6. There are 16 different house codes provided. They are factory preset to position 1. If experience of interference in your area, you can change the house code on both the receiver and pushbutton.