
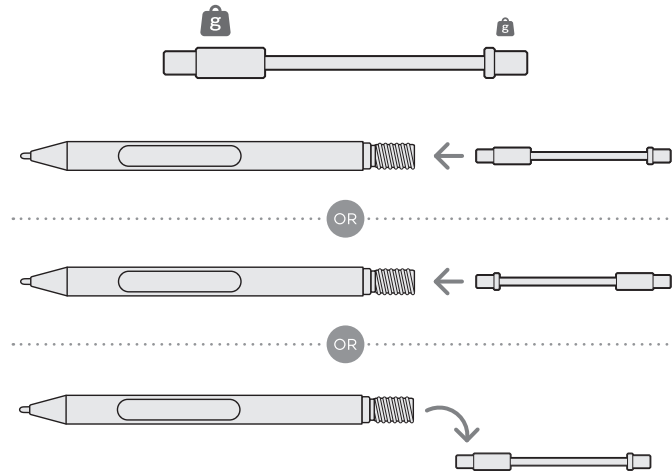
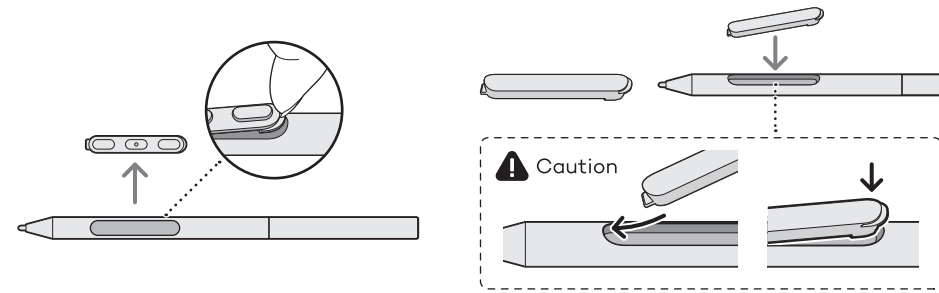
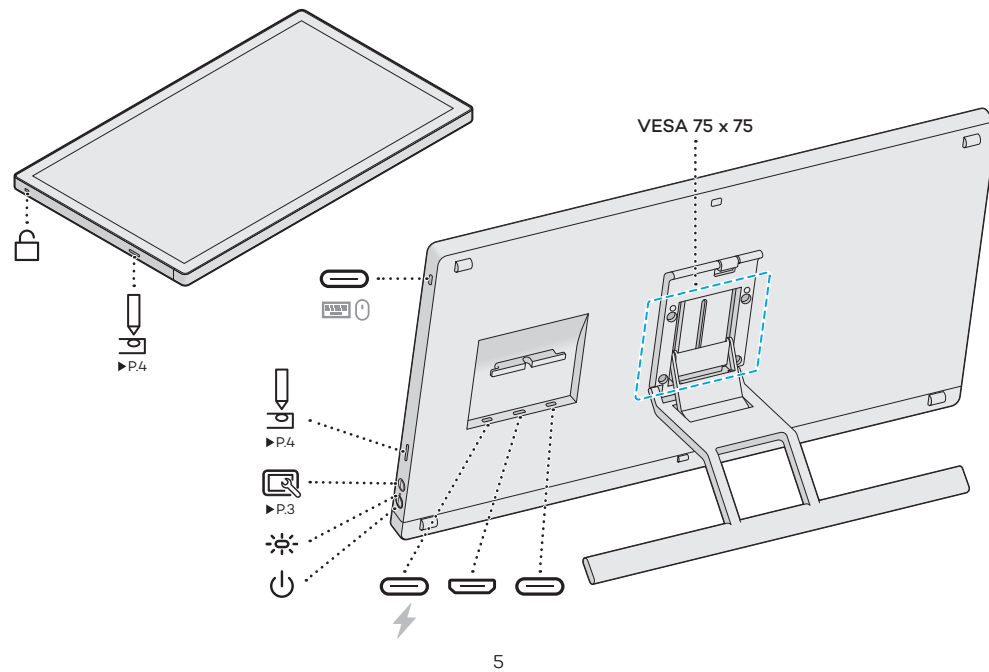
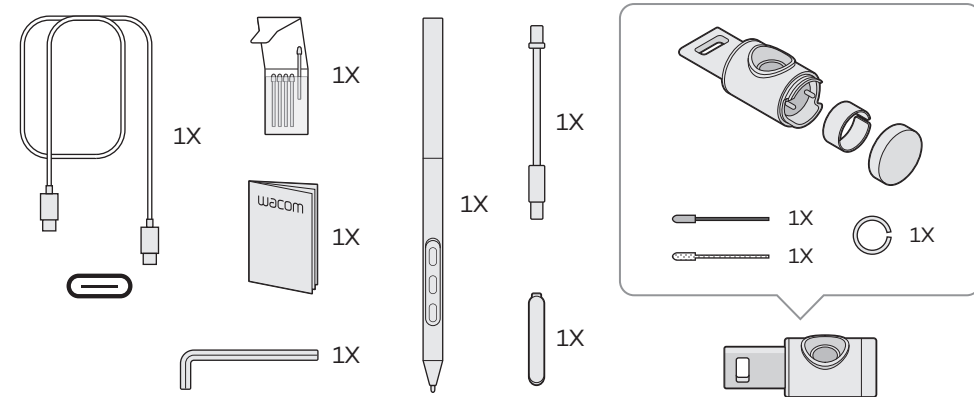
 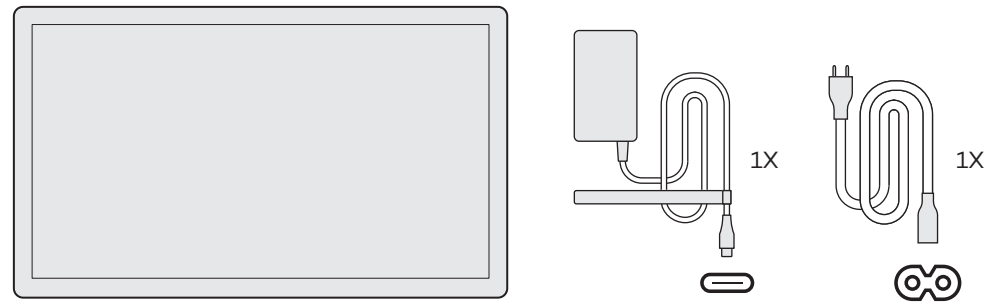




©2025 Wacom Co., Ltd. All rights reserved.
Wacom, Cintiq and their respective logos are trademarks and/or registered trademarks of Wacom Co., Ltd.
Windows is a trademark of Microsoft group of companies.
macOS is a trademark of Apple Inc.
DisplayPort™ is a trademark owned by the Video Electronics Standards Association (VESA®) in the United States and other countries.
HDMI is a trademark or registered trademark of HDMI Licensing Administrator, Inc.
USB-C is a trademark or registered trademark of USB Implementers Forum.

©2025 Wacom Co., Ltd. Tous droits réservés.

Wacom, Cintiq et leurs logos respectifs sont des marques commerciales et/ou des marques déposées de Wacom Co., Ltd.

Windows est une marque commerciale du groupe de sociétés Microsoft.

macOS est une marque commerciale d'Apple Inc.

DisplayPort™ est une marque commerciale détenue par Video Electronics Standards Association (VESA®) dans les États-Unis et/ou dans d'autres pays.

HDMI est une marque commerciale et/ou déposée de HDMI Licensing Administrator, Inc.


USB-C est une marque commerciale et/ou déposée d'USB Implementers Forum.

PRN-B362



PRN-B362

Wacom® Cintiq
Quick Start Guide

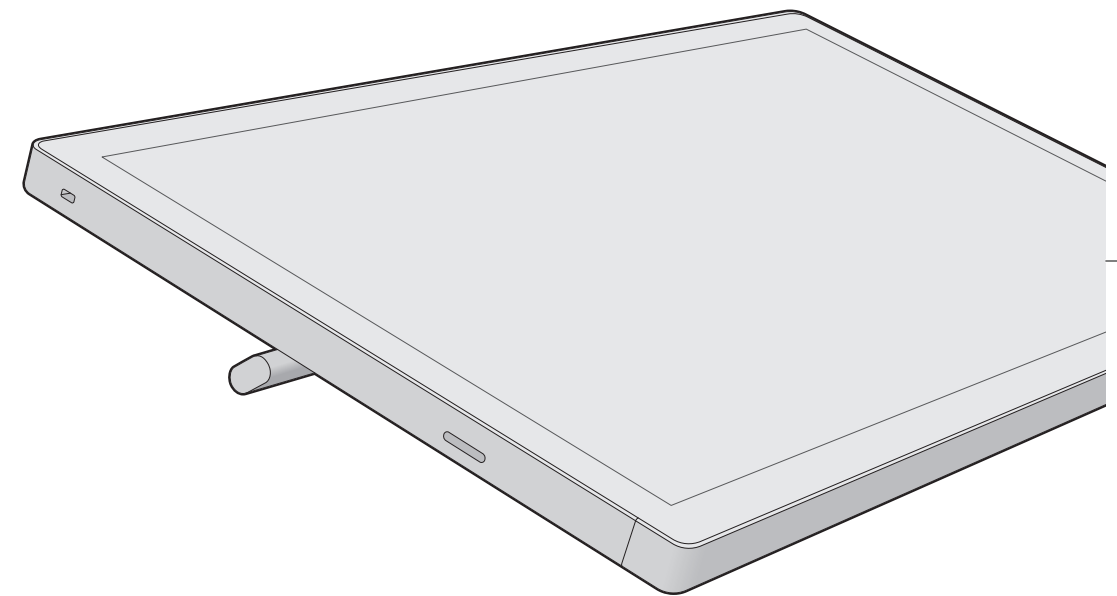


account.wacom.com




Getting Started

 
<https://Start.Cintiq24.Wacom.com>





1 USB-C to C

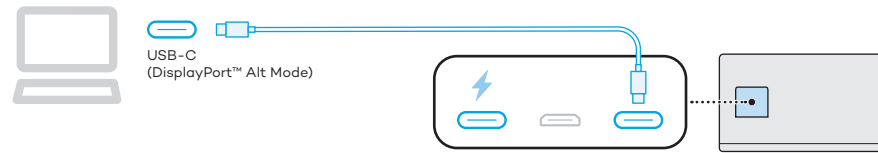


HDMI & USB-C to C

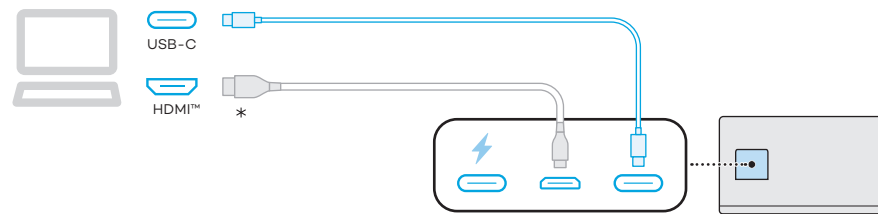

HDMI & USB-C to A


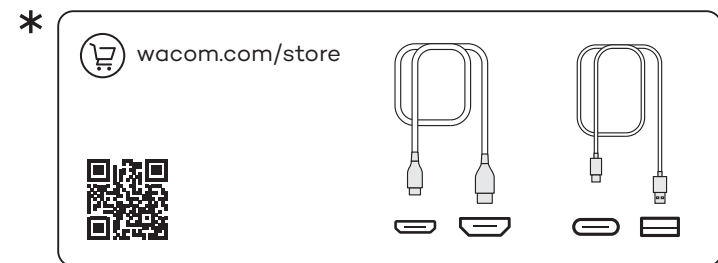
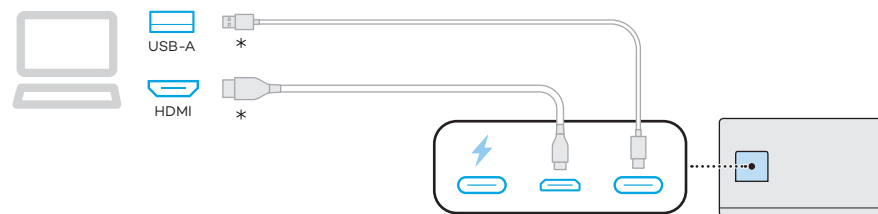


2






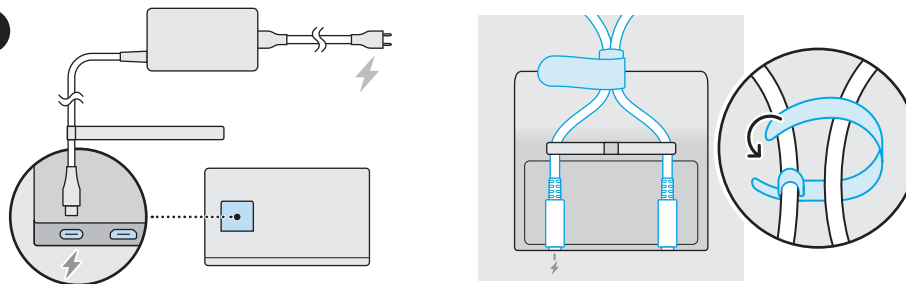


2

3

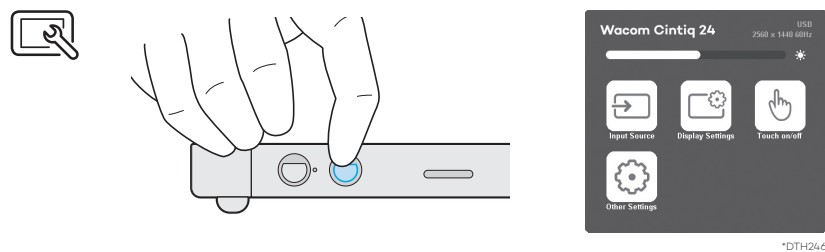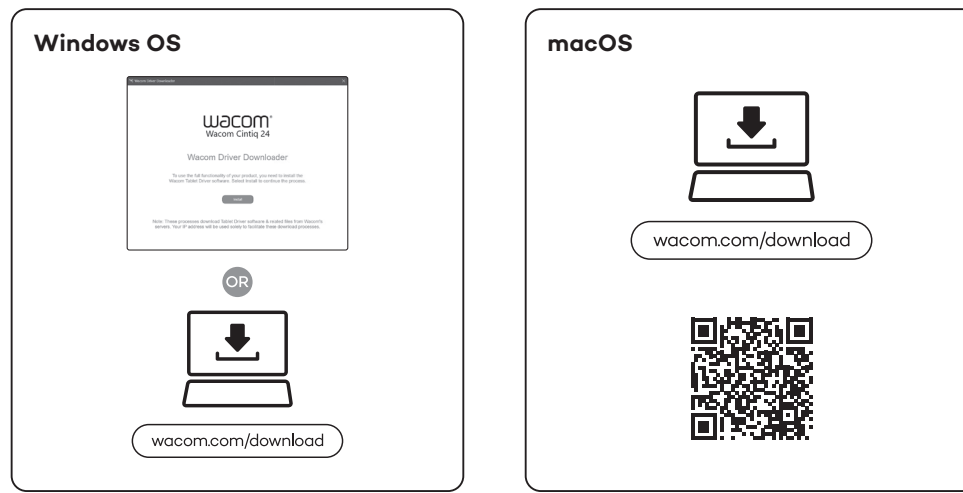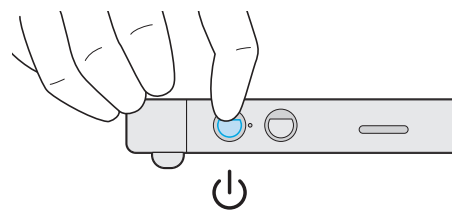

3

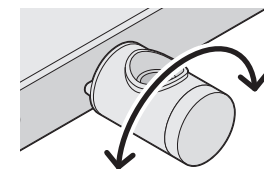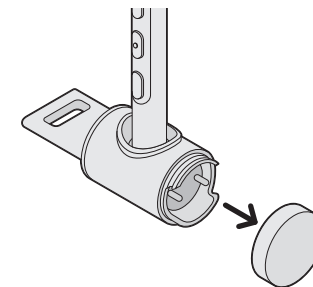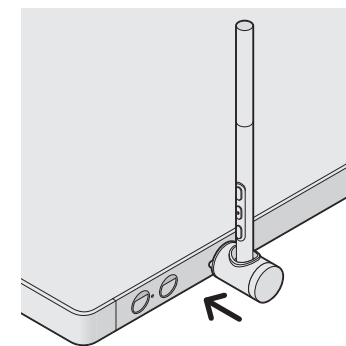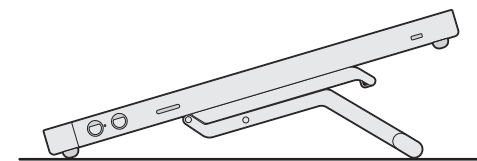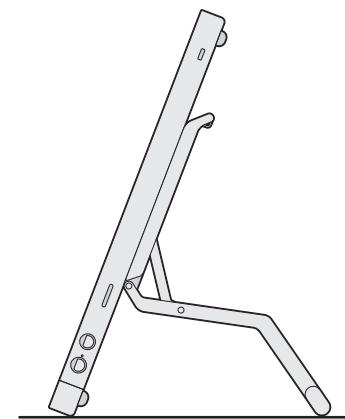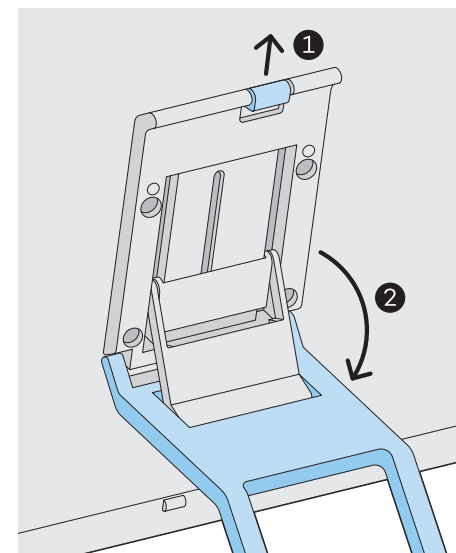

4