

7 MAINTENANCE

EXHIBIT # : 19

No maintenance is necessary except to check the tuning the frequency of the reference oscillator after 1 year and then every 3. year. (1 year on 8.33 kHz units).

7.1 Tuning of the reference oscillator

The frequency offset of the transmitter is checked with a frequency counter or a radio-testset.

The reference oscillator adjustment is available from the “CONFIG” menu. Use the “ \wedge ” and “ \vee ” keys to adjust the output frequency. When leaving the “CONFIG” menu, make sure to use the save command to store the new value into the EEPROM.