

7 **MAINTENANCE**

No maintenance is necessary except to check the tuning the frequency of the reference oscillator after 1 year and then every 3. year. (1 year on 8.33 kHz units).

7.1 Tuning of the reference oscillator

The frequency offset of the transmitter is checked with a frequency counter or a radio-testset.

The reference oscillator adjustment is available from the "CONFIG" menu. Use the "∧" and "∨" keys to adjust the output frequency. When leaving the "CONFIG" menu, make sure to use the save command to store the new value into the EEPROM.

TAC SYSTEMS INC.
FCC ID: I32TA-7450
JOB #: 162U0
EXHIBIT #: 13